 


2010 **370Z**

QUICK REFERENCE GUIDE



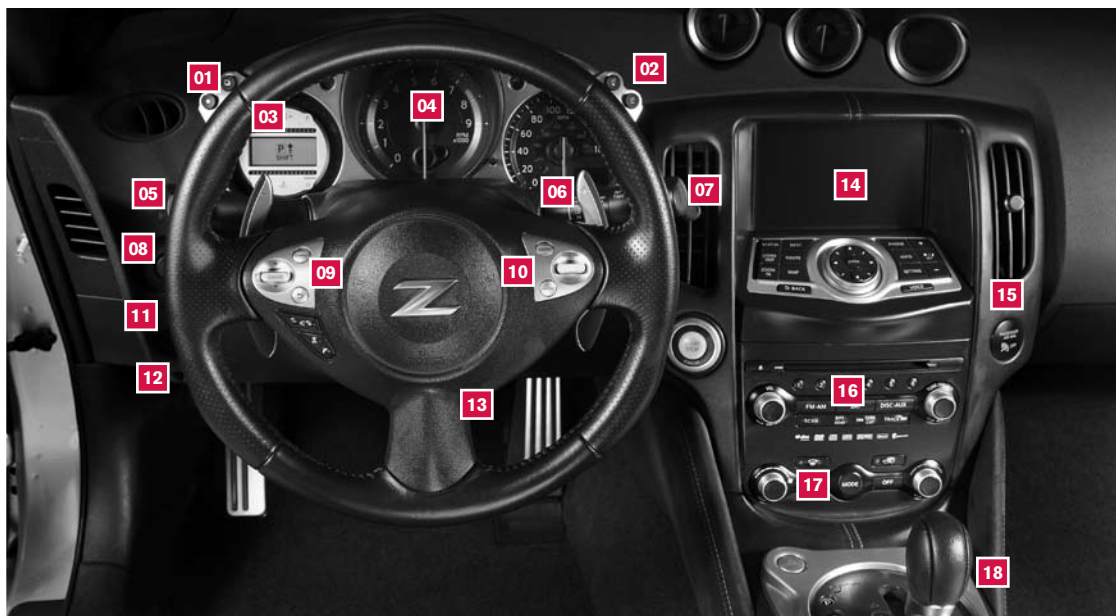

- | | | | |
|---|--|--|--|
| 01 ENTER/NEXT SWITCH | 06 PADDLE SHIFTER | 11 INTELLIGENT KEY PORT | 16 AUDIO SYSTEM |
| 02 INSTRUMENT BRIGHTNESS CONTROL* | 07 WINDSHIELD WIPER/WASHER SWITCH | 12 HOOD RELEASE* | 17 AUTOMATIC CLIMATE CONTROL |
| 03 VEHICLE INFORMATION DISPLAY* | 08 VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH | 13 STEERING WHEEL TILT ADJUSTMENT* | 18 SYNCHROREV MATCH™ MODE (S-MODE) SWITCH |
| 04 LOW TIRE PRESSURE WARNING LIGHT | 09 STEERING WHEEL SWITCHES FOR AUDIO CONTROL/BLEETOOTH* | 14 CONTROL PANEL DISPLAY | |
| 05 HEADLIGHT AND TURN SIGNAL CONTROL | 10 CRUISE CONTROL | 15 FRONT PASSENGER AIR BAG STATUS LIGHT | |

*See your Owner's Manual for more information.

NISSAN Intelligent Key™	2
Automatic Door Locks	3
Windshield Wiper/Washer Switch	4
Headlight and Turn Signal Control	4
RPM Shift Indicator (manual transmission only)	5
Steering Wheel Switches for Audio Control/Bluetooth® (if so equipped)	5
Cruise Control	6
Automatic Climate Control	6
FM/AM/XM® Radio with CD Player (if so equipped)	8
USB Interface (if so equipped)	9
Music Box Hard Drive (if so equipped)	9
Control Panel Display with Navigation System (if so equipped)	10
Clock Set/Adjustment	11
Trip Computer	11
Automatic Transmission (if so equipped)	12
6-Speed Manual Transmission (if so equipped)	13
SynchroRev Match™ Mode (S-MODE) For Manual Transmission (if so equipped)	13
Vehicle Dynamic Control (VDC) Off Switch	14
Front Passenger Air Bag Status Light	14
Tire Pressure Monitoring System (TPMS)	14
Seat Belt Warning Light and Chime	15
Fuel-Filler Door	15
Front Seat Adjustments	15
Power Windows	16
Rear Trunk/Hatch Opener Switch	16
Secondary Trunk/Hatch Release	16
Mirror Adjustment	17
Soft Top Operation (Roadster Model)	17
HomeLink® Universal Transceiver (if so equipped)	18
Bluetooth® Hands-free Phone System (Without Navigation System – if so equipped)	19
Bluetooth® Hands-free Phone System (Navigation System only – if so equipped)	22
NISSAN Voice Recognition System (Navigation System only)	25
Navigation System (if so equipped)	30

This easy-to-use Quick Reference Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner's Manual. The Owner's Manual contains more detailed information to help you better understand the important safety warnings, features, operation and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. NISSAN reserves the right to change specifications or design without notice and without obligation.

NISSAN INTELLIGENT KEY™

The NISSAN Intelligent Key™ allows you to lock or unlock your vehicle, open your trunk or rear hatch, and start the engine.

NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the door and hatchback/trunk lock/unlock function is approximately 31 in (80 cm).
- Locking the vehicle - Push any door handle Request Switch **01** once.
- Unlocking the vehicle - Push any door handle Request Switch **01** once. The corresponding door will unlock. Push the door handle Request Switch **01** again within 1 minute; all other doors will unlock.
- Open windows- Press the **01** button for longer than 3 seconds after the door is unlocked to open automatic windows. (The Intelligent Key is not equipped to close windows.)



OPENING THE TRUNK LID (Roadster Models Only)

- To open the trunk lid using the request switch, your Intelligent Key must be with you.
- Push the Request/Release Switch **02** under the trunk handle.
- Lift up on the trunk lid to fully open the trunk.



SILENCING THE HORN BEEP FEATURE

- To deactivate: Press and hold the **01** and **01** buttons for more than 2 seconds.
- To activate: Press and hold the **01** and **01** buttons for more than 2 seconds.

STARTING THE ENGINE

- Depress the brake pedal (Automatic Transmission) or clutch pedal (Manual Transmission).
- Push the ignition switch once to change to ACC mode and two times to start the engine.



TURNING THE ENGINE OFF

- Move the shift lever to the P (PARK) position (AT) or to the N (NEUTRAL) position (MT) and apply the parking brake.
- Push the ignition switch to turn the engine off.

NISSAN INTELLIGENT KEY™ BATTERY DISCHARGE


- If the battery of the Intelligent Key is almost discharged, the guide light of the Intelligent Key port blinks and the Intelligent Key insertion indicator is displayed in the vehicle information display.
- To start the engine under these circumstances, insert the Intelligent Key into the key port in the direction indicated until it latches into place.
- To remove the Intelligent Key from the port, push the ignition switch to turn the engine off and pull the Intelligent Key out of the port.
- The Intelligent Key port does not charge the Intelligent Key battery. If you see the low battery indicator, replace the battery in the Intelligent Key.



AUTOMATIC DOOR LOCKS

- All doors lock automatically when the vehicle speed reaches 15 MPH (24 km/h).
- All doors unlock automatically when the ignition is placed in the OFF position.

 
The automatic unlock function can be deactivated or activated. To deactivate or activate the automatic door unlock system, perform the following procedure:

1. Close all doors.
2. Place the ignition switch in the ON position.
3. Within 20 seconds of performing Step #2:
 - Push and hold the power door lock switch to the  position (UNLOCK) for more than 5 seconds.
4. When activated, the hazard indicator will flash twice. When deactivated, the hazard indicator will flash once.
5. The ignition switch must be placed in the OFF and ON position again between each setting change.

When the automatic door unlock system is deactivated, the doors do not unlock when the ignition is placed in the OFF position. To unlock the door manually, use the inside lock knob or the power door lock switch (driver's or front passenger's side).

WINDSHIELD WIPER/WASHER SWITCH


- The ignition must be in the ON position to activate the windshield wipers.
- Move the lever to the following positions to operate the windshield wipers:
 - 1A** Intermittent (**INT**) – Front wipers operate intermittently and can be further adjusted by twisting the time control ring **1B**.
 - 02** Low Speed (**LO**) – Continuous low-speed operation of front wipers.
 - 03** High Speed (**HI**) – Continuous high-speed operation of front wipers.
 - 04** Mist (**MIST**) – Lift the lever up for one sweep of the front wipers.
- Pull the lever toward you to activate front washer fluid and several sweeps of the wipers.

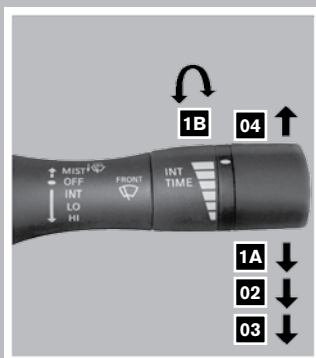

HEADLIGHT AND TURN SIGNAL CONTROL

HEADLIGHT CONTROL SWITCH

 - Turn the headlight control switch **01** to the position to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the headlight control switch **01** to the position to turn on the headlights. All other lights remain on.

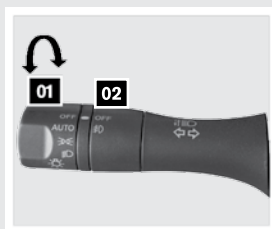


FOG LIGHT OPERATION (if so equipped)

NOTE: The headlights must be on and the low beams selected for the fog lights to operate.

- Turn the switch (inside collar) **02** to the position to turn on the fog lights.
- Turn the switch (inside collar) **02** to the OFF position to turn off the fog lights.

HIGH BEAM

  
- Push the headlight control switch forward **A** to select the high beam function. The blue indicator light illuminates. Pull the headlight switch back to the original position to select the low beam. The blue indicator light goes off.
- Pull and release the headlight control switch **B** to flash the headlight high beams on and off.

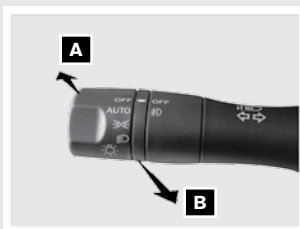







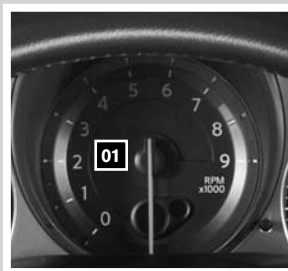

RPM SHIFT INDICATOR (manual transmission only)

The engine RPM shift indicator light (REV) is located in the tachometer **01**. When driving, it indicates 'shift point', or time to up-shift.

- Set or deactivate the engine RPM shift point using the trip computer display.
- REV indicator will flash when the engine speed is within 500 RPM of the set shift point.
- REV light will illuminate when the engine speed matches the set shift point RPM.



STEERING WHEEL SWITCHES FOR AUDIO CONTROL/BLUETOOTH® (if so equipped)

- Press the **SOURCE** button to turn the radio system on.
- To choose AM, FM, XM® (if so equipped), CD/DVD (if so equipped), Music Box™ (if so equipped), USB/iPod®* (if so equipped), Bluetooth® Audio (if so equipped) or AUX, press the **SOURCE** button repeatedly.
- The **ENTER**  switch can be used to perform the following:
 - Push the **ENTER**  switch for less than 1.5 seconds to change to a preset station.
 - Push and hold the **ENTER**  switch for more than 1.5 seconds to seek the next or previous broadcasting radio station.
 - Push the **ENTER**  switch up or down while playing a CD, Music Box™ (if so equipped) or iPod® (if so equipped) for less than 1.5 seconds to change tracks.
 - If the vehicle is equipped to play an iPod®, push and hold the **ENTER**  switch up or down for more than 1.5 seconds to fast forward or rewind.
 - If the vehicle is equipped with the Music Box™, push and hold the **ENTER**  switch up or down for more than 1.5 seconds to change between playlists.
- Push the volume control switch **+** or **-** to increase or decrease the volume.
- Press the  button to activate the Voice Recognition System.
- If a compatible Bluetooth®-enabled cellular phone has been connected to the vehicle and is selected, push the  switch to initiate, answer or hang up a call.



*iPod® is a trademark of Apple Inc., registered in the U.S. and other countries.

CRUISE CONTROL

- To activate the cruise control, push the **ON-OFF** switch. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch and release.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch. When the vehicle attains the speed you desire, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch. Release the switch when the vehicle slows to the desired speed.
- To cancel the cruise control, push the **CANCEL** switch or tap the brake pedal.
- To resume a preset speed, push and release the **ACCEL/RES** switch. The vehicle returns to the last set cruising speed when the vehicle speed is over 25 MPH (40 km/h).
- To turn off the cruise control, push the **ON-OFF** switch. The **CRUISE** indicator light in the instrument panel will go out.



AUTOMATIC CLIMATE CONTROL

01 TEMPERATURE CONTROL DIAL/AUTO MODE


- Press the temperature control dial **01** to activate auto mode. Turn the temperature control dial **01** to the desired temperature. **AUTO** and the selected temperature will be displayed on the control panel display. This allows the fan speed, air flow distribution and temperature to be automatically maintained at the selected temperature.
- To disable auto mode, press the fan speed control dial **02**, press the air flow **MODE** control button **03** or press the front defroster control button **04**.


02 FAN SPEED CONTROL DIAL


- Turn the dial to the left to decrease fan speed or turn the dial to the right to increase fan speed.
- Press the dial in to turn the air conditioner on and off. When the air conditioner is on, the indicator light below the fan speed control dial **02** will turn on.


03 AIR FLOW/MODE BUTTON

Press the **MODE** button **03** to select the following air flow outlets. The selected mode will appear on the control panel display.

 Air flows from the center and side vents.


 Air flows from the center, side, and foot vents.

 Air flows mainly from the foot vents.


 Air flows from the defroster and foot vents.

 Air flows mainly from the defroster vents.



04 DEFROSTING/DEMISTING FRONT AND SIDE WINDOWS

- Press the defroster control button  to turn the system on. The air conditioner automatically turns on when the defroster mode is selected at outside temperatures above 23°F (-5°C).
- Turn the temperature control dial **01** left or right to set the desired temperature.
- Turn the fan speed control dial **02** all the way to the right to quickly remove ice from the outside of the windows.

05 DEFROSTING REAR WINDOW

- Push the rear window defroster switch  on.
- Push the switch again to manually turn the defroster off.
- This function automatically turns off after approximately 15 minutes.

06 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate air inside the vehicle. The indicator light will turn on.
- Press the air recirculation button  again to switch the intake to outside air. The indicator light will turn off.
- The air recirculation mode cannot be selected if the air flow mode control is in the defroster position.

07 OFF BUTTON

- Press the **OFF** button **07** to turn the system off.



FM/AM/XM[®]* RADIO WITH CD PLAYER (if so equipped)

01 EJECT BUTTON

- Press the button; the CD will eject.

02 STATION PRESET BUTTONS

To store a radio station in a preset, you must first select FM, AM or XM[®]* (if so equipped) radio band by pressing the **AM-FM** or **SAT** (if so equipped) button and tuning to the desired FM, AM or XM[®] station. Then press and hold the desired station preset button for at least 2 seconds. When the preset indicator illuminates, a beep will sound, indicating memorization is complete. To retrieve a previously set station, select the memory bank where the preset was set, then press the corresponding station preset button.

03 FM/AM BUTTON

Press the **FM/AM** button to change the band to either AM, FM1 or FM2 radio stations.

04 SAT BUTTON

Press the **SAT** button to change the band to either XM1, XM2 or XM3 channels.

05 DISC-AUX BUTTON

Press the **DISC-AUX** button to cycle through the USB device (including iPod[®]), CD or DVD, Music Box[™], Bluetooth[®] Audio Device and the auxiliary input jacks. As you change from one audio source to another, the previous audio source will be stopped. The USB and auxiliary input jacks are located in the center console.

NOTE: You may need to adjust the volume on any compatible device plugged into the auxiliary audio input jack to find the most desired sound level of the audio system.

06 TUNE/FOLDER AND AUDIO KNOB (Bass, Treble, etc.)

- To manually tune the radio, turn the **TUNE/FOLDER** knob. If playing a CD that is formatted with MP3/WMA folders, turn the **TUNE/FOLDER** knob to scroll through the available folders.
- Adjust the Bass, Treble, Balance and Fade by pushing the **AUDIO** knob until the desired mode appears in the display. Then turn the **TUNE/FOLDER** knob to adjust to the desired level.

07 SCAN BUTTON

Press the **SCAN** button while listening to a radio station (FM, AM or XM[®]). The radio will stop at each station that has significant signal strength for 5 seconds. Pressing the **SCAN** button again during this 5-second period will stop scan tuning and the radio will remain tuned to that station. If the **SCAN** button is not pressed within 5 seconds, scan tuning moves to the next station.

08 RDM/RPT BUTTON

To change the play pattern of the CD, iPod® Player (if so equipped) or Music Box Hard Drive audio system (if so equipped), press the **RDM/RPT** button.

09 SEEK/CAT AND TRACK BUTTONS

- To skip quickly through each broadcasting station, press the **SEEK/CAT** or the **TRACK** button.
- To skip from one track to another on a CD, press the **SEEK/CAT** or the **TRACK** button. Each time the button is pressed, the CD will advance or skip back one track.
- When the **SEEK/CAT** or the **TRACK** button is pressed and held while a CD is playing, it will rewind or fast forward. When the button is released, the CD will play at normal speed.

*XM® Satellite Radio is only available on vehicles equipped with optional XM® Satellite Radio subscription.

USB INTERFACE (if so equipped)

- The **USB** input jack is located in the center console. Remove the protective cover from the **USB** jack, then insert the USB device into the jack. When a storage device is plugged into the jack, such as an iPod®, compatible audio files on the storage device will be played through the vehicle's audio system.
- Press the **AUX** button to play devices plugged into the **USB** jack. Depending on how the audio files are encoded, information about the audio files (Folder, Song, Artist, Track Number and Number of Total Tracks in the Folder) being played will be shown on the display screen of the vehicle.

MUSIC BOX HARD DRIVE (if so equipped)

The Music Box Hard Drive can store songs from CDs being played. The system has a 9.3 gigabyte (GB) storage capacity and can record up to 200 hours (approximately 2,900 songs).

RECORDING CDS

The system will not record MP3 or WMA files, only regular CDs.

1. Turn the audio system on and insert a CD.
2. Select the "Start REC" key. The system starts recording and playing the first track on the CD and REC CD appears on the screen.



PLAYING RECORDED SONGS

Select the Music Box™ audio system by using one of the following methods:

- Push the **SOURCE** select switch on the steering wheel repeatedly.
- Press the **AUX** button repeatedly.
- Give voice commands.



SEEK/CAT AND TRACK BUTTONS

- Press the **SEEK/CAT** or **TRACK** buttons while a track is playing; the next track or the beginning of the current track will play.
- Press and hold the **SEEK/CAT** or **TRACK** button for more than approximately 1.5 seconds; the track will play while rewinding or fast forwarding. When the **SEEK/CAT** or **TRACK** button is released, the track will return to normal playing speed.

CONTROL PANEL DISPLAY WITH NAVIGATION SYSTEM (if so equipped)

INFO BUTTON

When the **INFO** button is pressed, the following information modes will display on the screen:

- Weather and Traffic*
- Fuel Economy (Distance to Empty, Average Fuel Economy, Fuel Economy History)
- Maintenance (Set up to four maintenance intervals)



MAINTENANCE ITEMS

You can set up to four different maintenance interval items. To display the setting of the maintenance interval, choose an item, then select the "Reminder" key using the NISSAN controller and press the **ENTER** button. To set the maintenance interval, select the "Interval" key using the NISSAN controller and press the **ENTER** button. Use the NISSAN controller to change the interval and press the **BACK** button to accept the changes. To reset the maintenance interval, select the "Reset Distance" key using the NISSAN controller and press the **ENTER** button.

DISPLAY SCREEN SETTINGS

The **SETTINGS** screen will appear when the **SETTING** button is pressed. Select the "Display" key using the NISSAN controller and press the **ENTER** button to choose from various display screen options. The "Display" key will allow you to adjust the information shown on the display screen, such as brightness or contrast.

*XM NavWeather® and XM NavTraffic® is only available on vehicles equipped with optional XM® satellite subscription service.

CLOCK SET/ADJUSTMENT


NAVIGATION SYSTEM ONLY (if so equipped)

Press the **SETTING** button, then select the "Clock" key using the NISSAN controller and press the **ENTER** button to access the following clock settings:

 
- On-screen Clock – When this item is turned to ON, a clock is always displayed in the upper right corner of the screen. The clock is automatically adjusted by the GPS system.
- Clock Format (24h) – When this item is turned ON, the 24-hour clock is displayed. When the item is turned OFF, the 12-hour clock is displayed.
- Offset (hour)/(min) – Adjust the time by increasing or decreasing per hour or per minute.
- Daylight Savings Time – Turn this item to ON for daylight savings time application.
- Time Zone – Choose the time zone.



TRIP COMPUTER



With the ignition in the ON position or the vehicle running, you can select an item by pressing the  button **01** on the instrument panel. The following items can be selected:

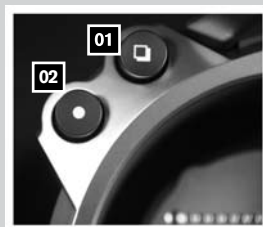- Current fuel consumption
- Average fuel consumption and speed
- Elapsed time and trip odometer
- Distance to empty
- Outside air temperature
- Setting
- Warning Check



TO OPERATE THE TRIP COMPUTER

 
Place the ignition in the ON position. Then press the buttons.

- Press the  button **01** to scroll through each mode.
- Press the  button **02** to reset or adjust the various mode selections.

AUTOMATIC TRANSMISSION (if so equipped)

MANUAL SHIFT MODE

- When the shift lever is shifted from the D (DRIVE) position to the manual shift gate, the transmission enters the manual shift mode.
- In the manual shift mode, the shift mode and the shift range is displayed on the position indicator in the instrument cluster **01**.

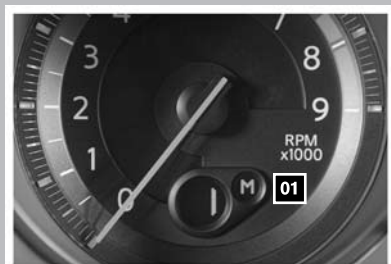


WHEN SHIFTING UP

Move the shift lever to the + (up) side or pull the right-side paddle shifter on the steering wheel **B**. (Shifts to higher range)

WHEN SHIFTING DOWN

Move the shift lever to the - (down) side or pull the left-side paddle shifter on the steering wheel **A**. (Shifts to lower range)

 - In manual shift mode, the transmission automatically shifts down to M1 (1st) before the vehicle comes to a stop. When accelerating again, it is necessary to shift to the desired range.
- Moving the shift lever rapidly to the same side twice will shift the ranges in succession.

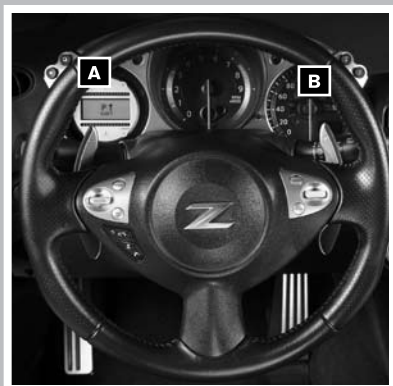

AUTOMATIC SHIFT MODE

When canceling the manual shift mode, return the shift lever to the D (DRIVE) position. The transmission returns to the normal driving mode.

6-SPEED MANUAL TRANSMISSION (if so equipped)

To change gears, depress the clutch pedal fully and shift into the appropriate gear, then release the clutch pedal slowly.

- Start the vehicle in 1st gear and shift into 2nd, 3rd, 4th, 5th and 6th gear according to the vehicle speed.
- On the 6-speed manual transmission, you can shift into R (REVERSE) by:
 - Stopping the vehicle completely.
 - Move the shift selector into the N (NEUTRAL) position.
 - Move it to the right and depress the shift selector, then downward into the R (Reverse) position.



SYNCHROREV MATCH™ MODE (S-MODE) FOR MANUAL TRANSMISSION (if so equipped)

The SynchroRev Match™ Mode (S-MODE) automatically adjusts the engine speed by controlling the engine throttle. This helps provide accurate engine speed control that will help achieve smooth gear shifting and reduces shift shock on clutch engagement.

WHEN DOWNSHIFTING

- The engine speed is automatically increased to the target engine speed before the clutch is engaged.

WHEN UPSHIFTING

- The engine speed is automatically kept during and after the engine speed lowers to the target engine speed.

DEACTIVATING THE S-MODE SYSTEM

- To deactivate, push and hold the **S-MODE** switch for more than 1 second. The S-MODE indicator will **01** turn off.
- To reactivate, push the **S-MODE** switch. The S-MODE indicator on the instrument cluster will show "S" **01** .



VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH

In an emergency, VDC can help you stay on your steered path. The system uses various sensors to monitor driver inputs and vehicle motion. If your vehicle begins to skid or slide, this advanced system can reduce engine output and apply individual brake pressure to specific wheels to help you maintain control. VDC may need to be temporarily shut off if you are trying to free a vehicle stuck in snow or mud. VDC does not prevent accidents due to careless or dangerous driving techniques. Always be mindful of vehicle speed and driving conditions.



- Push the Vehicle Dynamic Control (**VDC**) **OFF** switch to deactivate the VDC system. The **VDC OFF** light will illuminate in the instrument panel gauge area.
- Push the Vehicle Dynamic Control (**VDC**) **OFF** switch again to activate the VDC system. The **VDC OFF** light in the instrument panel gauge area will turn off.
- The VDC system is active while the vehicle is running until the switch is pushed to turn off.

FRONT PASSENGER AIR BAG STATUS LIGHT

This vehicle is equipped with the Nissan Advanced Air Bag System. Under some conditions, depending on the type of occupant or object detected in the front-passenger's seat by the occupant classification sensor, the front passenger air bag is designed to automatically turn **OFF**. When the front passenger air bag is **OFF**, the front passenger air bag status light will illuminate.* For example:



- When the system detects that the front-passenger's seat is occupied by a small adult, child or child restraint as outlined in the Owner's Manual, the **OFF** **will illuminate** to indicate that the front passenger air bag is **OFF and will not inflate in a crash**.
- When the front-passenger's seat is occupied and the passenger meets the conditions outlined in the Owner's Manual, the **OFF** **will not illuminate** to indicate that the front passenger air bag is operational.

***When the system detects that the front-passenger's seat is unoccupied, the front passenger air bag status light will not illuminate, even though the front passenger air bag is OFF.**

TIRE PRESSURE MONITORING SYSTEM (TPMS)

This system monitors tire pressure. If the low tire pressure warning light illuminates, check the tire pressure in all four tires.

Adjust the low tire pressure to the recommended COLD tire pressure shown on the Tire and Loading Information label located in the driver's door opening. After tire pressures are adjusted, the vehicle will need to be driven at speeds above 16 MPH (25 km/h) to activate the TPMS and turn off the low tire pressure warning light.



SEAT BELT WARNING LIGHT AND CHIME

- The light and chime remind you to fasten your seat belts. The light illuminates whenever the ignition switch is placed in the ON or START position and remains illuminated until the driver's seat belt is fastened. At the same time, the chime sounds for approximately 6 seconds unless the driver's seat belt is securely fastened.
- With the ignition ON, the seat belt warning light may also illuminate if the front-passenger's seat is occupied with the front-passenger's seat belt not fastened.



FUEL-FILLER DOOR

The fuel-filler door lock is automatically engaged with the door lock system.

 
1. Unlock the fuel-filler door using one of the following operations:
 - Press the **?** button on the keyfob to unlock all the doors.
 - Unlock all the doors with the key.
 - Press **?** on the power door lock switch.
2. Push the left side of the fuel-filler door to open.
3. To lock, close the fuel-filler door and lock all doors.



FRONT SEAT ADJUSTMENTS

WITH POWER SEATS (if so equipped)

- Move the sliding switch **01** forward or backward to adjust the seat cushion to the desired position.
- Move the reclining switch **02** forward or backward to adjust the seatback to the desired angle.

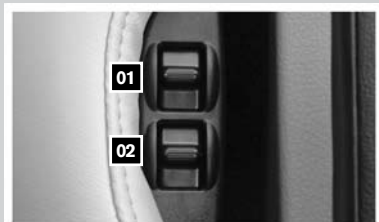

SEAT LIFTER (driver's seat)

- Turn either dial to adjust the angle and height of the seat cushion to the desired position.



LUMBAR (if so equipped)

- Your driver's seat lumbar support is located on the inboard side of the driver's seat. Adjust it by moving the lever up or down.

POWER WINDOWS

 
 
The power windows operate when the ignition is in the ON position, and for about 45 seconds after the ignition is turned to the OFF position. If the driver's or front-passenger's door is opened during this period of about 45 seconds, power to the windows is canceled.

AUTOMATIC ADJUSTING FUNCTION:

The front door power windows have an automatic adjusting function. This ensures the windows close completely to help seal against wind noise and weather leaks.

When the front doors are being opened, the windows automatically lower slightly to avoid contact between the windows and the side roof panels.

When the doors are closed, the windows automatically raise slightly.



REAR TRUNK/HATCH OPENER SWITCH

If the trunk/hatch is locked, the Nissan Intelligent Key™ must be within 31.8 in (80 cm) to perform the following procedure.

1. Press the rear request switch **01** for more than 1.5 seconds. The trunk/hatch will unlatch.
2. Press the trunk/hatch opener switch **02**. The rear trunk/hatch will open.



SECONDARY TRUNK/HATCH RELEASE

Your vehicle is equipped with a secondary trunk/hatch release mechanism. This allows opening of the trunk/hatch in the event of a discharged battery or in an emergency.

- The secondary trunk/hatch release is located in the rear parcel box on Roadster models and under the cargo room floor on Coupe models.
- To open the trunk/hatch from the inside:

ROADSTER MODELS:

1. Open the rear parcel box.
2. Remove the cap with a suitable tool.
3. Insert the mechanical key into the key cylinder and turn it counterclockwise.
4. The trunk will open.



 
 
COUPE MODELS:

1. Remove the cargo mat.
2. Locate the rear hatch release handle.
3. Free the release handle that is fixed with Velcro®.
4. Firmly pull the release handle until the rear hatch releases.



MIRROR ADJUSTMENT

The rear view mirror has two pivot points for adjustments. Adjust the rear view mirror height at the rear pivot and tilt the mirror at the front pivot. Position the mirror to provide the best visibility through the rear window.

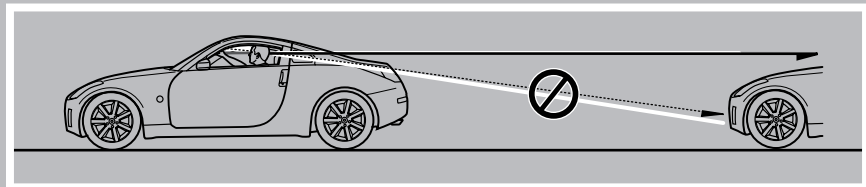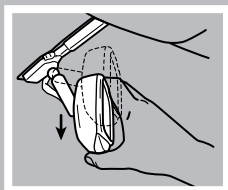

SOFT TOP OPERATION (Roadster Model)

Before opening or closing your soft top, refer to the Owner's Manual for detailed warnings and cautions regarding soft top operation.

 
Open the top:

1. Make sure the area is clear of obstructions and that there is at least 6 feet of clearance above the vehicle.
2. Apply the parking brake and make sure the transmission is in the P (PARK) position (AT) or the N (NEUTRAL) position (MT).
3. Step on the brake pedal.
4. Start the engine.
5. Press and hold the **OPEN** side of the soft top operating switch until the top is fully open and stowed and the indicator light turns off.



Close the top:

1. Make sure the area is clear of obstructions and that there is at least 6 feet of clearance above the vehicle.
2. Apply the parking brake and make sure the transmission is in the P (PARK) position (AT) or the N (NEUTRAL) position (MT).

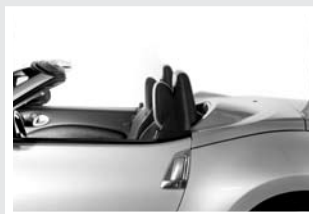

3. Step on the brake pedal.
4. Start the engine.
5. Press and hold the **CLOSE** side of the soft top operating switch until the top is fully closed and the indicator light turns off.

If the top does not close when using the operating switch, refer to the Owner's Manual for the procedure to manually close the top.



HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

SYSTEM OPERATING TIPS

- Garage doors, electrical gates, entry doors, etc. will be activated during programming. To avoid injury, make sure that people and objects are clear of all doors or gates during programming. Your vehicle's engine should be turned off while programming the HomeLink® Transceiver.
- To program your HomeLink® Transceiver to operate a garage door, gate, or entry door opener, home or office lighting, you need to be at the same location as the device.

NOTE: Garage door openers (manufactured after 1996) have “rolling code protection”. To program a garage door opener equipped with “rolling code protection”, you will need to use a ladder to get to the garage door opener motor to be able to access the “smart” or “learn” program button.

PROGRAMMING YOUR HOMELINK® UNIVERSAL TRANSCEIVER

(Mirror, Sun Visor or Overhead Console)

1. To begin, press and hold the two outer HomeLink® buttons (to clear the memory) until the indicator light blinks slowly (after 20 seconds). Release both buttons.
2. Position the end of the hand-held transmitter 1-3 inches (26-76 mm) away from the HomeLink® surface.
3. Using both hands, simultaneously press and hold both the HomeLink® button you want to program and the hand-held transmitter button. **DO NOT release the buttons until step 4 has been completed.**



4. Hold down both buttons until the indicator light on the HomeLink® flashes, changing from a “slow blink” to a “rapidly flashing blink.” This could take up to 90 seconds. When the indicator light flashes rapidly, both buttons may be released. The rapidly flashing light indicates successful programming. To activate the garage door or other programmed device, press and hold the programmed HomeLink® button - releasing when the device begins to activate.
5. If the indicator light on the HomeLink® blinks rapidly for two seconds and then turns solid, HomeLink® has picked up a “rolling code” garage door opener signal. You will need to proceed with the next steps to train the HomeLink® to complete the programming which may require a ladder and another person for convenience.
6. Press and release the “smart” or “learn” program button located on the garage door opener’s motor to activate the “training mode.” This button is usually located near the antenna wire that hangs down from the motor. If the wire originates from under a light lens, you will need to remove the lens to access the program button.



NOTE: Once you have pressed and released the program button on the garage door opener’s motor and the “training light” is lit, you have 30 seconds in which to perform step 7. Use the help of a second person for convenience to assist when performing this step.

7. Within 30 seconds of pressing and releasing the garage door opener program button, firmly press and release the HomeLink® button you’ve just programmed. Press and release the HomeLink® button up to three times to complete the training.
8. Your HomeLink® button should now be programmed. (To program the remaining HomeLink® buttons for additional door or gate openers, follow steps 2-8 only).

 
BLUETOOTH® HANDS-FREE PHONE SYSTEM (Without Navigation System – if so equipped)

With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth® wireless technology and voice recognition to provide hands-free cellular phone communication.

SYSTEM OPERATING TIPS

- Close all windows. Surrounding noises may interfere with system operation and performance.
- Press the  button on the steering wheel to activate voice recognition.
- Wait for the tone before speaking.
- Begin speaking a command within 5 seconds of the tone.
- Speak in a clear and natural voice without pausing between words.
- To go back to the previous command, say “Go back” or “Correction.”
- To cancel a voice recognition session, simply wait 5 seconds, say “Cancel,” or “Quit” or press the  button.
- To increase or decrease the volume of the voice prompts, press the **+** or **- VOL** (volume) control buttons on the steering wheel or turn the **POWER/VOLUME** knob on the audio system while the system is responding.

**Bluetooth®
controls location**

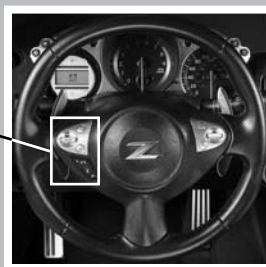

- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner's Manual for detailed information.
- Some commands are not available while the vehicle is in motion.
- While using the voice recognition system, it is possible to select menu options by using the steering wheel controls instead of speaking voice commands. For convertible vehicles (if so equipped) with the top open, only Manual Control is available.
- The "Help" command can be used in any menu to hear a list of available commands.
- Please refer to the cellular phone manufacturer's Owner's Manual for detailed information regarding your Bluetooth® phone.
- **For recommended phones and detailed instructions, please visit www.nissanusa.com/bluetooth.**


CONNECTING YOUR PHONE

To use the hands-free feature, you need to set up, or connect, the system to recognize your cellular phone(s). Five Bluetooth®-enabled phones can be connected. After setup, the system automatically connects with a connected phone when the ignition is in the ACC or ON position, as long as the phone is on and in the vehicle.


NOTE: Some cellular phones require the user to enable the automatic reconnection feature. Please refer to the cellular phone manufacturer's Owner's Manual for Bluetooth® setup information.

CONNECTING PROCEDURE

NOTE: The vehicle must be stationary when connecting the phone.

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say "Connect Phone."
3. The system acknowledges the previous command and announces the next set of available commands. Say, "Add phone."
4. Initiate connecting from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)
5. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.

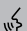


MAKING A PHONE CALL

1. Press the  button.
2. After the tone, do one of the following:
 - Say "Call." After the system responds, say the name of the person in the phonebook.
 - Say "Call Phone Number." After waiting for the tone, say [number]. For example, say "Call Phone Number." After waiting for the tone, say "123-456-7891."
 - Say "Redial" to redial the previous phone number.
 - Say "Call Phone Number." After the system responds, say "Special Number" to dial more than 10 digits or special characters.

- You can say all the digits of a 7- or 10-digit phone number at one time.
- For a 10-digit number, saying the phone number in groups of 3, 3 and 4 digits may improve recognition for some speakers. To use this group dialing method, say only the first 3 digits of the phone number. After the system recognizes the number, it will request the next 3 digits and finally the last 4 digits.
- If a phone number is incorrectly recognized, you can try entering the phone number again using the 3–3–4 group dialing procedure by saying “Correction.”
- When you have finished speaking the phone number wait for the system to repeat it back to you, then say “Dial.”

RECEIVING/ENDING A PHONE CALL

When you receive a phone call, a ring tone sounds through the audio system.

- To accept the call, press the  button. To reject the call, press the  button.
- To hang up the phone at the end of a call or to disconnect during call placement, press the  button.


HOW TO SAY NUMBERS

NISSAN voice recognition permits numbers to be spoken in a variety of ways.


- Say “zero” or “oh” for “0.” Example: 1-800-662-6200 – Say “one eight zero zero six six two six two oh oh.”
- Say “pound” for “#.” Say “star” for “*” (available when using the “Call Phone Number” then “Special Number” command and the “Send” command during a call).
- Say “plus” for “+” (available only when using the “Call Phone Number” then “Special Number” command).
- Say “pause” for a 2-second pause.

USING YOUR PHONEBOOK

When a phone is connected to the system, the phonebook is automatically downloaded. This allows you to access your phonebook from the Bluetooth® system to call contacts by name. Up to 1,000 contacts will be transferred. To access your phonebook:

1. Press the  button and wait for the tone.
2. Say “Phonebook.”
3. Wait for the tone, then say [a name] or say “List names.” The name must be said exactly as it is entered in your phonebook for the system to recognize it. For example, say “Phonebook” then after the system responds, say “Michelle.”

The phonebook can transfer multiple numbers for each entry. If you select a name with multiple numbers, the system will ask you which number you want to dial. The system allows for up to 40 voice tags to be recorded. You can record a voice tag for phonebook entries that the system has difficulty recognizing or to directly dial an entry with multiple numbers. To record a voice tag:

1. Press the  button and wait for the tone.
2. Say “Phonebook.”
3. Wait for the tone, then say [a name] or say “List names.” Select the name for which you want to record a voice tag.
4. Say “Record Name.”



BLUETOOTH® HANDS-FREE PHONE SYSTEM (Navigation System only – if so equipped)

With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth® wireless technology, touch-screen and voice recognition to provide hands-free cellular phone communication.

Bluetooth® controls location



SYSTEM OPERATING TIPS

- Close all windows. Surrounding noises may interfere with system operation and performance.
- Press the  button on the steering wheel to activate voice recognition.
- Wait for the “Would you like to access Phone, Navigation, Information, Audio or Help?” prompt and the listening tone before speaking.
- Begin speaking a command within 1.5 seconds of the listening tone.
- To cancel a voice recognition session, press and hold the  button for 2 seconds.
- To increase or decrease the volume of the voice prompts, push the + or – (volume) control buttons on the steering wheel or turn the **VOL** (volume) knob on the audio system while the system is responding.
- Speak in a clear and natural voice without pausing between words.
- Some commands are not available while the vehicle is in motion.
- The “Help” command will bring up the voice recognition command list.
- Please refer to the cellular phone manufacturer Owner’s Manual for detailed information regarding your Bluetooth® phone.
- **For recommended phones and detailed instructions, please visit www.nissanusa.com/bluetooth.**

CONNECTING YOUR PHONE

Before using the hands-free feature, you need to set up, or connect, the system to recognize your compatible cellular phone(s). Five Bluetooth®-enabled phones can be connected. After setup, the system automatically connects with a connected phone when the ignition is in the ACC or ON position, as long as the phone is on and in the vehicle.

CONNECTING PROCEDURE

NOTE: The vehicle must be stationary when connecting the phone.

1. Press the **PHONE** button on the control panel.
2. Touch the “Connect Phone” key and a pop up box will appear.
3. Read the information and touch “Yes.”



4. Initiate connecting from the phone.
 - The connecting procedure for cellular phones varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.nissanusa.com/bluetooth.
 - The PIN code will appear on the screen (1234 is the default).
5. When the connecting is complete, the screen will return to the Phone screen.

SETTING UP YOUR PHONEBOOK - ADDING NEW ENTRIES

Up to 40 phone numbers can be stored in the phonebook.

NOTE: The vehicle must be stationary when adding new entries.


1. Press the **PHONE** button, then touch the "Vehicle Phonebook" key.
2. Touch "Add New" key at the top of the display. There are a number of different methods to input a phone number. Select one of the following options:
 - "Copy from Call History" to save a number from the Outgoing, Incoming or Missed Calls lists.
 - "Copy from the Handset" to save a number that has been downloaded from your handset to the vehicle.
 - "Enter Number by Keypad" to input the number and name manually.



Many phones will support an automatic download of the cellular phone's phonebook. This process may take up to 5 minutes depending on the size of your phonebook. Once the phonebook is downloaded, selecting "Handset Phonebook" will allow you to access your downloaded phonebook (up to 1,000 entries) instead of using the "Vehicle Phonebook" key.




MAKING A PHONE CALL

To make a call, follow the procedures below:

1. Press the **PHONE** button on the instrument panel or the  button on the steering wheel. The "Phone" screen will appear on the display.
2. Select "Vehicle Phonebook," "Call History" or "Handset Phonebook."
3. Select the registered person's name from the list, and press the **ENTER** button. Dialing will start.



RECEIVING/ENDING A PHONE CALL

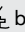- There are no voice commands for receiving or ending a phone call.
- To accept the call, press the  button on the steering wheel or touch the “Answer” key. To reject the call, touch the “Reject Call” key. To hang-up, press the  button or touch the “Hang-Up” key.
- Pressing the  button during a connected phone call will allow you to send digits and special characters. After speaking the desired digits, press the **ENTER** button to send the recognized information.



HOW TO SAY NUMBERS

The system provides two commands for entering and dialing a phone number: “DIAL” and “INTERNATIONAL CALL.” The “DIAL” command is used for domestic phone numbers up to 10 digits in length, starting with the area code. The “INTERNATIONAL CALL” command is used when more than 10 digits need to be dialed or when special characters are required, such as *, #, or +. When using these two commands, please follow the phone digit speaking rules below:

- Only single digits 0 (zero) to 9 (nine) can be spoken.
- When saying the phone number 800-662-6200, the system will accept “eight hundred” in addition to “eight zero zero” or “eight oh oh.” 500, 700, and 900 are also supported.
- The long-distance calling prefix “1” is not required when making a call.

 
“DIAL” COMMAND ONLY

- You can say all the digits of a 7- or 10-digit phone number at one time.
 - For a 10-digit number, saying the phone number in groups of 3, 3, and 4 digits may improve recognition for some speakers. To use this group dialing method, say only the first 3 digits of the phone number. After the system recognizes the number, it will request the next 3 digits and finally the last 4 digits.
 - If a phone number is incorrectly recognized, you can try entering the phone number again using the 3-3-4 group dialing procedure by saying, “CHANGE NUMBER.”
- ### “INTERNATIONAL CALL” COMMAND ONLY.
- You can say the entire phone number at once or in groups of any digit length.
 - For *, #, and +, say “star,” “pound,” or “plus,” respectively.


NISSAN VOICE RECOGNITION SYSTEM (Navigation System only)


Voice Recognition allows hands-free operation of the phone, navigation, audio and vehicle information systems as a default setting (Standard Mode). Available commands are announced by the system and shown on the display. You can complete your desired operation by following the instructional prompts given by the system. The system will indicate when you can speak a command by sounding a tone.

Bluetooth® controls location

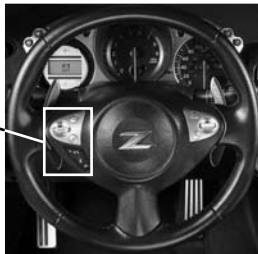



 To use voice recognition, push the  (TALK) switch located on the steering wheel.

After pushing the  switch, the system responds with, “Would you like to access Phone, Navigation, Information, Audio or Help?” The screen also changes and shows the available commands to speak. After the tone, say one of the command choices. The system will then proceed to the next step.



“Would you like to access Phone Navigation, Information, Audio or Help?”

After the tone sounds and the icon on the screen changes from  to , say:

“Phone”

or

“Navigation”

or

“Information”



“Audio”

or

“Help”


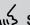


Saying “Help” will display the User Guide explained later in this guide. Continue listening to the prompts and respond after the tone until the desired operation is completed. Remember to wait for the tone before speaking. For proper recognition of phone numbers and street names, please review the operating tips below. The commands shown in the menus above are available in Standard Mode. To access an expanded list of commands, please see “Alternate Command Mode” in this guide.

SYSTEM OPERATING TIPS

Before Starting

To get the best possible performance out of the Voice Recognition system, observe the following:

- The interior of the vehicle should be as quiet as possible. Close the windows to minimize the surrounding noises.
- Wait until the tone sounds before speaking a command.
- Speak in a natural conversational voice with minimal pauses between words.
- If you want to repeat a step or if the system incorrectly recognized your command, push the  switch on the steering wheel or the **BACK** button on the instrument panel.
- If the system does not recognize your command, please repeat the command again. However, avoid raising the volume of your voice or slowing down your speech unless the system prompts you to do so. Speaking too slowly reduces recognition accuracy.
- To give commands quickly, press the  switch to interrupt the voice guidance.
- When speaking an address or a phone number to dial, it is possible to transfer from voice recognition to the button control by pressing the "Manual Controls" key on the screen when it is displayed.

How to speak phone numbers

The system provides two commands for entering and dialing a phone number: "DIAL" and "INTERNATIONAL CALL." The "DIAL" command is used for domestic phone numbers up to 10 digits in length starting with the area code. The "INTERNATIONAL CALL" command is used when more than 10 digits need to be dialed or when special characters are required such as *, #, or +. When using these two commands, please follow the phone digit speaking rules below:

- Only single digits 0 (zero) to 9 (nine) can be spoken.
- Speak digits at a normal pace. Speaking too slowly reduces recognition accuracy.
- When saying the phone number 800-662-6200, the system will accept "eight zero zero" or "eight oh oh." 500, 700, and 900 are also supported.
- The long-distance dialing prefix "1" is not required when making a call.

"DIAL" COMMAND ONLY


- You can say all the digits of a 7- or 10-digit phone number at one time.
- For a 10-digit number, saying the phone number in groups of 3, 3, and 4 digits may improve recognition for some speakers. To use this group dialing method, say only the first 3 digits of the phone number. After the system recognizes the 3 three digits, it will request the next 3 digits and finally the last 4 digits.
- If a phone number is incorrectly recognized, you can try entering the phone number again using the 3-3-4 group dialing procedure by saying, "CHANGE NUMBER."

"INTERNATIONAL CALL" COMMAND ONLY

- You can say the entire phone number at once or in groups of any digit length.
- For *, #, and +, say "STAR," "POUND" or "PLUS," respectively.



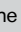
VOICE COMMAND USAGE

Making a Phone Call

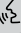1. Push the  switch on the steering wheel. The system responds with, "Would you like to access Phone, Navigation, Information, Audio or Help?" The commands are also displayed on the screen.
2. After the tone, say "PHONE."
3. The system then displays the four available phone commands and says: "Please say Dial Number, Redial, Phonebook or International Call."
4. After the tone, do one of the following:
 - Say "DIAL NUMBER" to dial a 7- or 10-digit phone number only.
 - Say "VEHICLE PHONEBOOK" to say the voice tag of one of up to 40 phone numbers you have stored in the vehicle.
 - Say "HANDSET PHONEBOOK" to say the name of one of up to 1,000 contacts downloaded from your phone handset. (Note: The order of contact information (first name, last name) transferred depends on the phone manufacturer. The name must be spoken as shown in the Handset Phonebook list.)
 - Say "CALL HISTORY" to select between incoming, outgoing and missed call lists.
 - Say "INTERNATIONAL CALL" to dial a number longer than 10 digits.




Receiving/Ending a Phone Call

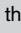- There are no voice commands for receiving or ending a phone call.
- To accept the call, push the  switch on the steering wheel or touch the "Answer" key on the display. To reject the call, touch the "Reject Call" key. To hang-up, push the  switch or touch the "Hang-Up" key.
- Pushing the  switch during a connected phone call will allow you to send digits and special characters. After speaking the desired digits, press the **ENTER** button to send the recognized information.



Setting a Destination to a Street Address

- 1. Push the  switch on the steering wheel.
- 2. The system responds with “Would you like to access Phone, Navigation, Information, Audio or Help?”
- 3. Say “NAVIGATION.”
- 4. The system announces, “Please say Home, Address, Places, Address Book or Previous Destinations.”
- 5. Say, “Address.”



- 6. Say the name of the state, “California.”



- 7. Say the name of the city, “Gardena.”



- 8. Say the name of the street, “Figueroa.”



- 9. Say the house number.



10. To begin route guidance say, “CALCULATE ROUTE.”

To confirm the destination location on the map before proceeding say, “SHOW MAP.”



- To improve recognition accuracy of street names, say the entire street name including Boulevard, Way, North, South, Road, etc., if it is known.
- If a list of choices appears, please say the number from the displayed list.
- If you don't know the house number when asked, say “No House Number,” and the system will use a default location on the street.

Setting a Destination to a Place

 
- After saying “NAVIGATION,” the command “PLACES” allows you to select a nearby place category. The category selection will show the five nearest places in the chosen category.
- To customize this list, please refer to the OTHER SETTINGS section of your Navigation Owner's Manual.




DISPLAYING THE USER GUIDE TUTORIALS

You can confirm how to use voice recognition by accessing a simplified User Guide. The guide contains basic instructions for using voice recognition and tutorials for several voice commands.

1. Press **INFO**.
2. Highlight “Voice Recognition” and press **ENTER**.
3. Highlight “User Guide” and press **ENTER**.
4. Highlight the desired topic and press **ENTER** to begin the tutorial.

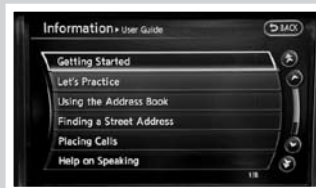


ALTERNATE COMMAND MODE

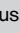For advanced operation, you can change to an Alternate Command Mode that expands the available list of commands. When this mode is active, all the Phone, Navigation, Information, Audio and Help commands can also be spoken after pushing the  switch without first having to say the type of command (e.g. Phone).

1. Press **SETTING**.
2. Highlight “Other” and press **ENTER**.
3. Highlight “Voice Recognition” and press **ENTER**.
4. Highlight “Alternate Command Mode” and press **ENTER**.

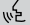

5. To confirm the new mode, push the  switch.
6. Verify that the screen changes to the one shown here.
 - “Alternate Command Mode ON” is shown below the command list.
 - Review the expanded command list by now using the voice command “Command List.” You can also access the list by pressing the **INFO** button. Then, select “Others,” select “Voice Recognition,” then select “Command List.”



Speaker Adaptation

When Alternate Command Mode is selected, it is recommended that the Speaker Adaptation procedure be performed, to train the system to your voice. Speaker Adaptation allows up to three users to train the system to improve recognition accuracy. By repeating a number of commands, the users can create a voice model of their own voice that is stored in the system.



NAVIGATION SYSTEM (if so equipped)

GETTING STARTED

The Navigation System starts up when the ignition switch is placed in the ACC or ON position. To help ensure safe driving, some functions are grayed out, or muted, while driving. Park the vehicle in a safe location and then operate the Navigation System.

NAVIGATION DISPLAY SCREEN

- Displays navigation features and map.



DISABLED WHILE DRIVING

- Not all features can be manually operated while the vehicle is in motion. The text for these restricted features turns from white to gray and cannot be selected. Alternatively, the voice recognition system may have a related command that can be used at anytime.



DAY/NIGHT BUTTON

- Press the ☀/🌙 OFF button **09** to switch between the day screen (bright) and the night screen (dark). Within 10 seconds of pressing the ☀/🌙 OFF button **09**, you can adjust the brightness of the map display screen by pressing the directional buttons.

USING THE TOUCH-SCREEN

- To maneuver around the navigation display screen, touch the screen to select the item or key displayed. To move around the map screen, touch and hold to scroll around.



SETTING BUTTON

- Press the **SETTING** button **07** to change or set navigation preferences.



DEST (DESTINATION) BUTTON

- Press the **DEST** button **02** to display the address book and alternative ways of programming a destination.



MAP BUTTON

- Press the **MAP** button **03** to display the current location map screen.



INFO BUTTON

- Press the **INFO** button **06** to set or view various information that is helpful for using the vehicle safely and comfortably.



ROUTE BUTTON

- Press the **ROUTE** button **04** to display various ways to modify the route to a destination.



ZOOM OUT/IN BUTTONS

- Press the **ZOOM OUT** button **01** or the **ZOOM IN** button **01** to increase or decrease the scale of the map display.



BACK KEY/BUTTON

- Touch the “Back” key to return to the previous function shown on the navigation display or press the **BACK** button **05**.

 
 


VOICE BUTTON

- Press the **VOICE** button **08** to hear the current navigation situation.

SWITCHING THE MAP VIEW

- Press the **MAP** button **03**. The current location map screen is displayed.
- Touch the “Map Menu” key.
- Touch the “Map View” key.

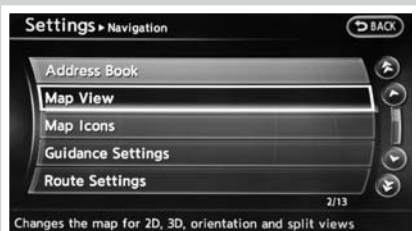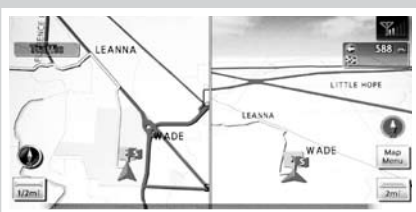

- Touch the “Change View” key.
- Touch either one of the “2D” keys or one of the “Birdview” keys to select the map view. Press the **MAP** button **03** or the “Back” key to accept the changes.



 
2D

- Displays the map in a 2-dimensional environment similar to a road map.



BIRDVIEW™

- Displays the map in an elevated perspective.

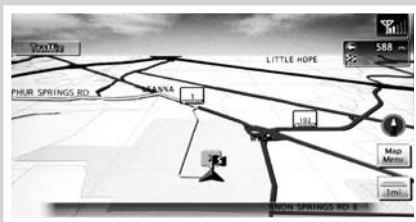


SELECTING A MENU SCREEN

1. To select a preferred menu key, touch the corresponding key on the screen.
2. Depending on the key you selected, a detailed menu screen, a character input screen or a setting screen, etc. is displayed. On the screen displayed, make adjustments, input information, etc. accordingly.
3. Touch the “Back” key to return to the previous screen without applying any changes; in some cases, touching the “Back” key will accept the changes you made.
4. Press the **MAP** button **03** to return to the current location map.

NOTE: Depending on the menu selected, pressing the **MAP** button **03** may not return you to the current location map screen.

STORING YOUR HOME IN YOUR ADDRESS BOOK

 - Press the **DEST** button **02**.
- Touch the “Home (Add New)” key. If you have already stored your home this key may not appear.
- When you touch the “Home (Add New)” key, a confirmation message is displayed. Touch the “Yes” key.

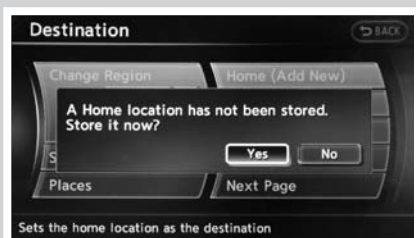


- Touch the “Street Address” key.
A character input screen is displayed.



- Enter the street number of your home, then touch the “OK” key.
- Enter your street name, touch the “List” key. The map screen is displayed.



 - Your home location is displayed at the center of the map. Press the **ENTER** button to confirm the location on the map.

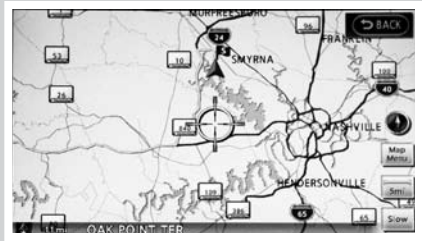

- A confirmation message is displayed, and the system sets your home as the destination.
- Press the **MAP** button **03** to return to the current location map screen.



SETTING A STREET ADDRESS AS A DESTINATION

- Press the **DEST** button **02**.
- Touch the “Street Address” key.
A character input screen is displayed.



- Enter the house number; when finished touch the "OK" key. If you do not know the house number, touch the "No House #" key.



- Enter the name of the street. After finishing the entry, touch the "List" key. A list of possible street addresses is displayed.



- Touch the correct address of the destination from the list. You might need to touch the "UP" or "DOWN" key to find the preferred street address key.



- The selected destination will be briefly displayed before showing the entire route. Touch the "Start" key after confirming the displayed route is acceptable. The voice guidance will begin shortly.



 
MOVING AROUND WITHIN A MAP

You can manually move across the map to view the surrounding area or to view a preferred location.

- Touch the screen in the direction that you want to move across the map. Once you begin moving on the map, the cross pointer appears.
- Press the **MAP** button **03** or touch the "Back" key to return to the current location map screen. The cross pointer disappears.

SETTING A PLACE AS A DESTINATION

- Press the **DEST** button **02** .
- Touch the “Places” key.
- Touch the preferred nearby category from the list.
- Select the preferred destination from the list.

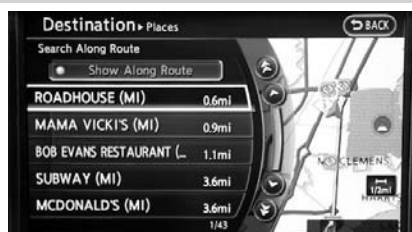

NOTE: A maximum of 100 facilities can be displayed on the list screen. If the suggested route is already set, by selecting the “Show Along Route” key, the system displays only the facilities located along the route.

- The selected destination will be briefly displayed before showing the entire route. Touch the “Start” key after confirming the displayed route is acceptable. The voice guidance will begin shortly.



ROUTE GUIDANCE

While following the route guidance, press the **MAP** button to change from a split screen to a full screen view of the map.

By default, the split screen will show a turn list and possibly freeway exits. When approaching an intersection or freeway junction, a second split map screen is available to show the details of that intersection or junction.

- Press the **STATUS** button 1 or more times to see turn information displayed on the bottom of the display with audio text information on the top.



MEMO



Nissan, the Nissan Brand Symbol, SHIFT_ tagline,
Z and Nissan model names are Nissan trademarks.
© 2009 Nissan North America, Inc.
QR0E 0Z34U1 ★
Printing: August 2009 (03)

