

SECTION

LAN

LAN SYSTEM

A

B

C

CONTENTS

E

CAN		
PRECAUTIONS	3	
Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3	
Precautions for Battery Service	3	
Precautions When Using CONSULT-II	3	
CHECK POINTS FOR USING CONSULT-II	4	
Precautions For Trouble Diagnosis	4	
CAN SYSTEM	4	
Precautions For Harness Repair	4	
CAN SYSTEM	4	
CAN COMMUNICATION	5	
System Description	5	
CAN Communication Unit	5	
TYPE 1	5	
TYPE 2	7	
TYPE 3	8	
TYPE 4	10	
CAN SYSTEM (TYPE 1)	12	
System Description	12	
Component Parts and Harness Connector Location	12	
Wiring Diagram — CAN —	13	
Work Flow	15	
CHECK SHEET	16	
CHECK SHEET RESULTS (EXAMPLE)	18	
Circuit Check Between TCM and Data Link Connector	30	
Circuit Check Between Data Link Connector and Unified Meter and A/C Amp.	31	
Circuit Check Between Unified Meter and A/C Amp. and BCM	31	
Circuit Check Between BCM and ABS Actuator and Electric Unit (Control Unit)	31	
ECM Circuit Check	32	
TCM Circuit Check	33	
Data Link Connector Circuit Check	33	
Unified Meter and A/C Amp. Circuit Check	34	
BCM Circuit Check	34	
ABS Actuator and Electric Unit (Control Unit) Circuit Check	35	
IPDM E/R Circuit Check	35	
CAN Communication Circuit Check	36	
IPDM E/R Ignition Relay Circuit Check	38	
Component Inspection	38	
ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION	38	
CAN SYSTEM (TYPE 2)	39	
System Description	39	
Component Parts and Harness Connector Location	39	
Wiring Diagram — CAN —	40	
Work Flow	42	
CHECK SHEET	43	
CHECK SHEET RESULTS (EXAMPLE)	45	
Circuit Check Between Data Link Connector and Unified Meter and A/C Amp.	55	
Circuit Check Between Unified Meter and A/C Amp. and BCM	55	
Circuit Check Between BCM and ABS Actuator and Electric Unit (Control Unit)	55	
ECM Circuit Check	56	
Data Link Connector Circuit Check	57	
Unified Meter and A/C Amp. Circuit Check	57	
BCM Circuit Check	58	
ABS Actuator and Electric Unit (Control Unit) Circuit Check	58	
IPDM E/R Circuit Check	59	
CAN Communication Circuit Check	60	
IPDM E/R Ignition Relay Circuit Check	62	
Component Inspection	62	
ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION	62	
CAN SYSTEM (TYPE 3)	63	
System Description	63	
Component Parts and Harness Connector Location	63	
Wiring Diagram — CAN —	64	
Work Flow	66	
CHECK SHEET	67	
CHECK SHEET RESULTS (EXAMPLE)	69	
Circuit Check Between Data Link Connector and		

F

G

H

I

J

LAN

L

M

Unified Meter and A/C Amp.	79	Circuit Check Between Data Link Connector and Unified Meter and A/C Amp.	107
Circuit Check Between Unified Meter and A/C Amp. and BCM	79	Circuit Check Between Unified Meter and A/C Amp. and BCM	107
Circuit Check Between BCM and ABS Actuator and Electric Unit (Control Unit)	79	Circuit Check Between BCM and Low Tire Pressure Warning Control Unit	108
ECM Circuit Check	80	Circuit Check Between Low Tire Pressure Warning Control Unit and Steering Angle Sensor	108
Data Link Connector Circuit Check	81	Circuit Check Between Steering Angle Sensor and VDC/TCS/ABS Control Unit	109
Unified Meter and A/C Amp. Circuit Check	81	ECM Circuit Check	110
BCM Circuit Check	82	Data Link Connector Circuit Check	110
ABS Actuator and Electric Unit (Control Unit) Circuit Check	82	Unified Meter and A/C Amp. Circuit Check	111
IPDM E/R Circuit Check	83	BCM Circuit Check	111
CAN Communication Circuit Check	84	Low Tire Pressure Warning Control Unit Circuit Check	112
IPDM E/R Ignition Relay Circuit Check	86	Steering Angle Sensor Circuit Check	112
Component Inspection	86	VDC/TCS/ABS Control Unit Circuit Check	113
ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION	86	IPDM E/R Circuit Check	113
CAN SYSTEM (TYPE 4)	87	CAN Communication Circuit Check	114
System Description	87	IPDM E/R Ignition Relay Circuit Check	116
Component Parts and Harness Connector Location ..	87	Component Inspection	117
Wiring Diagram — CAN —	88	ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION	117
Work Flow	90		
CHECK SHEET	91		
CHECK SHEET RESULTS (EXAMPLE)	93		

PRECAUTIONS

PFP:00001

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

AKS0031A

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precautions for Battery Service

AKS003TZ

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.


Precautions When Using CONSULT-II

AKS003M4

When connecting CONSULT-II to data link connector, connect them through CONSULT-II CONVERTER.

CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.

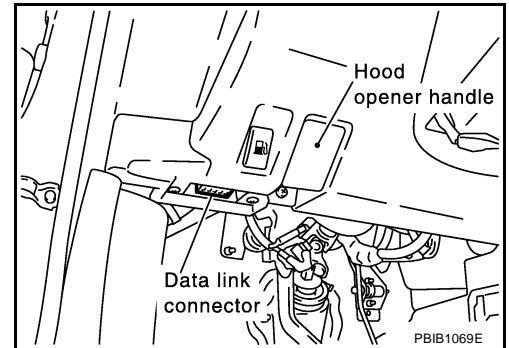

CHECK POINTS FOR USING CONSULT-II

1. Has CONSULT-II been used without connecting CONSULT-II CONVERTER on this vehicle?
 - If YES, GO TO 2.
 - If NO, GO TO 5.
2. Is there any indication other than indications relating to CAN communication system in the self-diagnosis results?
 - If YES, GO TO 3.
 - If NO, GO TO 4.
3. Based on self-diagnosis results unrelated to CAN communication, carry out the inspection.
4. Malfunctions may be detected in self-diagnosis depending on control units carrying out CAN communication. Therefore, erase the self-diagnosis results.
5. Diagnose CAN communication system. Refer to [LAN-5, "CAN Communication Unit"](#) .

Precautions For Trouble Diagnosis CAN SYSTEM


AKS000ZD

- Do not apply voltage of 7.0V or higher to the measurement terminals.
- Use the tester with its open terminal voltage being 7.0V or less.
- Be sure to turn ignition switch off and disconnect negative battery terminal before checking the circuit.


Precautions For Harness Repair CAN SYSTEM

AKS000ZE

- Solder the repaired parts, and wrap with tape. [Frays of twisted line must be within 110 mm (4.33 in).]

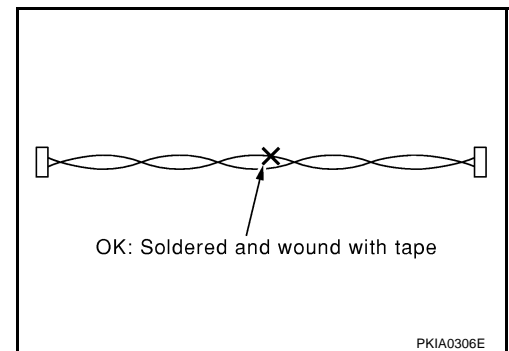

- Do not perform bypass wire connections for the repair parts. (The spliced wire will become separated and the characteristics of twisted line will be lost.)

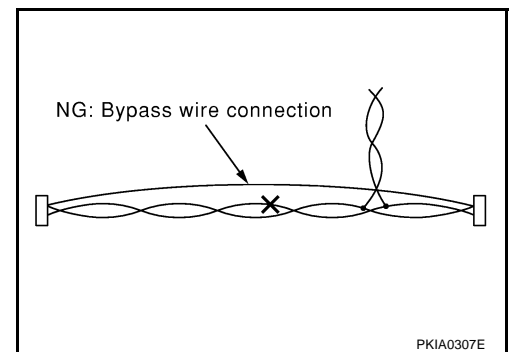

CAN COMMUNICATION

System Description

AKS000ZF

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit

AKS00AVB


Go to CAN system, when selecting your car model from the following table.

Body type	Roadster		Coupe			
Axle	2WD					
Engine	VQ35DE					
Transmission	A/T	M/T	A/T	M/T		
Brake control	TCS	TCS	TCS	ABS	TCS	VDC
Low tire pressure warning system	Not appli- cable	Not appli- cable	Not appli- cable	Not appli- cable	Not appli- cable	Applicable
CAN communication unit						
ECM	×	×	×	×	×	×
TCM	×		×			
Data link connector	×	×	×	×	×	×
Unified meter and A/C amp.	×	×	×	×	×	×
BCM	×	×	×	×	×	×
Low tire pressure warning control unit						×
Steering angle sensor						×
ABS actuator and electric unit (control unit)	×	×	×	×	×	
VDC/TCS/ABS control unit						×
IPDM E/R	×	×	×	×	×	×
CAN communication type	LAN-5. "TYPE 1"	LAN-7. "TYPE 2"	LAN-5. "TYPE 1"	LAN-8. "TYPE 3"	LAN-7. "TYPE 2"	LAN-10. "TYPE 4"
CAN system trouble diagnosis	1	2	1	3	2	4
	LAN-12	LAN-39	LAN-12	LAN-63	LAN-39	LAN-87

×: Applicable

TYPE 1

System Diagram

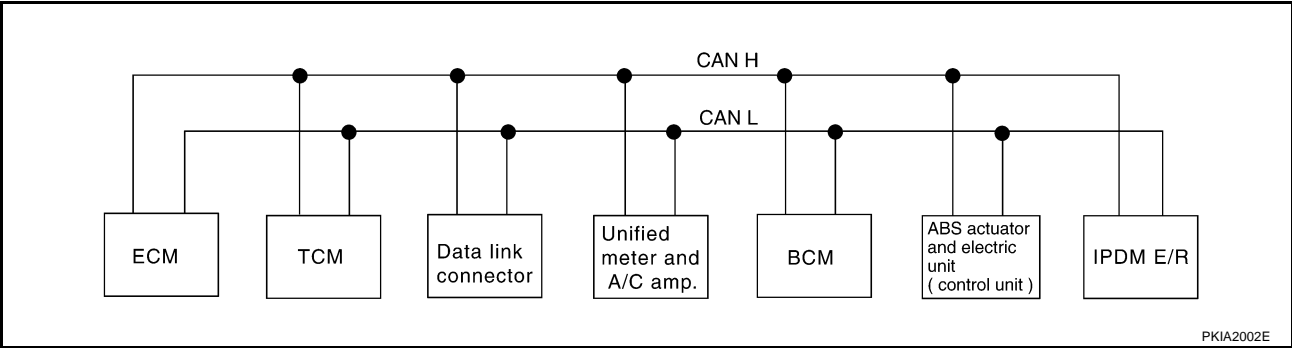

PKIA2002E

CAN COMMUNICATION

[CAN]

Input/output Signal Chart

T: Transmit R: Receive

Signals	ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R	R		R	
Engine coolant temperature signal	T		R			
Accelerator pedal position signal	T	R			R	
Closed throttle position signal	T	R				
Wide open throttle position signal	T	R				
Battery voltage signal	T	R				
Stop lamp switch signal		R	T			
Fuel consumption monitor signal	T		R			
A/T self-diagnosis signal	R	T				
A/T CHECK indicator lamp signal		T	R			
A/T position indicator signal		T	R		R	
Manual mode gear position signal		T	R			
ABS operation signal		R			T	
A/T shift schedule change demand signal		R			T	
A/C switch signal	R			T		
A/C compressor request signal	T					R
A/C compressor feedback signal	T		R			
Blower fan motor switch signal	R			T		
Cooling fan speed request signal	T					R
Position lights request signal			R	T		R
Low beam request signal				T		R
Low beam status signal	R					T
High beam request signal			R	T		R
High beam status signal	R					T
Day time running light request signal				T		R
Vehicle speed signal			R		T	
	R	R	T	R		
Sleep request 1 signal			R	T		
Sleep request 2 signal				T		R
Wake up request 1 signal			R	T		
Door switch signal			R	T		R
Turn indicator signal			R	T		
Seat belt buckle switch signal			T	R		
Buzzer output signal			R	T		
Fuel level sensor signal	R		T			
Malfunction indicator lamp signal	T		R			
ASCD SET lamp signal	T		R			
ASCD operation signal	T	R				
ASCD CRUISE lamp signal	T		R			
ASCD OD cancel request signal	T	R				
Output shaft revolution signal	R	T				


CAN COMMUNICATION

[CAN]

Signals	ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Turbine revolution signal	R	T				
Front wiper request signal				T		R
Front wiper stop position signal				R		T
Rear window defogger switch signal				T		R
Rear window defogger control signal	R					T
Manual mode signal		R	T			
Not manual mode signal		R	T			
Manual mode shift up signal		R	T			
Manual mode shift down signal		R	T			
Manual mode indicator signal		T	R			
Theft warning horn request signal				T		R
Horn chirp signal				T		R
Ignition switch signal				T		R
ABS warning lamp signal			R		T	
TCS OFF indicator lamp signal			R		T	
SLIP indicator lamp signal			R		T	
Brake warning lamp signal			R		T	

TYPE 2

System Diagram

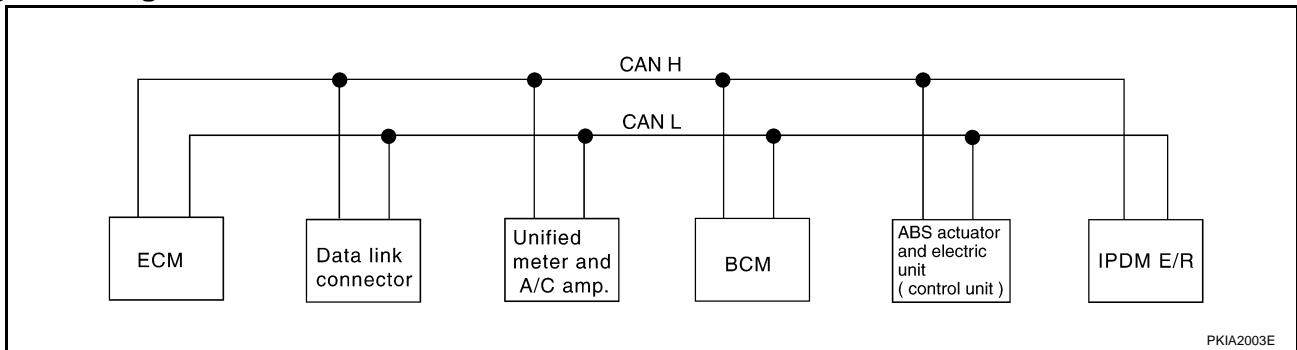

Input/output Signal Chart

T: Transmit R: Receive

Signals	ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R		R	
Engine coolant temperature signal	T	R			
Accelerator pedal position signal	T			R	
Fuel consumption monitor signal	T	R			
A/C switch signal	R		T		
A/C compressor request signal	T				R
A/C compressor feedback signal	T	R			
Blower fan motor switch signal	R		T		
Cooling fan speed request signal	T				R
Position lights request signal		R	T		R
Low beam request signal			T		R


CAN COMMUNICATION

[CAN]

Signals	ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Low beam status signal	R				T
High beam request signal		R	T		R
High beam status signal	R				T
Day time running light request signal			T		R
Vehicle speed signal		R		T	
	R	T	R		
Sleep request 1 signal		R	T		
Sleep request 2 signal			T		R
Wake up request 1 signal		R	T		
Door switch signal		R	T		R
Turn indicator signal		R	T		
Seat belt buckle switch signal		T	R		
Buzzer output signal		R	T		
Fuel level sensor signal	R	T			
Malfunction indicator lamp signal	T	R			
ASCD SET lamp signal	T	R			
ASCD CRUISE lamp signal	T	R			
Front wiper request signal			T		R
Front wiper stop position signal			R		T
Rear window defogger switch signal			T		R
Rear window defogger control signal	R				T
Theft warning horn request signal			T		R
Horn chirp signal			T		R
Ignition switch signal			T		R
ABS warning lamp signal		R		T	
TCS OFF indicator lamp signal		R		T	
SLIP indicator lamp signal		R		T	
Brake warning lamp signal		R		T	

TYPE 3

System Diagram

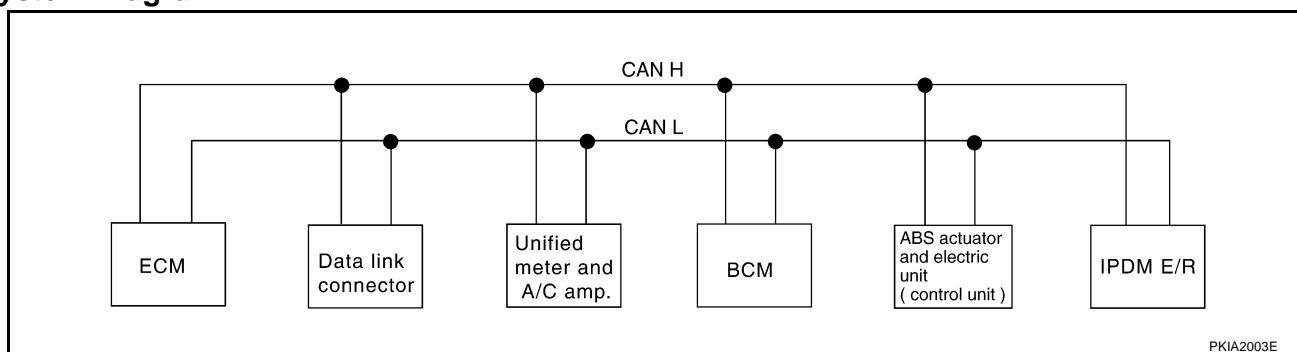

CAN COMMUNICATION

[CAN]

Input/output Signal Chart

T: Transmit R: Receive

Signals	ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
Engine speed signal	T	R		R	
Engine coolant temperature signal	T	R			
Accelerator pedal position signal	T			R	
Fuel consumption monitor signal	T	R			
A/C switch signal	R		T		
A/C compressor request signal	T				R
A/C compressor feedback signal	T	R			
Blower fan motor switch signal	R		T		
Cooling fan speed request signal	T				R
Position lights request signal		R	T		R
Low beam request signal			T		R
Low beam status signal	R				T
High beam request signal		R	T		R
High beam status signal	R				T
Day time running light request signal			T		R
Vehicle speed signal		R		T	
	R	T	R		
Sleep request 1 signal		R	T		
Sleep request 2 signal			T		R
Wake up request 1 signal		R	T		
Door switch signal		R	T		R
Turn indicator signal		R	T		
Seat belt buckle switch signal		T	R		
Buzzer output signal		R	T		
Fuel level sensor signal	R	T			
Malfunction indicator lamp signal	T	R			
ASCD SET lamp signal	T	R			
ASCD CRUISE lamp signal	T	R			
Front wiper request signal			T		R
Front wiper stop position signal			R		T
Rear window defogger switch signal			T		R
Rear window defogger control signal	R				T
Theft warning horn request signal			T		R
Horn chirp signal			T		R
Ignition switch signal			T		R
Tire pressure signal		R			
ABS warning lamp signal		R		T	
Brake warning lamp signal		R		T	

A

B

C

D

E

F

G

H

I

J


LAN

L

M

TYPE 4

System Diagram

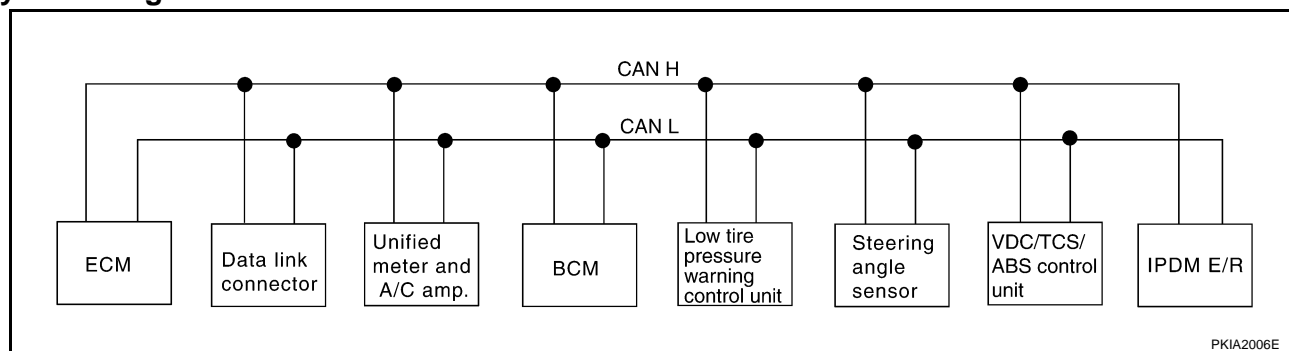

Input/output Signal Chart

T: Transmit R: Receive

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS/ABS control unit	IPDM E/R
Engine speed signal	T	R				R	
Engine coolant temperature signal	T	R					
Accelerator pedal position signal	T					R	
Fuel consumption monitor signal	T	R					
A/C switch signal	R		T				
A/C compressor request signal	T						R
A/C compressor feedback signal	T	R					
Blower fan motor switch signal	R		T				
Cooling fan speed request signal	T						R
Position lights request signal		R	T				R
Low beam request signal			T				R
Low beam status signal	R						T
High beam request signal		R	T				R
High beam status signal	R						T
Day time running light request signal			T				R
Vehicle speed signal		R				T	
	R	T	R	R			
Sleep request 1 signal		R	T				
Sleep request 2 signal			T				R
Wake up request 1 signal		R	T				
Door switch signal		R	T				R
Turn indicator signal		R	T				
Seat belt buckle switch signal		T	R				
Buzzer output signal		R	T				
Fuel level sensor signal	R	T					
Malfunction indicator signal	T	R					
ASCD SET lamp signal	T	R					
ASCD CRUISE lamp signal	T	R					
Front wiper request signal			T				R
Front wiper stop position signal			R				T

CAN COMMUNICATION

[CAN]

Signals	ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS/ABS control unit	IPDM E/R
Rear window defogger switch signal			T				R
Rear window defogger control signal	R						T
Theft warning horn request signal			T				R
Horn chirp signal			T				R
Ignition switch signal			T				R
Steering angle sensor signal					T	R	
Tire pressure signal		R		T			
ABS warning lamp signal		R				T	
VDC OFF indicator lamp signal		R				T	
SLIP indicator lamp signal		R				T	
Brake warning lamp signal		R				T	

A

B

C

D

E

F

G

H

I

J

LAN

L

M

CAN SYSTEM (TYPE 1)


System Description

AKS00A8P

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

Component Parts and Harness Connector Location

AKS00A8Q

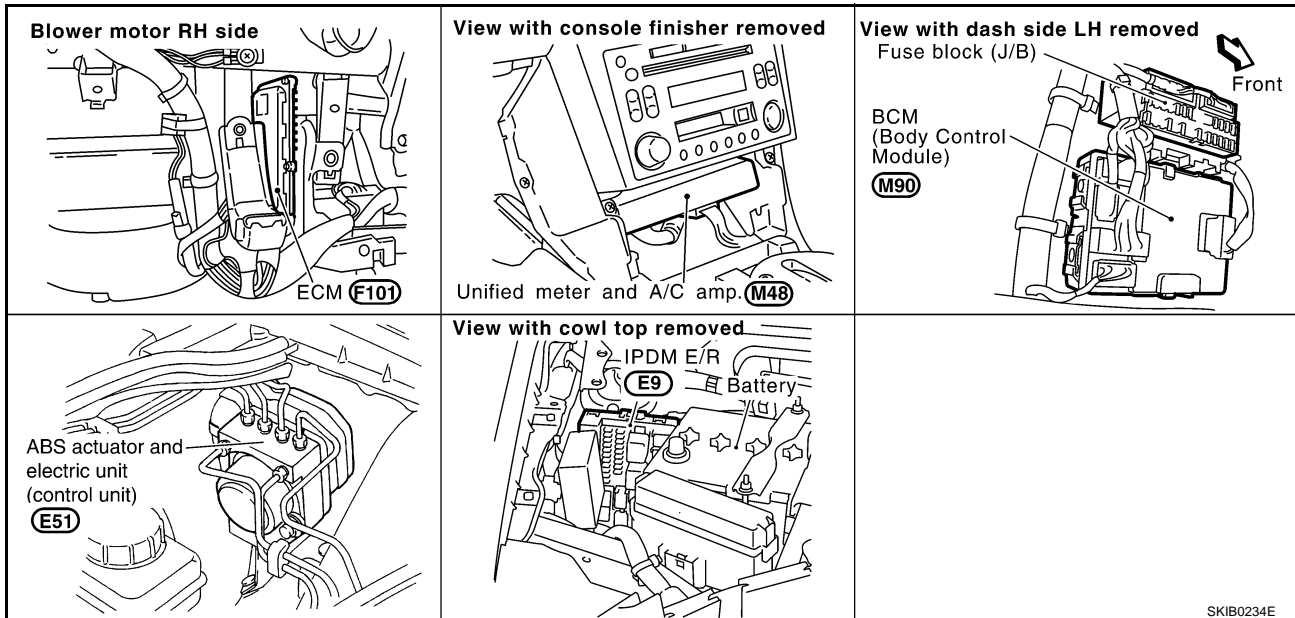

SKIB0234E

CAN SYSTEM (TYPE 1)



[CAN]

Wiring Diagram — CAN —


AKS00ABR

LAN-CAN-01


DATA LINE

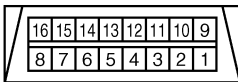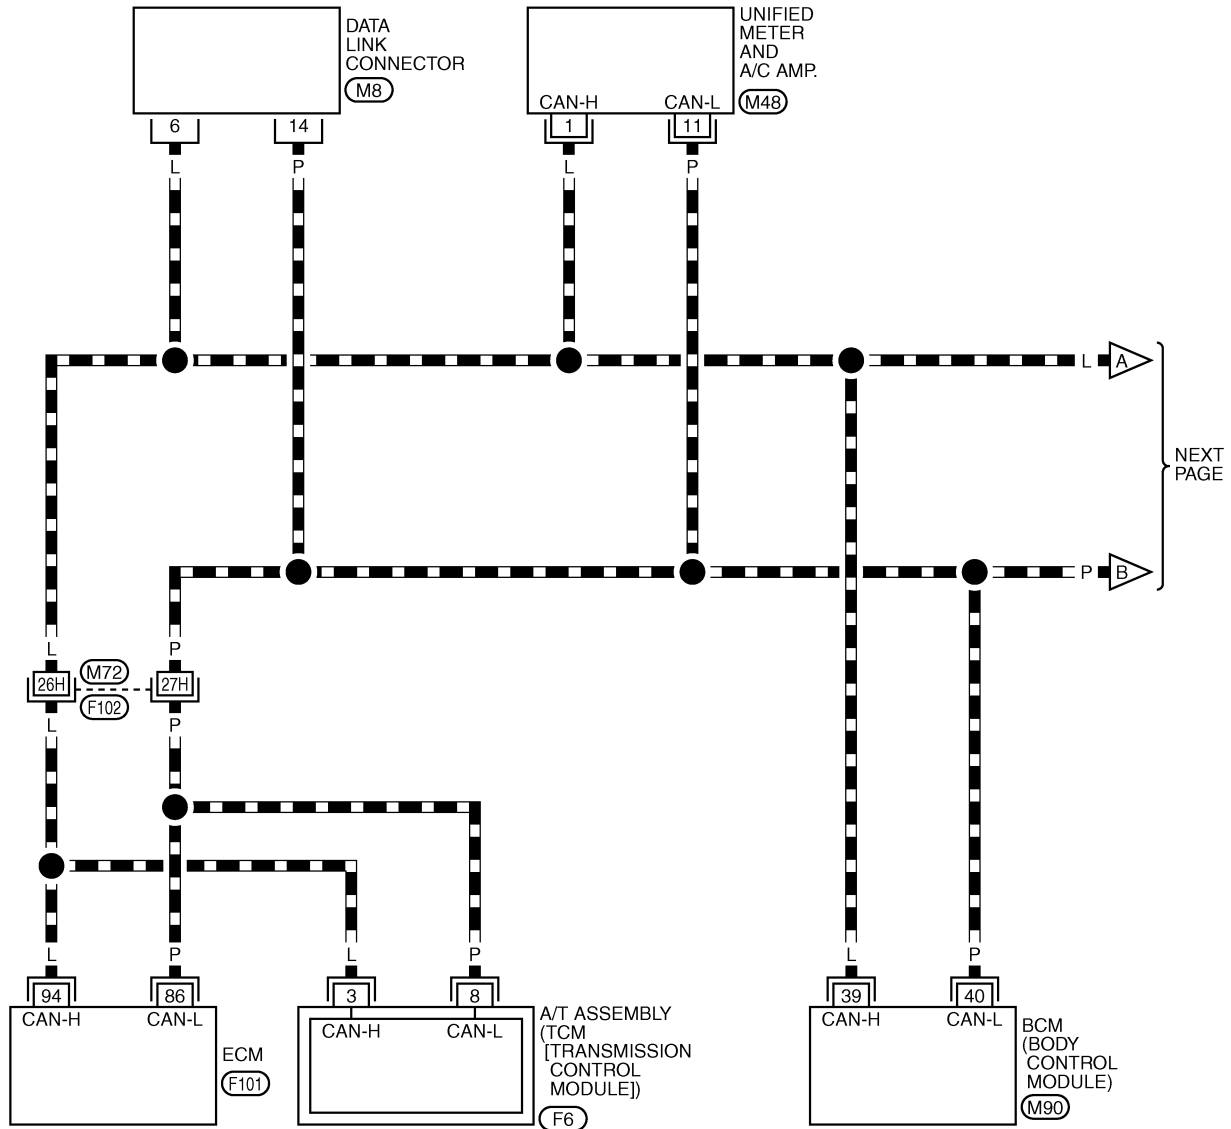

(M8)
W

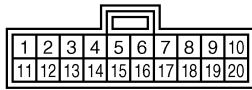

(M48)
GY

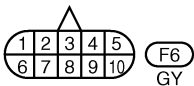

(F6)
GY

REFER TO THE FOLLOWING.


(F102) -SUPER MULTIPLE JUNCTION (SMJ)

(M90), (F101) -ELECTRICAL UNITS

TKWT1860E

LAN-CAN-02

DATA LINE

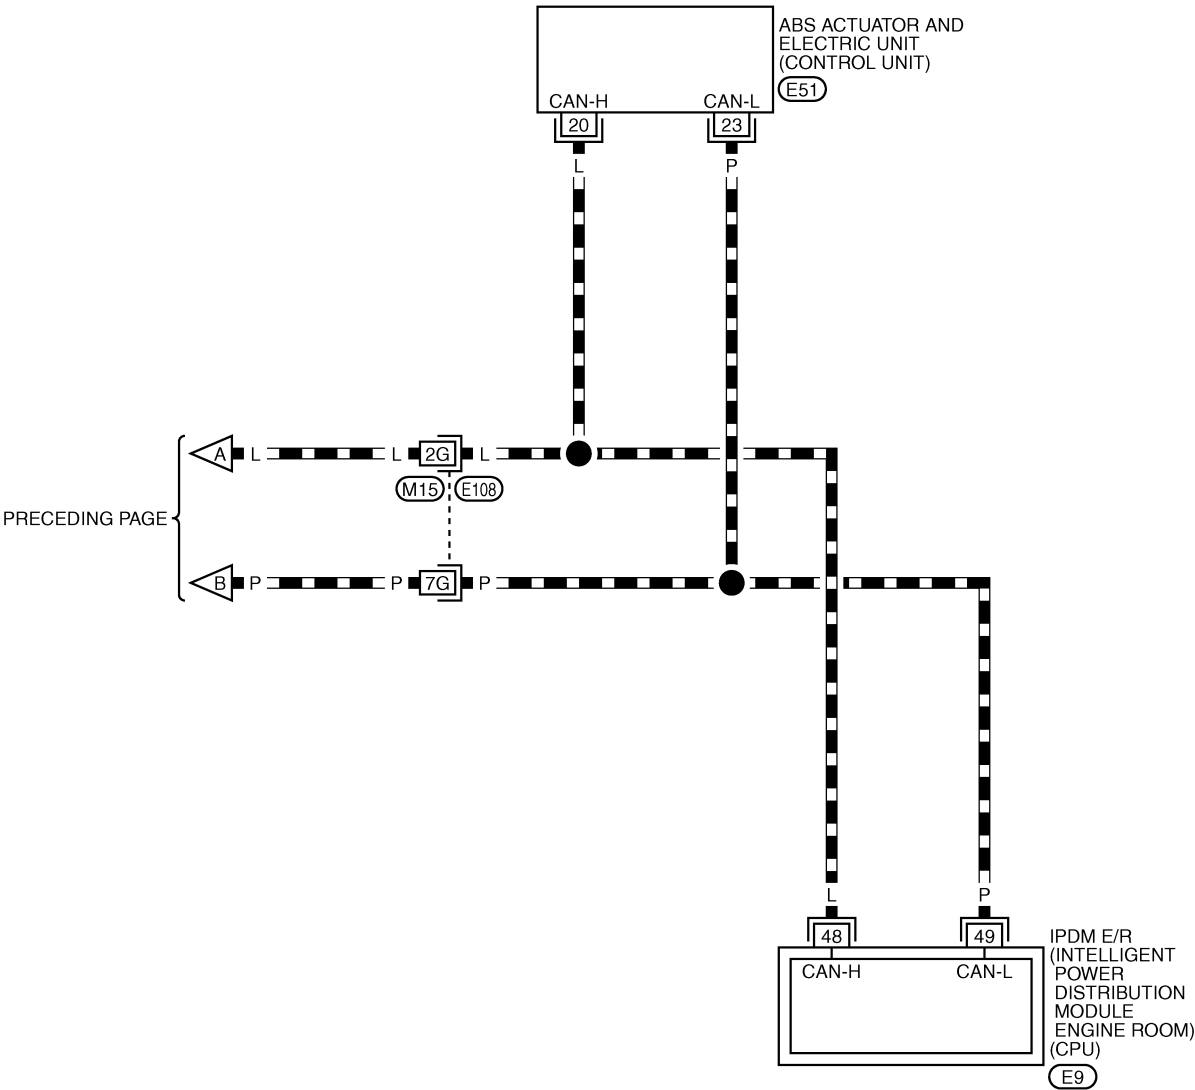

52	51	50	49	48	47	46	45
60	59	58	57	56	55	54	53

E9
W



REFER TO THE FOLLOWING.

(E108) -SUPER MULTIPLE JUNCTION (SMJ)


(E51) -ELECTRICAL UNITS

Work Flow

- When there are no indications of "METER A/C AMP", "BCM" or "IPDM E/R" on "SELECT SYSTEM" display of CONSULT-II, print the "SELECT SYSTEM".

(Example)

NISSAN	
CONSULT-II	
ENGINE	
START (NISSAN BASED VHCL)	
START (RENAULT BASED VHCL)	
SUB MODE	
	LIGHT COPY




SELECT SYSTEM			
ENGINE			
A/T			
ABS			
AIR BAG			
BCM			
METER A/C AMP			
BACK	LIGHT	COPY	

PKIA2093E

- Print all the data of "SELF-DIAG RESULTS" for "ENGINE", "A/T", "METER A/C AMP", "BCM", "ABS" and "IPDM E/R" displayed on CONSULT-II.

(Example)

SELECT DIAG MODE	
WORK SUPPORT	
SELF-DIAG RESULTS	
DATA MONITOR	
DATA MONITOR (SPEC)	
ACTIVE TEST	
FUNCTION TEST	
Scroll Down	
BACK	LIGHT COPY




SELF-DIAG RESULTS	
DTC RESULTS	TIME
CAN COMM CIRCUIT [U1000]	0
F.F.DATA	
ERASE	PRINT
MODE BACK	LIGHT COPY

PKIA2094E


- Print all the data of "DATA MONITOR (CAN DIAG SUPPORT MNTR)" for "ENGINE", "A/T", "METER A/C AMP", "BCM", "ABS" and "IPDM E/R" displayed on CONSULT-II.

(Example)

SELECT DIAG MODE	
WORK SUPPORT	
SELF-DIAG RESULTS	
DATA MONITOR	
DATA MONITOR (SPEC)	
ACTIVE TEST	
FUNCTION TEST	
Scroll Down	
BACK	LIGHT COPY



DATA MONITOR		
SELECT MONITOR ITEM		
ECM INPUT SIGNALS		
MAIN SIGNALS		
CAN DIAG SUPPORT MNTR		
SELECTION FROM MENU		
SETTING	Numerical Display	
MODE BACK	LIGHT COPY	



DATA MONITOR	
MONITOR	NO DTC
CAN COMM	OK
CAN CIRC 1	OK
CAN CIRC 2	OK
CAN CIRC 3	OK
CAN CIRC 4	OK
CAN CIRC 5	UNKWN
CAN CIRC 6	OK
CAN CIRC 7	OK
RECORD	
MODE BACK	LIGHT COPY

PKIA2095E

- Attach the printed sheet of "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" onto the check sheet. Refer to [LAN-16, "CHECK SHEET"](#).
- Based on the indications of "SELECT SYSTEM" and the results of "DATA MONITOR (CAN DIAG SUPPORT MNTR)", put marks "V" onto the items with "No indication", "NG", or "UNKWN" in the check sheet table. Refer to [LAN-16, "CHECK SHEET"](#).

NOTE:

- If "NG" is displayed on "CAN COMM" as "DATA MONITOR (CAN DIAG SUPPORT MNTR)" for the diagnosed control unit, replace the control unit.
 - The "DATA MONITOR (CAN DIAG SUPPORT MNTR)" items, which are not in check sheet table, are not related to diagnostic procedure on service manual.
So it is not necessary to check the status of the "DATA MONITOR (CAN DIAG SUPPORT MNTR)" items not in check sheet table.
- According to the check sheet results (example), start inspection. Refer to [LAN-18, "CHECK SHEET RESULTS \(EXAMPLE\)"](#).

CAN SYSTEM (TYPE 1)

[CAN]

CHECK SHEET

NOTE:

If "NG" is displayed on "CAN COMM" as "DATA MONITOR (CAN DIAG SUPPORT MNTR)" for the diagnosed control unit, replace the control unit.

Check sheet table

	CONSULT indication	CAN system	Tx	Rx					
				ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	CAN CIRC 4	CAN CIRC 6	CAN CIRC 3	CAN CIRC 7
A/T	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 3	—
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	CAN CIRC 3	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 3	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	—	CAN CIRC 2	—	—

Symptoms :

Attach copy of
SELECT SYSTEM

Attach copy of
SELECT SYSTEM

Attach copy of
ENGINE
SELF-DIAG RESULTS

Attach copy of
A/T
SELF-DIAG RESULTS

Attach copy of
METER A/C AMP
SELF-DIAG RESULTS

A
B
C
D
E
F
G
H
I
J
LAN
L
M

Attach copy of
BCM
SELF-DIAG RESULTS

Attach copy of
ABS
SELF-DIAG RESULTS

Attach copy of
IPDM E/R
SELF-DIAG RESULTS

Attach copy of
ENGINE
DATA MONITOR

Attach copy of
A/T
DATA MONITOR

Attach copy of
METER A/C AMP
DATA MONITOR

Attach copy of
BCM
DATA MONITOR

Attach copy of
ABS
DATA MONITOR

Attach copy of
IPDM E/R
DATA MONITOR

CHECK SHEET RESULTS (EXAMPLE)

NOTE:

If "NG" is displayed on "CAN COMM" as "DATA MONITOR (CAN DIAG SUPPORT MNTR)" for the diagnosed control unit, replace the control unit.


Case 1

Check harness between TCM and data link connector. Refer to [LAN-30, "Circuit Check Between TCM and Data Link Connector"](#)

	CONSULT indication	CAN system	Tx	Rx					
				ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	CAN CIRC 4 ✓	CAN CIRC 6 ✓	CAN CIRC 3 ✓	CAN CIRC 7 ✓
A/T	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4 ✓	—	CAN CIRC 3 ✓	—
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2 ✓	CAN CIRC 3 ✓	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2 ✓	—	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2 ✓	CAN CIRC 3 ✓	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3 ✓	—	—	CAN CIRC 2	—	—

SKIB0130E

/// : Malfunctioning part

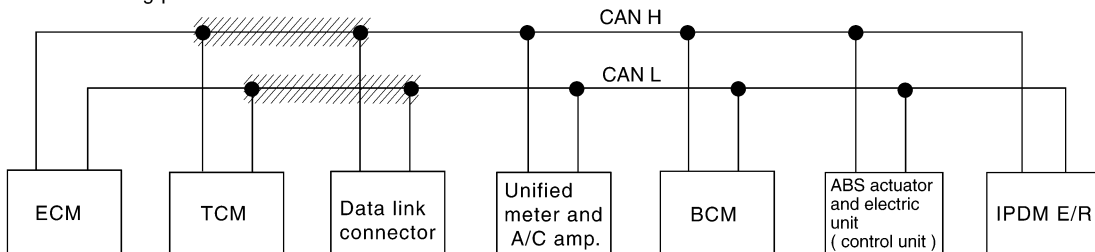

PKIA2007E

CAN SYSTEM (TYPE 1)

[CAN]


Case 2

Check harness between data link connector and unified meter and A/C amp. Refer to [LAN-31, "Circuit Check Between Data Link Connector and Unified Meter and A/C Amp."](#) .

	CONSULT indication	CAN system	Tx	Rx					
				ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	CAN CIRC 4 ✓	CAN CIRC 6 ✓	CAN CIRC 3 ✓	CAN CIRC 7 ✓
A/T	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4 ✓	—	CAN CIRC 3 ✓	—
METER A/C AMP	No indication ✓	—	CAN CIRC 1	CAN CIRC 2	CAN CIRC 3	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication ✓	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2 ✓	CAN CIRC 3 ✓	—	—	—	—
IPDM E/R	No indication ✓	—	CAN CIRC 1	CAN CIRC 3	—	—	CAN CIRC 2	—	—

SKIB0131E

//// : Malfunctioning part

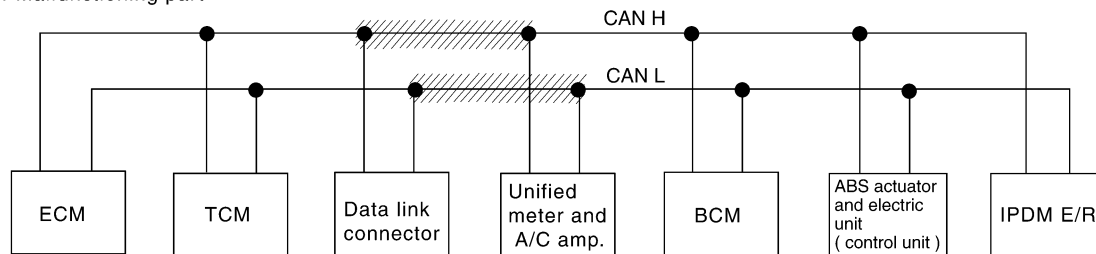

PKIA2008E

CAN SYSTEM (TYPE 1)

[CAN]


Case 3

Check harness between unified meter and A/C amp. and BCM. Refer to [LAN-31, "Circuit Check Between Unified Meter and A/C Amp. and BCM"](#) .

	CONSULT indication	CAN system	Tx	Rx					
				ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	CAN CIRC 4	CAN CIRC 6 ✓	CAN CIRC 3 ✓	CAN CIRC 7 ✓
A/T	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 3 ✓	—
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	CAN CIRC 3	—	CAN CIRC 4 ✓	CAN CIRC 5 ✓	—
BCM	No indication ✓	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2 ✓	CAN CIRC 3 ✓	—	—	—	—
IPDM E/R	No indication ✓	—	CAN CIRC 1	CAN CIRC 3	—	—	CAN CIRC 2	—	—

SKIB0132E

//// : Malfunctioning part

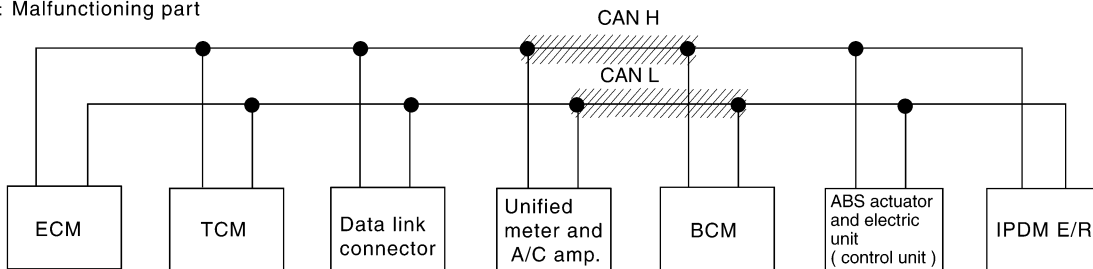

PKIA2009E

CAN SYSTEM (TYPE 1)

[CAN]


Case 4

Check harness between BCM and ABS actuator and electric unit (control unit). Refer to [LAN-31, "Circuit Check Between BCM and ABS Actuator and Electric Unit \(Control Unit\)"](#).

	CONSULT indication	CAN system	Tx	Rx					
				ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	CAN CIRC 4	CAN CIRC 6	CAN CIRC 3 ✓	CAN CIRC 7 ✓
A/T	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 3 ✓	—
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	CAN CIRC 3	—	CAN CIRC 4	CAN CIRC 5 ✓	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 3 ✓
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2 ✓	CAN CIRC 3 ✓	—	—	—	—
IPDM E/R	No indication ✓	—	CAN CIRC 1	CAN CIRC 3	—	—	CAN CIRC 2	—	—

SKIB0133E

//// : Malfunctioning part

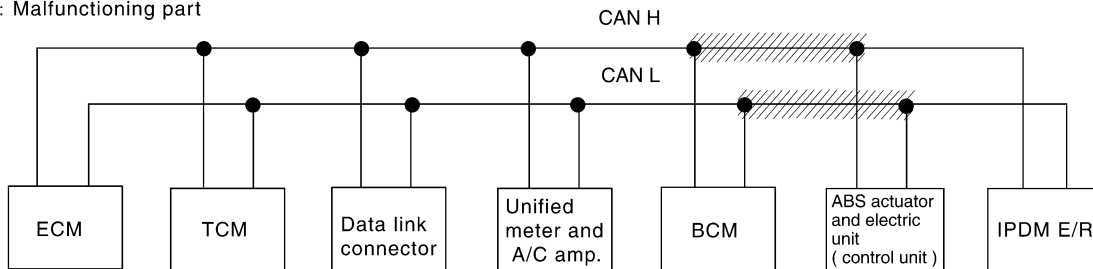

PKIA2010E

CAN SYSTEM (TYPE 1)

[CAN]


Case 5

Check ECM circuit. Refer to [LAN-32, "ECM Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx					
				ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1 ✓	—	CAN CIRC 2 ✓	CAN CIRC 4 ✓	CAN CIRC 6 ✓	CAN CIRC 3 ✓	CAN CIRC 7 ✓
A/T	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 3	—
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	CAN CIRC 3	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 3	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	—	CAN CIRC 2	—	—

SKIB0134E

/// : Malfunctioning part

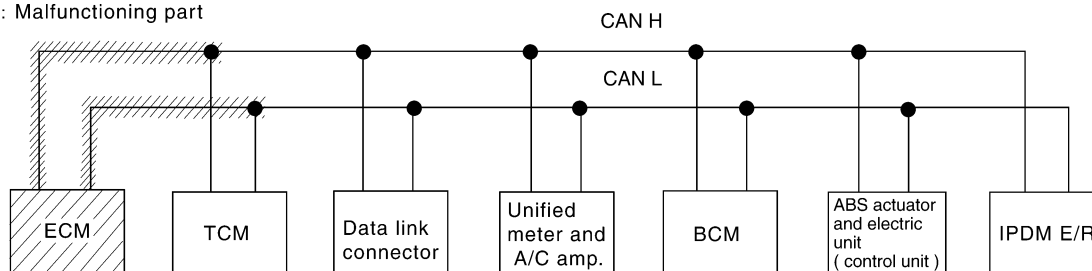

PKIA2011E

CAN SYSTEM (TYPE 1)

[CAN]


Case 6

Check TCM circuit. Refer to [LAN-33. "TCM Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx					
				ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 2 ✓	CAN CIRC 4	CAN CIRC 6	CAN CIRC 3	CAN CIRC 7
A/T	—	CAN COMM	CAN CIRC 1	CAN CIRC 2 ✓	—	CAN CIRC 4 ✓	—	CAN CIRC 3 ✓	—
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	CAN CIRC 3 ✓	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 3 ✓	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	—	CAN CIRC 2	—	—

SKIB0135E

/// : Malfunctioning part

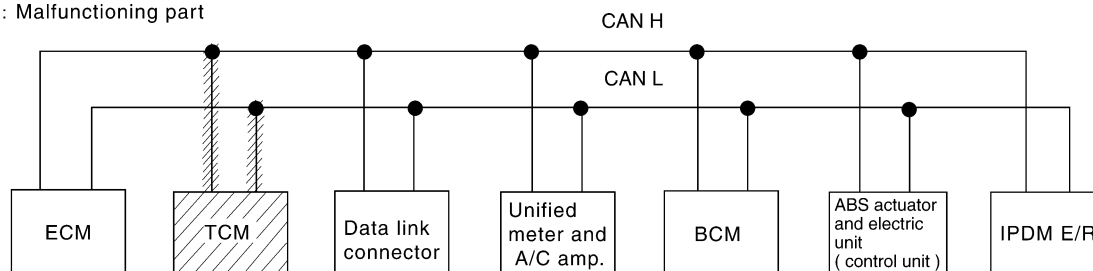

PKIA2012E

CAN SYSTEM (TYPE 1)

[CAN]


Case 7

Check data link connector circuit. Refer to [LAN-33, "Data Link Connector Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx					
				ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	CAN CIRC 4	CAN CIRC 6	CAN CIRC 3	CAN CIRC 7
A/T	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 3	—
METER A/C AMP	No indication ✓	—	CAN CIRC 1	CAN CIRC 2	CAN CIRC 3	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication ✓	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 3	—	—	—	—
IPDM E/R	No indication ✓	—	CAN CIRC 1	CAN CIRC 3	—	—	CAN CIRC 2	—	—

SKIB0136E

//// : Malfunctioning part

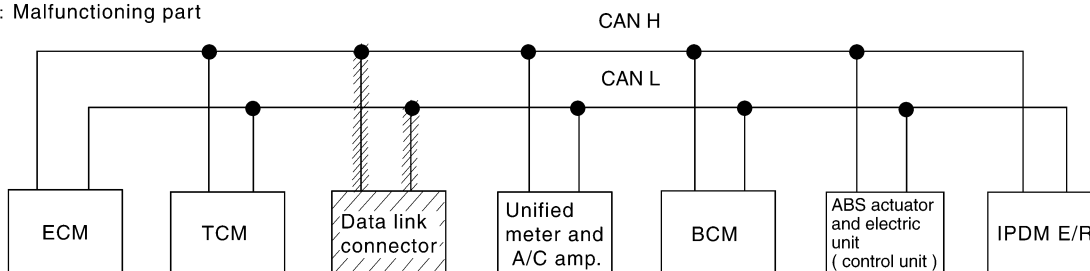

PKIA2013E

CAN SYSTEM (TYPE 1)

[CAN]


Case 8

Check unified meter and A/C amp. circuit. Refer to [LAN-34, "Unified Meter and A/C Amp. Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx					
				ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	CAN CIRC 4 ✓	CAN CIRC 6	CAN CIRC 3	CAN CIRC 7
A/T	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4 ✓	—	CAN CIRC 3	—
METER A/C AMP	No indication ✓	—	CAN CIRC 1	CAN CIRC 2	CAN CIRC 3	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4 ✓	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 3	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	—	CAN CIRC 2	—	—

SKIB0137E

//// : Malfunctioning part

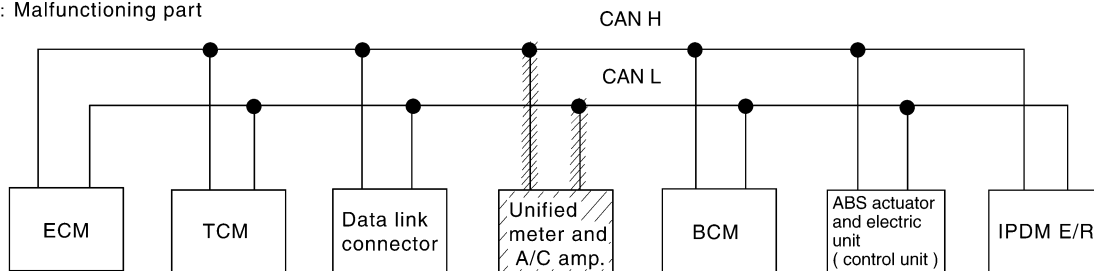

PKIA2014E

CAN SYSTEM (TYPE 1)

[CAN]


Case 9

Check BCM circuit. Refer to [LAN-34, "BCM Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx					
				ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	CAN CIRC 4	CAN CIRC 6 ✓	CAN CIRC 3	CAN CIRC 7
A/T	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 3	—
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	CAN CIRC 3	—	CAN CIRC 4 ✓	CAN CIRC 5	—
BCM	No indication ✓	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 3	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	—	CAN CIRC 2 ✓	—	—

SKIB0138E

//// : Malfunctioning part

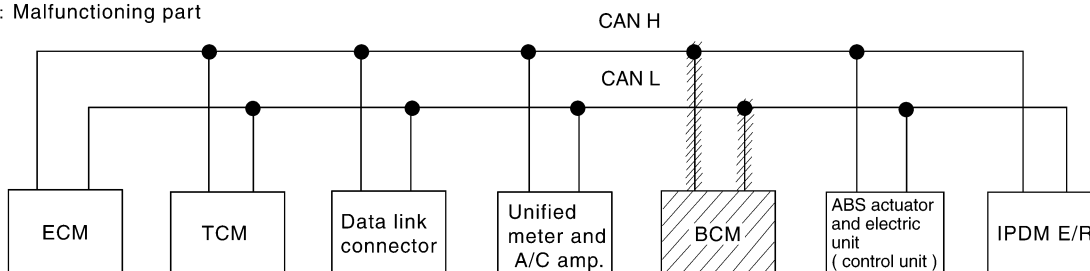

PKIA2015E

CAN SYSTEM (TYPE 1)

[CAN]


Case 10

Check ABS actuator and electric unit (control unit) circuit. Refer to [LAN-35, "ABS Actuator and Electric Unit \(Control Unit\) Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx					
				ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	CAN CIRC 4	CAN CIRC 6	CAN CIRC 3 ✓	CAN CIRC 7
A/T	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 3 ✓	—
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	CAN CIRC 3	—	CAN CIRC 4	CAN CIRC 5 ✓	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1 ✓	CAN CIRC 2	CAN CIRC 3	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	—	CAN CIRC 2	—	—

SKIB0139E

//// : Malfunctioning part

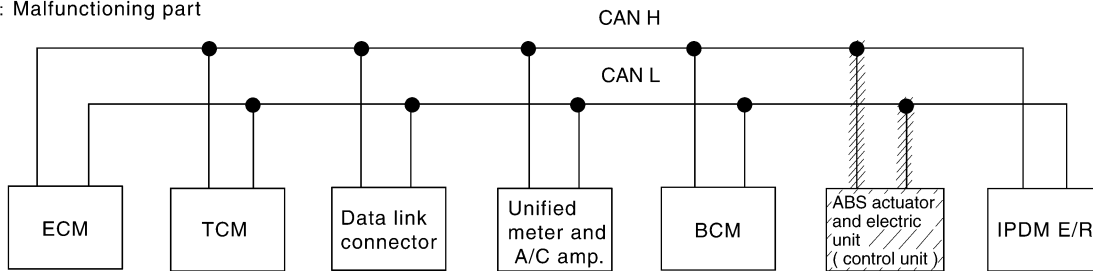

PKIA2016E

CAN SYSTEM (TYPE 1)

[CAN]


Case 11

Check IPDM E/R circuit. Refer to [LAN-35, "IPDM E/R Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx					
				ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	CAN CIRC 4	CAN CIRC 6	CAN CIRC 3	CAN CIRC 7 ✓
A/T	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 3	—
METER A/C AMP	No indication ✓	—	CAN CIRC 1	CAN CIRC 2	CAN CIRC 3	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication ✓	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 3 ✓
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 3	—	—	—	—
IPDM E/R	No indication ✓	—	CAN CIRC 1	CAN CIRC 3	—	—	CAN CIRC 2	—	—

SKIB0140E

/// : Malfunctioning part

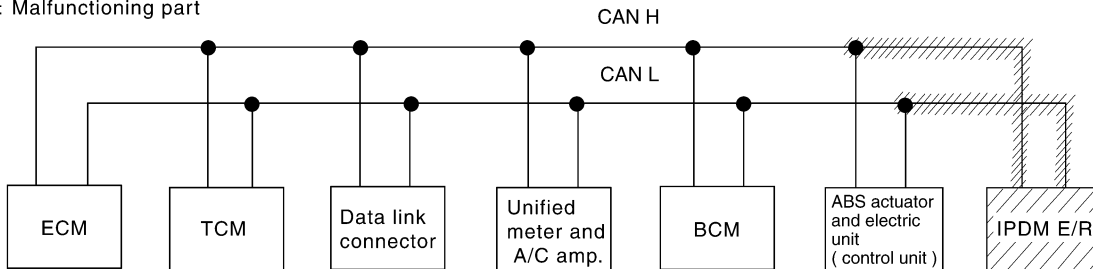

PKIA2017E

Case 12

Check CAN communication circuit. Refer to [LAN-36, "CAN Communication Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx					
				ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1 ✓	—	CAN CIRC 2 ✓	CAN CIRC 4 ✓	CAN CIRC 6 ✓	CAN CIRC 3 ✓	CAN CIRC 7 ✓
A/T	—	CAN COMM	CAN CIRC 1	CAN CIRC 2 ✓	—	CAN CIRC 4 ✓	—	CAN CIRC 3 ✓	—
METER A/C AMP	No indication ✓	—	CAN CIRC 1	CAN CIRC 2	CAN CIRC 3	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication ✓	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1 ✓	CAN CIRC 2	CAN CIRC 3	—	—	—	—
IPDM E/R	No indication ✓	—	CAN CIRC 1	CAN CIRC 3	—	—	CAN CIRC 2	—	—

SKIB0141E

Case 13

Check IPDM E/R Ignition relay circuit continuously sticks "OFF". Refer to [LAN-38, "IPDM E/R Ignition Relay Circuit Check"](#).

	CONSULT indication	CAN system	Tx	Rx					
				ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 2 ✓	CAN CIRC 4	CAN CIRC 6	CAN CIRC 3 ✓	CAN CIRC 7
A/T	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	—	CAN CIRC 3	—
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	CAN CIRC 3 ✓	—	CAN CIRC 4	CAN CIRC 5 ✓	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 3	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	—	CAN CIRC 2	—	—

SKIB0142E

Case 14

Check IPDM E/R Ignition relay circuit continuously sticks "ON". Refer to [LAN-38, "IPDM E/R Ignition Relay Circuit Check"](#).

	CONSULT indication	CAN system	Tx	Rx					
				ECM	TCM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	CAN CIRC 4	CAN CIRC 6	CAN CIRC 3	CAN CIRC 7
A/T	—	CAN COMM	CAN CIRC 1	CAN CIRC 2 ✓	—	CAN CIRC 4 ✓	—	CAN CIRC 3	—
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	CAN CIRC 3	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2 ✓	CAN CIRC 3	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	—	CAN CIRC 2	—	—

SKIB0143E

Circuit Check Between TCM and Data Link Connector

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connector for damage, bend and loose connection (connector-side and harness-side).
 - Harness connector F102
 - Harness connector M72

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect A/T assembly connector and harness connector F102.
2. Check continuity between A/T assembly harness connector F6 terminals 3 (L), 8 (P) and harness connector F102 terminals 26H (L), 27H (P).


3 (L) – 26H (L) : Continuity should exist.

8 (P) – 27H (P) : Continuity should exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness.

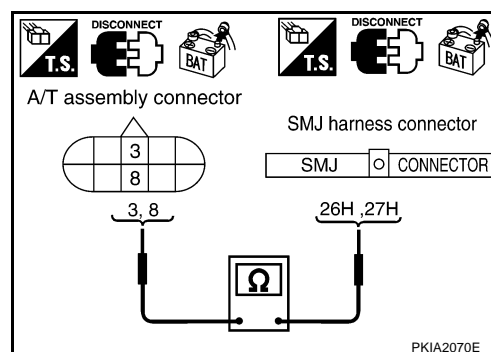

3. CHECK HARNESS FOR OPEN CIRCUIT

Check continuity between harness connector M72 terminals 26H (L), 27H (P) and data link connector M8 terminals 6 (L), 14 (P).


26H (L) – 6 (L) : Continuity should exist.

27H (P) – 14 (P) : Continuity should exist.

OK or NG

OK >> Reconnect all connectors to perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-15, "Work Flow"](#).

NG >> Repair harness.

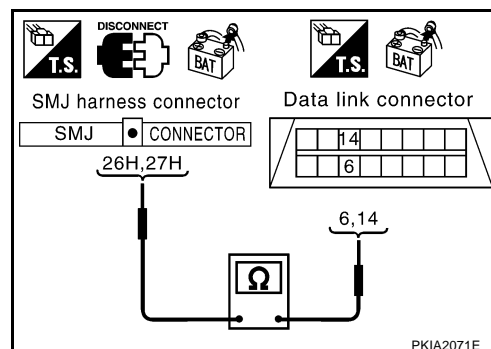

Circuit Check Between Data Link Connector and Unified Meter and A/C Amp.

AKS00A8U

1. CHECK HARNESS FOR OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Disconnect ECM connector and unified meter and A/C amp. connector.
4. Check continuity between data link connector M8 terminals 6 (L), 14 (P) and unified meter and A/C amp. harness connector M48 terminals 1 (L), 11 (P).


6 (L) – 1 (L) : Continuity should exist.

14 (P) – 11 (P) : Continuity should exist.

OK or NG

OK >> Reconnect all connectors to perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-15, "Work Flow"](#).

NG >> Repair harness.

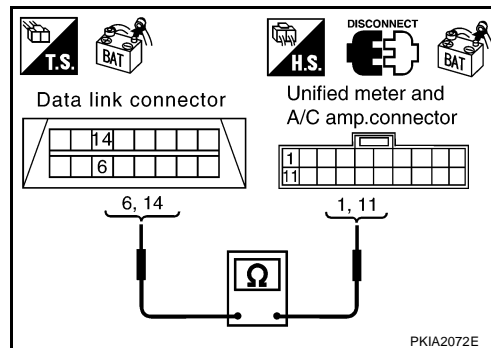

Circuit Check Between Unified Meter and A/C Amp. and BCM

AKS00A8V

1. CHECK HARNESS FOR OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Disconnect the following connectors.
 - ECM connector
 - Unified meter and A/C amp. connector
 - BCM connector
4. Check continuity between unified meter and A/C amp. harness connector M48 terminals 1 (L), 11 (P) and BCM harness connector M90 terminals 39 (L), 40 (P).


1 (L) – 39 (L) : Continuity should exist.

11 (P) – 40 (P) : Continuity should exist.

OK or NG

OK >> Reconnect all connectors to perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-15, "Work Flow"](#).

NG >> Repair harness.

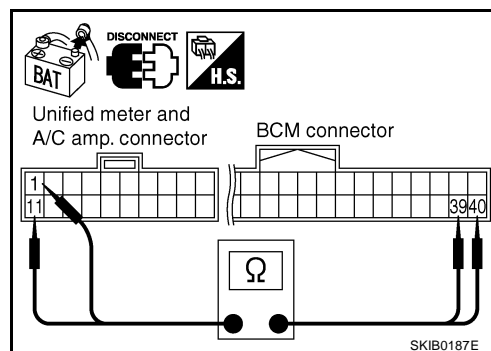

Circuit Check Between BCM and ABS Actuator and Electric Unit (Control Unit)

AKS00A8W

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connector for damage, bend and loose connection (connector-side and harness-side).
 - Harness connector M15
 - Harness connector E108

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect BCM connector and harness connector M15.
2. Check continuity between BCM harness connector M90 terminals 39 (L), 40 (P) and harness connector M15 terminals 2G (L), 7G (P).


39 (L) – 2G (L) : Continuity should exist.

40 (P) – 7G (P) : Continuity should exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness.

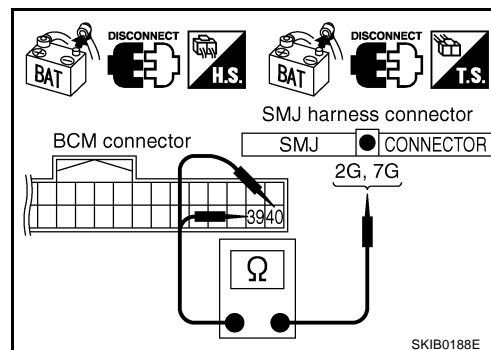

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ABS actuator and electric unit (control unit) connector.
2. Check continuity between harness connector E108 terminals 2G (L), 7G (P) and ABS actuator and electric unit (control unit) harness connector E51 terminals 20 (L), 23 (P).


2G (L) – 20 (L) : Continuity should exist.

7G (P) – 23 (P) : Continuity should exist.

OK or NG

OK >> Reconnect all connectors to perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-15, "Work Flow"](#).

NG >> Repair harness.

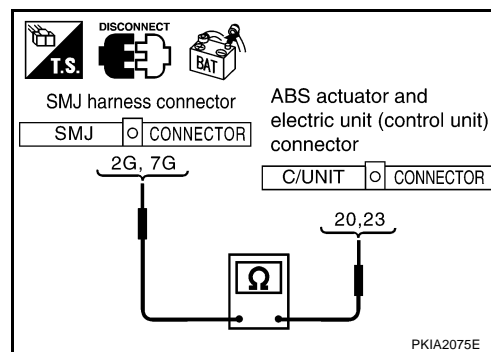

ECM Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of ECM damage, bend and loose connection (control module-side and harness-side).

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect ECM connector.
2. Check resistance between ECM harness connector F101 terminals 94 (L) and 86 (P).

94 (L) – 86 (P) : Approx. 108 – 132Ω

OK or NG

OK >> Replace ECM.

NG >> Repair harness between ECM and A/T assembly.

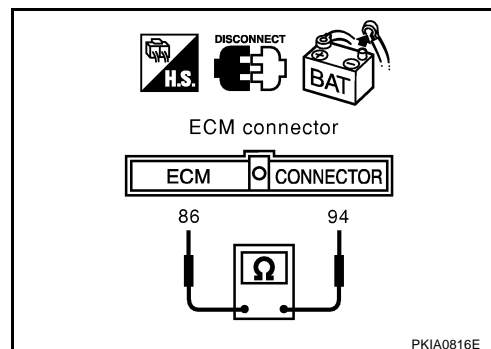

TCM Circuit Check

AKS00A8Y

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of A/T assembly for damage, bend and loose connection (control module-side and harness-side).

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect A/T assembly connector.
2. Check resistance between A/T assembly harness connector F6 terminals 3 (L) and 8 (P).

6 (L) – 8 (P)**: Approx. 54 – 66Ω**OK or NG

OK >> Replace A/T assembly.

NG >> Repair harness between A/T assembly and harness connector F102.

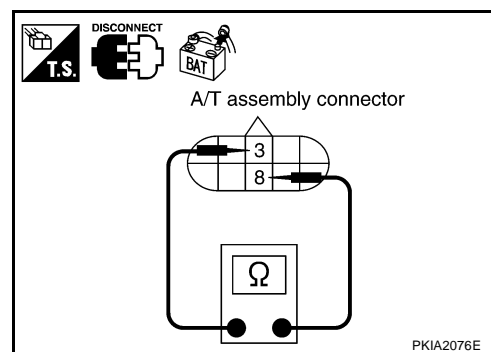**Data Link Connector Circuit Check**

AKS00A8Z

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of data link connector for damage, bend and loose connection (connector-side and harness-side).

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

Check resistance between data link connector M8 terminals 6 (L) and 14 (P).

6 (L) – 14 (P)**: Approx. 54 – 66Ω**OK or NG

OK >> Perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-15, "Work Flow"](#).

NG >> Repair harness between data link connector and unified meter and A/C amp.

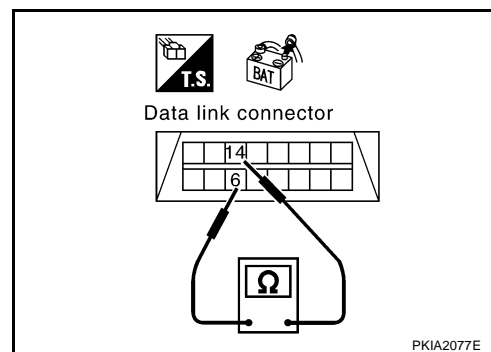

Unified Meter and A/C Amp. Circuit Check

AKS00A90

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of unified meter and A/C amp. for damage, bend and loose connection (meter-side and harness-side).

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect unified meter and A/C amp. connector.
2. Check resistance between unified meter and A/C amp. harness connector M48 terminals 1 (L) and 11 (P).


1 (L) – 11 (P)

: Approx. 54 – 66Ω

OK or NG

OK >> Replace unified meter and A/C amp.

NG >> Repair harness between unified meter and A/C amp. and BCM.

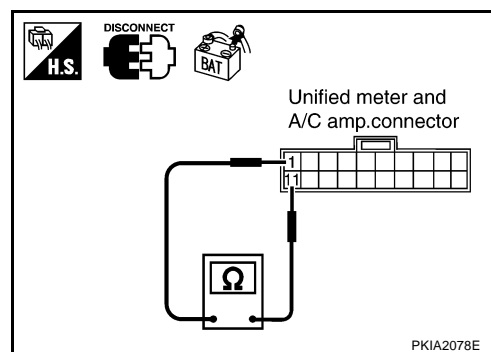

AKS00A91

BCM Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of BCM for damage, bend and loose connection (control module-side and harness-side).

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect BCM connector.
2. Check resistance between BCM harness connector M90 terminals 39 (L) and 40 (P).


39 (L) – 40 (P)

: Approx. 54 – 66Ω

OK or NG

OK >> Replace BCM.

NG >> Repair harness between BCM and harness connector M15.

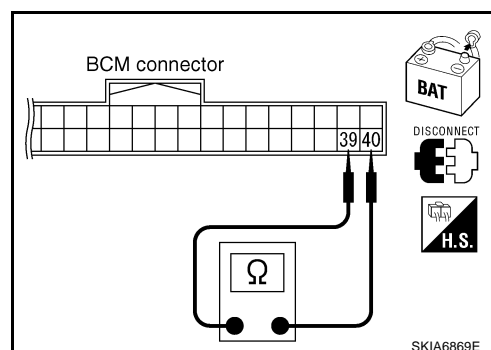

ABS Actuator and Electric Unit (Control Unit) Circuit Check

AKS00A92

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of ABS actuator and electric unit (control unit) for damage, bend and loose connection (control unit-side and harness-side).

OK or NG

- OK >> GO TO 2.
NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect ABS actuator and electric unit (control unit) connector.
2. Check resistance between ABS actuator and electric unit (control unit) harness connector E51 terminals 20 (L) and 23 (P).

20 (L) – 23 (P)

: Approx. 54 – 66Ω

OK or NG

- OK >> Replace ABS actuator and electric unit (control unit).
NG >> Repair harness between ABS actuator and electric unit (control unit) and IPDM E/R.

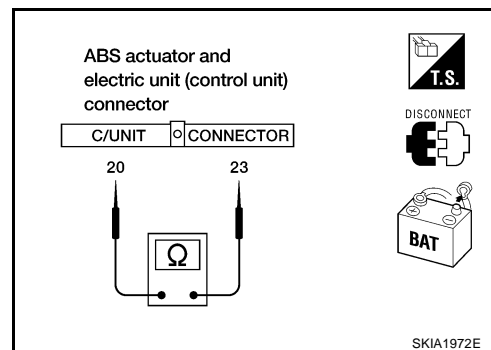

AKS00A93

IPDM E/R Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of IPDM E/R for damage, bend and loose connection (control module-side and harness-side).

OK or NG

- OK >> GO TO 2.
NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect IPDM E/R connector.
2. Check resistance between IPDM E/R harness connector E9 terminals 48 (L) and 49 (P).

48 (L) – 49 (P)

: Approx. 108 – 132Ω

OK or NG

- OK >> Replace IPDM E/R.
NG >> Repair harness between IPDM E/R and ABS actuator and electric unit (control unit).

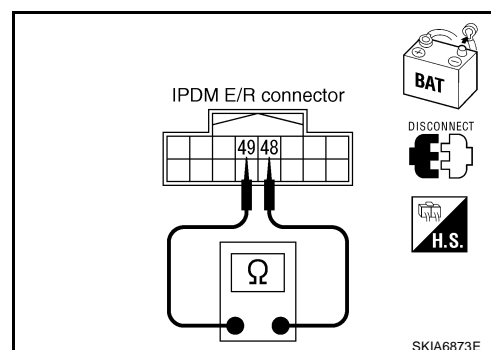

CAN Communication Circuit Check

AKS00A94

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connector for damage, bend and loose connection (control module-side, meter-side, control unit-side and harness-side).
 - ECM
 - A/T assembly
 - Unified meter and A/C amp.
 - BCM
 - ABS actuator and electric unit (control unit)
 - IPDM E/R
 - Between ECM and IPDM E/R

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR SHORT CIRCUIT

1. Disconnect following connectors.
 - ECM connector
 - A/T assembly connector
 - Harness connector F102
2. Check continuity between ECM harness connector F101 terminals 94 (L) and 86 (P).


94 (L) – 86 (P) : Continuity should not exist.

OK or NG

OK >> GO TO 3.

NG >> Check the following harnesses. If any harness is damaged, repair the harness.

- Harness between ECM and A/T assembly.
- Harness between ECM and harness connector F102.

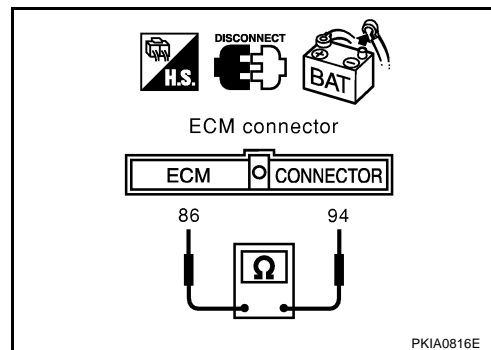

3. CHECK HARNESS FOR SHORT CIRCUIT

Check continuity between ECM harness connector F101 terminals 94 (L), 86 (P) and ground.

94 (L) – ground : Continuity should not exist.


86 (P) – ground : Continuity should not exist.

OK or NG

OK >> GO TO 4.

NG >> Check the following harnesses. If any harness is damaged, repair the harness.

- Harness between ECM and A/T assembly.
- Harness between ECM and harness connector F102.

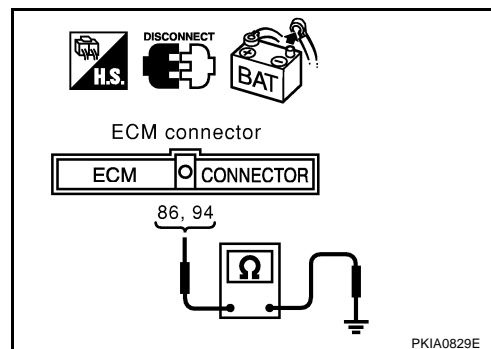

4. CHECK HARNESS FOR SHORT CIRCUIT


- Disconnect following connectors.
 - Unified meter and A/C amp. connector
 - BCM connector
 - Harness connector M15
- Check continuity between data link connector M8 terminals 6 (L) and 14 (P).

6 (L) – 14 (P) : Continuity should not exist.

OK or NG

OK >> GO TO 5.

- NG >> Check the following harnesses. If any harness is damaged, repair the harness.
- Harness between data link connector and harness connector M72.
 - Harness between data link connector and unified meter and A/C amp.
 - Harness between data link connector and BCM.
 - Harness between data link connector and harness connector M15.

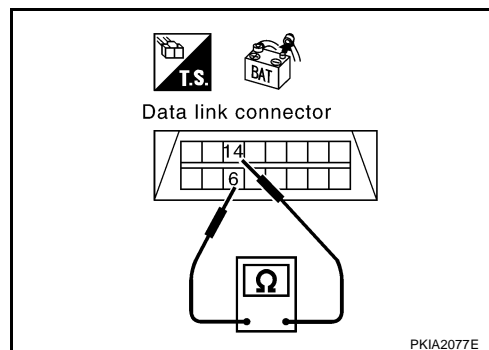

5. CHECK HARNESS FOR SHORT CIRCUIT

Check continuity between data link connector M8 terminals 6 (L), 14 (P) and ground.


6 (L) – ground : Continuity should not exist.

14 (P) – ground : Continuity should not exist.

OK or NG

OK >> GO TO 6.

- NG >> Check the following harnesses. If any harness is damaged, repair the harness.
- Harness between data link connector and harness connector M72.
 - Harness between data link connector and unified meter and A/C amp.
 - Harness between data link connector and BCM.
 - Harness between data link connector and harness connector M15.

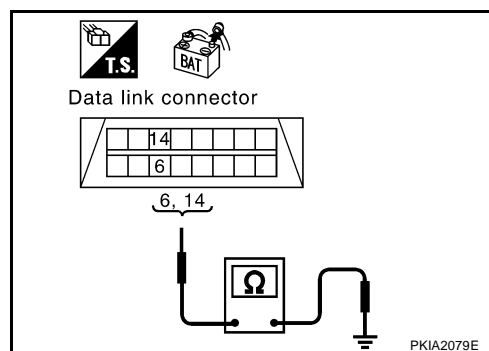

6. CHECK HARNESS FOR SHORT CIRCUIT


- Disconnect ABS actuator and electric unit (control unit) connector and IPDM E/R connector.
- Check continuity between IPDM E/R harness connector E9 terminals 48 (L) and 49 (P).

48 (L) – 49 (P) : Continuity should not exist.

OK or NG

OK >> GO TO 7.

- NG >> Check the following harnesses. If any harness is damaged, repair the harness.
- Harness between IPDM E/R and ABS actuator and electric unit (control unit).
 - Harness between IPDM E/R and harness connector E108.

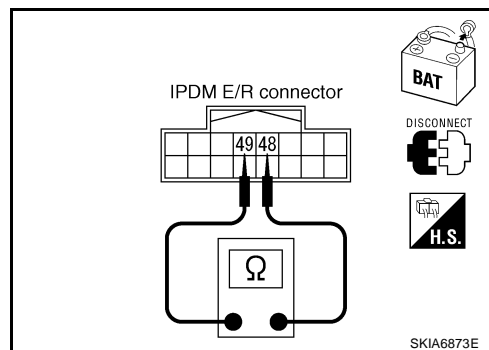

7. CHECK HARNESS FOR SHORT CIRCUIT

Check continuity between IPDM E/R harness connector E9 terminals 48 (L), 49 (P) and ground.

48 (L) – ground : Continuity should not exist.


49 (P) – ground : Continuity should not exist.

OK or NG

OK >> GO TO 8.

NG >> Check the following harnesses. If any harness is damaged, repair the harness.

- Harness between IPDM E/R and ABS actuator and electric unit (control unit).
- Harness between IPDM E/R and harness connector E108.

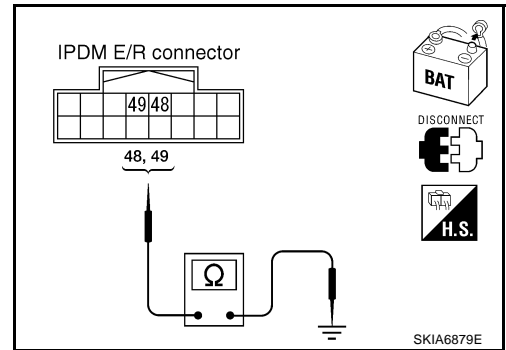

8. ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION

Check components inspection. Refer to [LAN-38, "ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION"](#).

OK or NG

OK >> Reconnect all connectors to perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-15, "Work Flow"](#).

NG >> Replace ECM and/or IPDM E/R.

IPDM E/R Ignition Relay Circuit Check

AKS00A95

Check the following. If no problem is found, replace the IPDM E/R.

- IPDM E/R power supply circuit. Refer to [PG-28, "IPDM E/R Power/Ground Circuit Inspection"](#).
- Ignition power supply circuit. Refer to [PG-11, "IGNITION POWER SUPPLY — IGNITION SW. IN "ON" AND/OR "START""](#).


Component Inspection

ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION

AKS00A96

- Remove ECM and IPDM E/R from vehicle.
- Check resistance between ECM terminals 94 and 86.
- Check resistance between IPDM E/R terminals 48 and 49.

Unit	Terminal	Resistance value (Ω) (Approx.)
ECM	94 - 86	108 - 132
IPDM E/R	48 - 49	

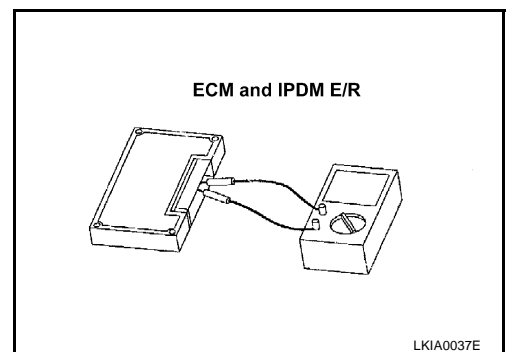


CAN SYSTEM (TYPE 2)

System Description

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

Component Parts and Harness Connector Location

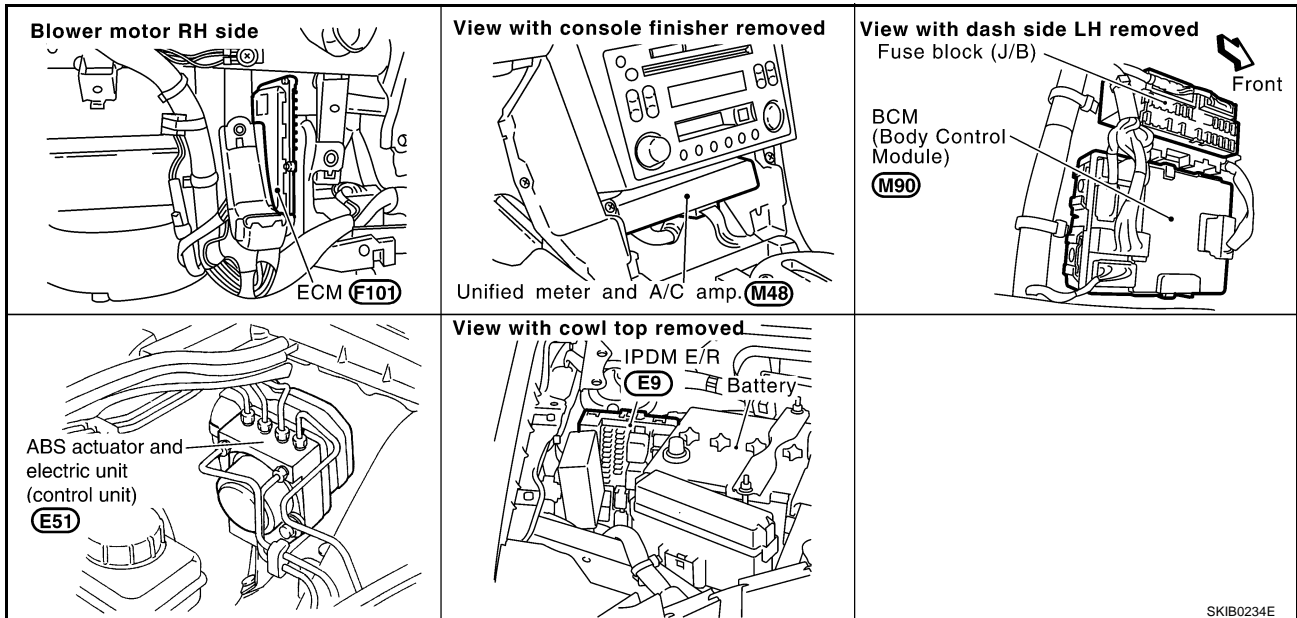

CAN SYSTEM (TYPE 2)




[CAN]

Wiring Diagram — CAN —

AKS00A99

LAN-CAN-03

DATA LINE

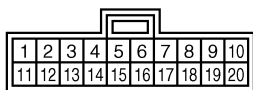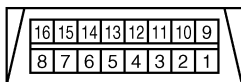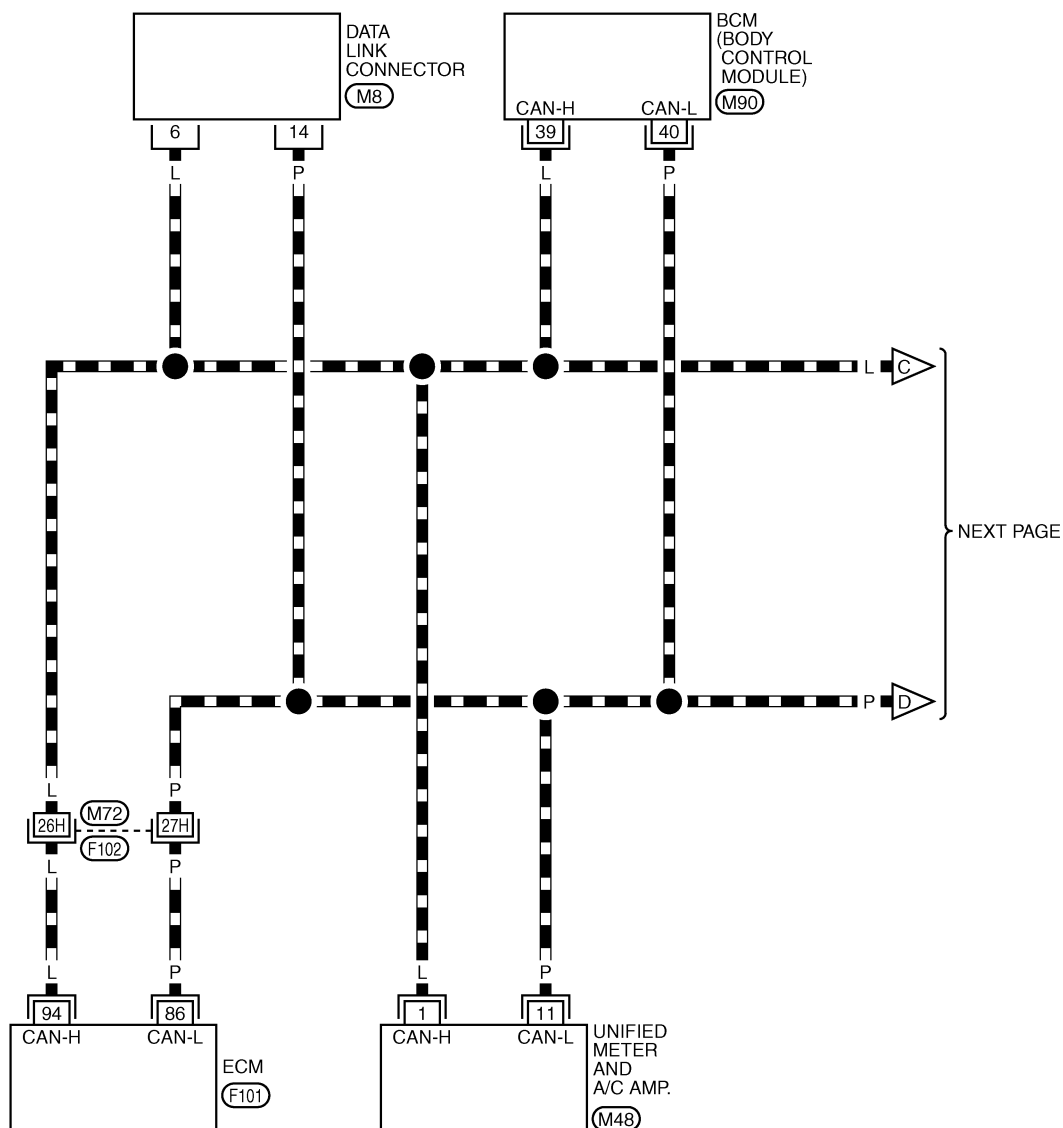


REFER TO THE FOLLOWING.

(F102) -SUPER MULTIPLE JUNCTION (SMJ)

(M90), (F101) -ELECTRICAL UNITS

TKWT1862E

DATA LINE

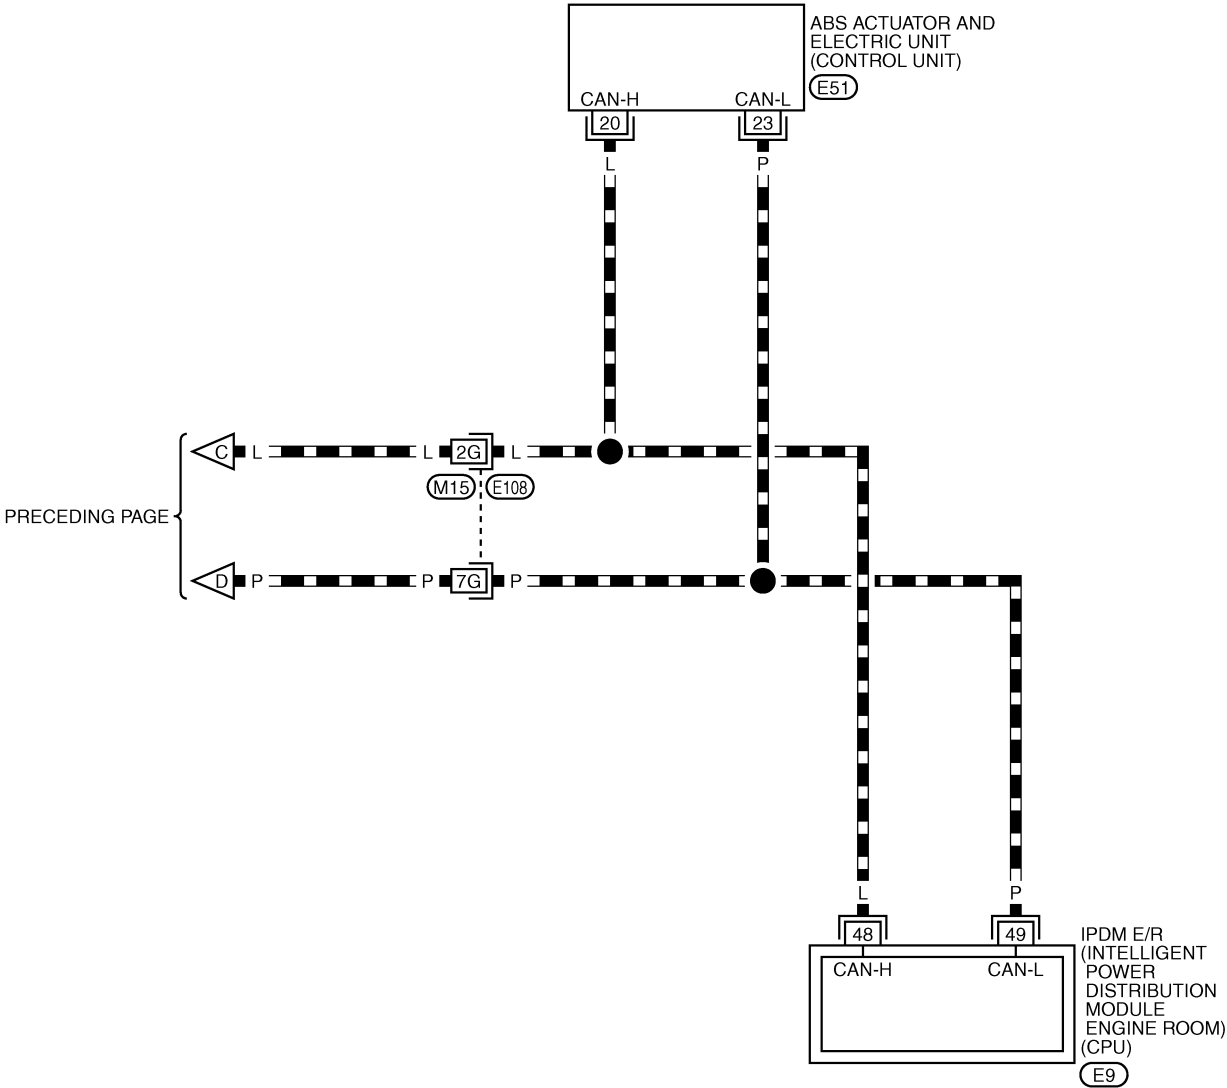

52	51	50	49	48	47	46	45
60	59	58	57	56	55	54	53

E9
W



REFER TO THE FOLLOWING.

E108 -SUPER MULTIPLE JUNCTION (SMJ)

E51 -ELECTRICAL UNITS

Work Flow

AKS00A9A

- When there are no indications of "METER A/C AMP", "BCM" or "IPDM E/R" on "SELECT SYSTEM" display of CONSULT-II, print the "SELECT SYSTEM".

(Example)

NISSAN	
CONSULT- II	
ENGINE	
START (NISSAN BASED VHCL)	
START (RENAULT BASED VHCL)	
SUB MODE	
	LIGHT COPY

SELECT SYSTEM			
ENGINE			
A/T			
ABS			
AIR BAG			
BCM			
METER A/C AMP			
	BACK	LIGHT	COPY

PKIA2093E

- Print all the data of "SELF-DIAG RESULTS" for "ENGINE", "METER A/C AMP", "BCM", "ABS" and "IPDM E/R" displayed on CONSULT-II.

(Example)

SELECT DIAG MODE	
WORK SUPPORT	
SELF-DIAG RESULTS	
DATA MONITOR	
DATA MONITOR (SPEC)	
ACTIVE TEST	
FUNCTION TEST	
Scroll Down	
	BACK LIGHT COPY

SELF-DIAG RESULTS	
DTC RESULTS TIME	
CAN COMM CIRCUIT [U1000]	0
F.F.DATA	
ERASE PRINT	
MODE BACK	LIGHT COPY

PKIA2094E

- Print all the data of "DATA MONITOR (CAN DIAG SUPPORT MNTR)" for "ENGINE", "METER A/C AMP", "BCM", "ABS" and "IPDM E/R" displayed on CONSULT-II.

(Example)

SELECT DIAG MODE	
WORK SUPPORT	
SELF-DIAG RESULTS	
DATA MONITOR	
DATA MONITOR (SPEC)	
ACTIVE TEST	
FUNCTION TEST	
Scroll Down	
	BACK LIGHT COPY

DATA MONITOR	
SELECT MONITOR ITEM	
ECM INPUT SIGNALS	
MAIN SIGNALS	
CAN DIAG SUPPORT MNTR	
SELECTION FROM MENU	
SETTING	Numerical Display
MODE BACK	LIGHT COPY

DATA MONITOR	
MONITOR	NO DTC
CAN COMM	OK
CAN CIRC 1	OK
CAN CIRC 2	OK
CAN CIRC 3	OK
CAN CIRC 4	OK
CAN CIRC 5	UNKWN
CAN CIRC 6	OK
CAN CIRC 7	OK
RECORD	
MODE BACK	LIGHT COPY

PKIA2095E

- Attach the printed sheet of "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" onto the check sheet. Refer to [LAN-43, "CHECK SHEET"](#) .
- Based on the indications of "SELECT SYSTEM" and the results of "DATA MONITOR (CAN DIAG SUPPORT MNTR)", put marks "v" onto the items with "No indication", "NG", or "UNKWN" in the check sheet table. Refer to [LAN-43, "CHECK SHEET"](#) .

NOTE:

- If "NG" is displayed on "CAN COMM" as "DATA MONITOR (CAN DIAG SUPPORT MNTR)" for the diagnosed control unit, replace the control unit.
 - The "DATA MONITOR (CAN DIAG SUPPORT MNTR)" items, which are not in check sheet table, are not related to diagnostic procedure on service manual.
So it is not necessary to check the status of the "DATA MONITOR (CAN DIAG SUPPORT MNTR)" items not in check sheet table.
- According to the check sheet results (example), start inspection. Refer to [LAN-45, "CHECK SHEET RESULTS \(EXAMPLE\)"](#) .

CAN SYSTEM (TYPE 2)

[CAN]

CHECK SHEET

NOTE:

If "NG" is displayed on "CAN COMM" as "DATA MONITOR (CAN DIAG SUPPORT MNTR)" for the diagnosed control unit, replace the control unit.

Check sheet table

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	CAN CIRC 3	CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—

Symptoms :

Attach copy of
SELECT SYSTEM

Attach copy of
SELECT SYSTEM

Attach copy of
ENGINE
SELF-DIAG RESULTS

Attach copy of
METER A/C AMP
SELF-DIAG RESULTS

Attach copy of
BCM
SELF-DIAG RESULTS

A
B
C
D
E
F
G
H
I
J
LAN
L
M

Attach copy of
ABS
SELF-DIAG RESULTS

Attach copy of
IPDM E/R
SELF-DIAG RESULTS

Attach copy of
ENGINE
DATA MONITOR

Attach copy of
METER A/C AMP
DATA MONITOR

Attach copy of
BCM
DATA MONITOR

Attach copy of
ABS
DATA MONITOR

Attach copy of
IPDM E/R
DATA MONITOR

CHECK SHEET RESULTS (EXAMPLE)

NOTE:


If "NG" is displayed on "CAN COMM" as "DATA MONITOR (CAN DIAG SUPPORT MNTR)" for the diagnosed control unit, replace the control unit.

Case 1

Check harness between data link connector and unified meter and A/C amp. Refer to [LAN-55, "Circuit Check Between Data Link Connector and Unified Meter and A/C Amp."](#) .

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	CAN CIRC 3	CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—

SKIB0145E

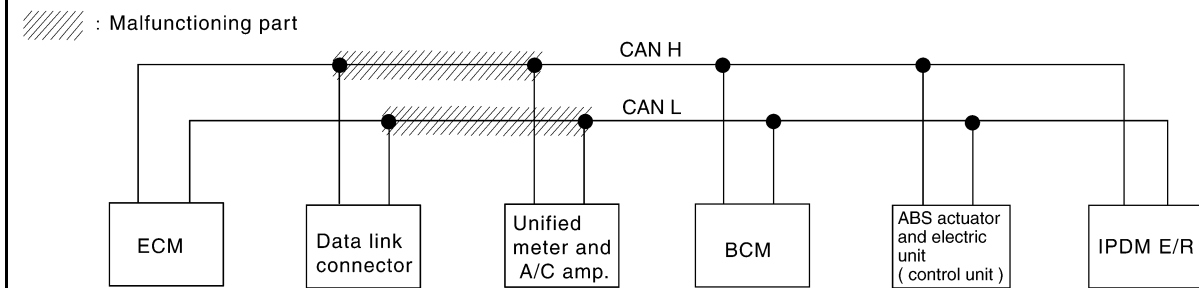

PKIA2018E

CAN SYSTEM (TYPE 2)

[CAN]


Case 2

Check harness between unified meter and A/C amp. and BCM. Refer to [LAN-55, "Circuit Check Between Unified Meter and A/C Amp. and BCM"](#) .

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6 ✓	CAN CIRC 3 ✓	CAN CIRC 7 ✓
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4 ✓	CAN CIRC 5 ✓	—
BCM	No indication ✓	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2 ✓	—	—	—	—
IPDM E/R	No indication ✓	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—

SKIB0146E

/// : Malfunctioning part

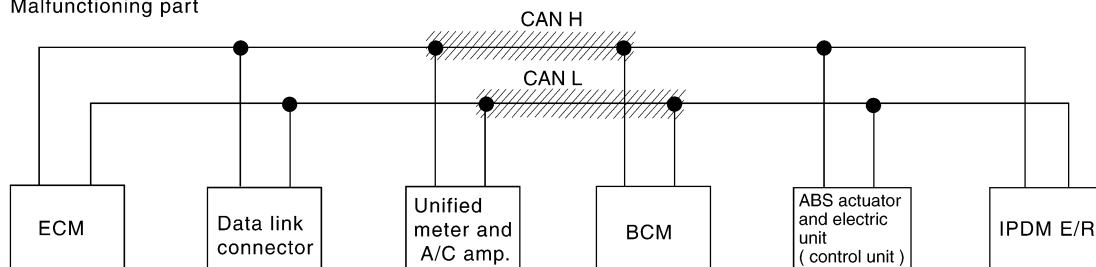

PKIA2019E

CAN SYSTEM (TYPE 2)

[CAN]


Case 3

Check harness between BCM and ABS actuator and electric unit (control unit). Refer to [LAN-55, "Circuit Check Between BCM and ABS Actuator and Electric Unit \(Control Unit\)"](#).

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	CAN CIRC 3 ✓	CAN CIRC 7 ✓
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 5 ✓	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3 ✓
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2 ✓	—	—	—	—
IPDM E/R	No indication ✓	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—

SKIB0147E

/// : Malfunctioning part

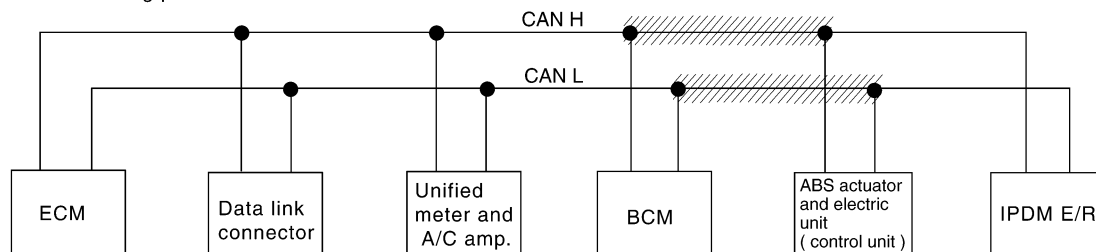

PKIA2020E

LAN

CAN SYSTEM (TYPE 2)

[CAN]


Case 4

Check ECM circuit. Refer to [LAN-56, "ECM Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1 ✓	—	CAN CIRC 4 ✓	CAN CIRC 6 ✓	CAN CIRC 3 ✓	CAN CIRC 7 ✓
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2 ✓	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2 ✓	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2 ✓	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3 ✓	—	CAN CIRC 2	—	—

SKIB0148E

/// : Malfunctioning part

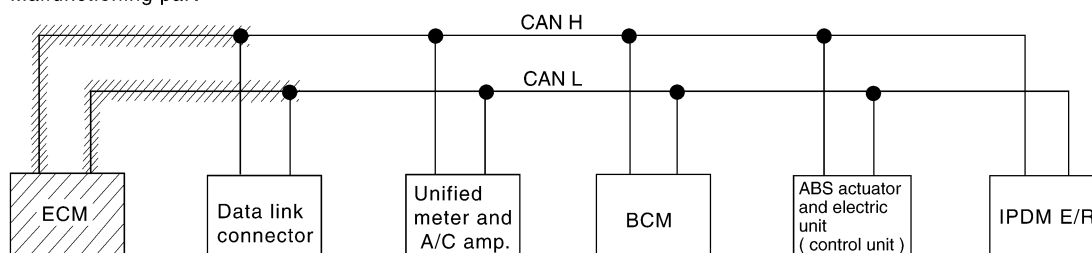

PKIA2021E


Case 5

Check data link connector circuit. Refer to [LAN-57, "Data Link Connector Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	CAN CIRC 3	CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—

SKIB0149E

/// : Malfunctioning part

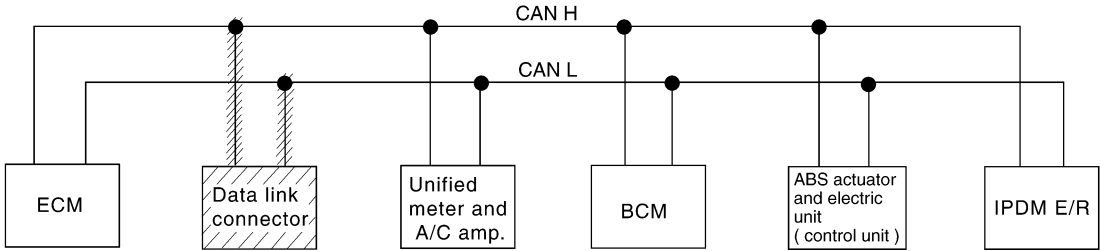

PKIA2022E

CAN SYSTEM (TYPE 2)

[CAN]


Case 6

Check unified meter and A/C amp. circuit. Refer to [LAN-57, "Unified Meter and A/C Amp. Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	CAN CIRC 3	CAN CIRC 7
METER A/C AMP	No indication ✓	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—

SKIB0150E

/// : Malfunctioning part

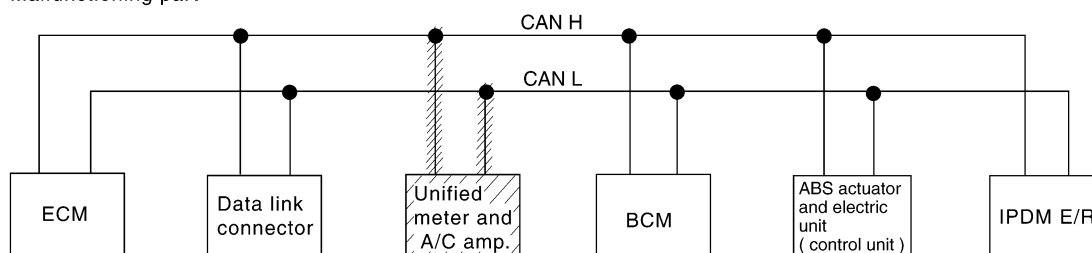

PKIA2023E


Case 7

Check BCM circuit. Refer to [LAN-58, "BCM Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6 ✓	CAN CIRC 3	CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4 ✓	CAN CIRC 5	—
BCM	No indication ✓	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2 ✓	—	—

SKIB0151E

/// : Malfunctioning part

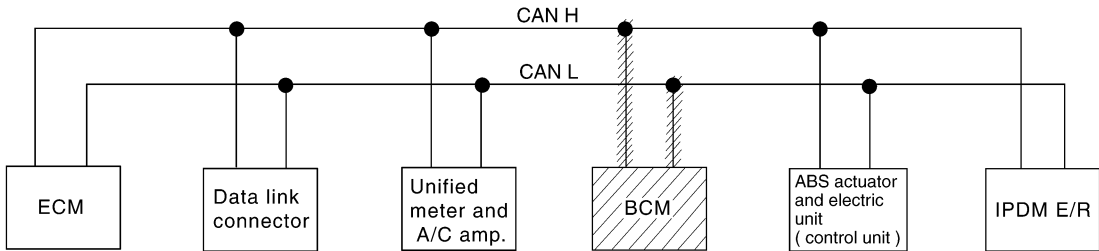

PKIA2024E

CAN SYSTEM (TYPE 2)

[CAN]


Case 8

Check ABS actuator and electric unit (control unit) circuit. Refer to [LAN-58, "ABS Actuator and Electric Unit \(Control Unit\) Circuit Check"](#).

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	CAN CIRC 3 ✓	CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 5 ✓	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1 ✓	CAN CIRC 2	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—

SKIB0152E

//// : Malfunctioning part

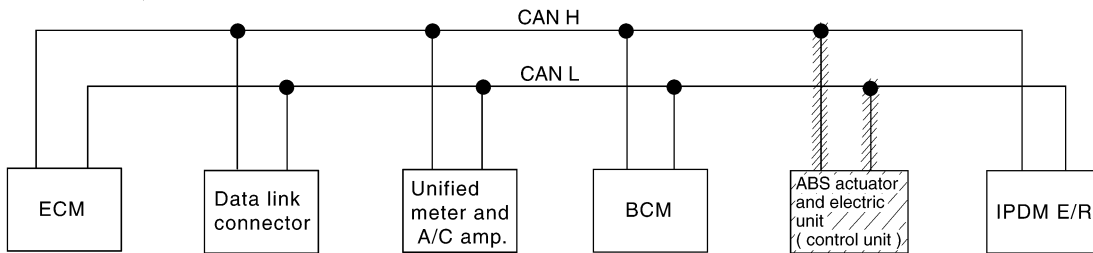

PKIA2025E

CAN SYSTEM (TYPE 2)

[CAN]

Case 9


Check IPDM E/R circuit. Refer to [LAN-59, "IPDM E/R Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	CAN CIRC 3	CAN CIRC 7 ✓
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3 ✓
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	—
IPDM E/R	No indication ✓	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—

SKIB0153E

A
B
C
D
E
F
G
H
I
J

/// : Malfunctioning part

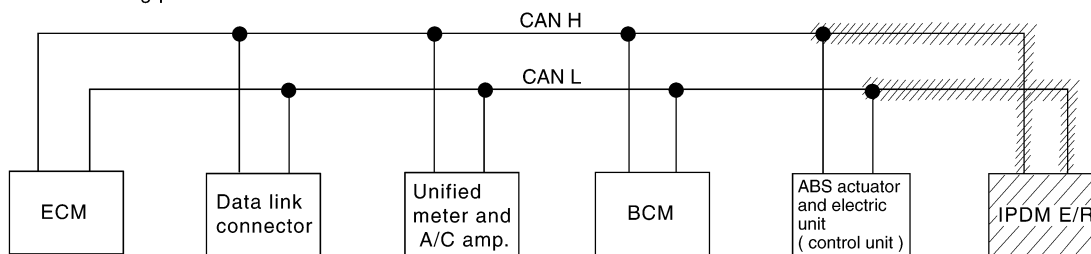

PKIA2026E

Case 10

Check CAN communication circuit. Refer to [LAN-60, "CAN Communication Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1 ✓	—	CAN CIRC 4 ✓	CAN CIRC 6 ✓	CAN CIRC 3 ✓	CAN CIRC 7 ✓
METER A/C AMP	No indication ✓	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication ✓	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1 ✓	CAN CIRC 2	—	—	—	—
IPDM E/R	No indication ✓	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—

SKIB0154E

LAN

L
M

Case 11

Check IPDM E/R Ignition relay circuit continuously sticks "OFF". Refer to [LAN-62, "IPDM E/R Ignition Relay Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	CAN CIRC 3	CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—

SKIB0155E

Case 12

Check IPDM E/R Ignition relay circuit continuously sticks "ON". Refer to [LAN-62, "IPDM E/R Ignition Relay Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	CAN CIRC 3	CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—

SKIB0156E

Circuit Check Between Data Link Connector and Unified Meter and A/C Amp.

AKS00A9B

1. CHECK HARNESS FOR OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Disconnect ECM connector and unified meter and A/C amp. connector.
4. Check continuity between data link connector M8 terminals 6 (L), 14 (P) and unified meter and A/C amp. harness connector M48 terminals 1 (L), 11 (P).


6 (L) – 1 (L) : Continuity should exist.

14 (P) – 11 (P) : Continuity should exist.

OK or NG

OK >> Reconnect all connectors to perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-42, "Work Flow"](#).

NG >> Repair harness.

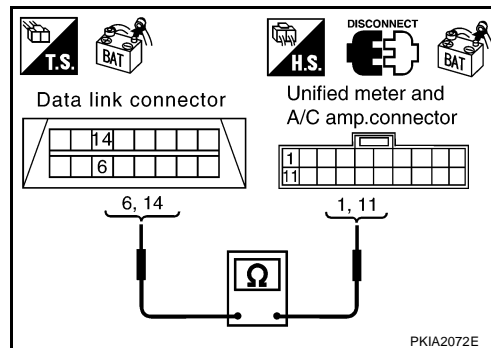

Circuit Check Between Unified Meter and A/C Amp. and BCM

AKS00A9C

1. CHECK HARNESS FOR OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Disconnect the following connectors.
 - ECM connector
 - Unified meter and A/C amp. connector
 - BCM connector
4. Check continuity between unified meter and A/C amp. harness connector M48 terminals 1 (L), 11 (P) and BCM harness connector M90 terminals 39 (L), 40 (P).


1 (L) – 39 (L) : Continuity should exist.

11 (P) – 40 (P) : Continuity should exist.

OK or NG

OK >> Reconnect all connectors to perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-42, "Work Flow"](#).

NG >> Repair harness.

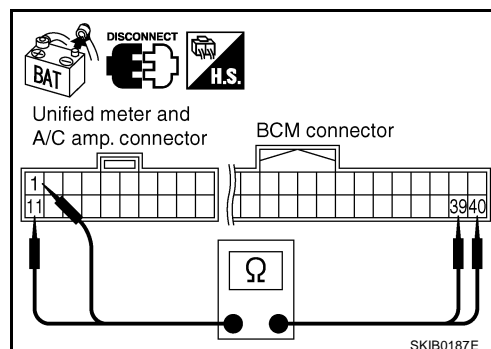

Circuit Check Between BCM and ABS Actuator and Electric Unit (Control Unit)

AKS00A9D

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connector for damage, bend and loose connection (connector-side and harness-side).
 - Harness connector M15
 - Harness connector E108

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect BCM connector and harness connector M15.
2. Check continuity between BCM harness connector M90 terminals 39 (L), 40 (P) and harness connector M15 terminals 2G (L), 7G (P).


39 (L) – 2G (L) : Continuity should exist.

40 (P) – 7G (P) : Continuity should exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness.

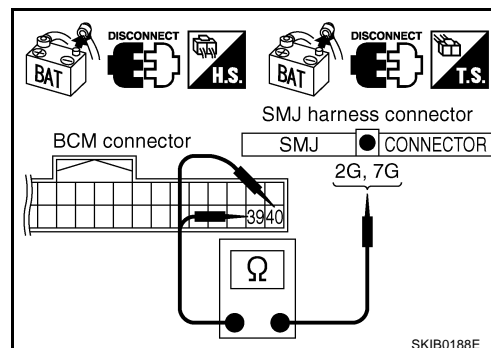

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ABS actuator and electric unit (control unit) connector.
2. Check continuity between harness connector E108 terminals 2G (L), 7G (P) and ABS actuator and electric unit (control unit) harness connector E51 terminals 20 (L), 23 (P).


2G (L) – 20 (L) : Continuity should exist.

7G (P) – 23 (P) : Continuity should exist.

OK or NG

OK >> Reconnect all connectors to perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-42, "Work Flow"](#).

NG >> Repair harness.

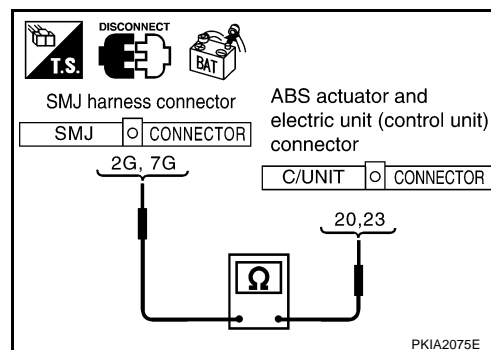

ECM Circuit Check

AKS00A9E

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connector for damage, bend and loose connection (control module-side and harness-side).
 - ECM connector
 - Harness connector F102
 - Harness connector M72

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ECM connector.
2. Check resistance between ECM harness connector F101 terminals 94 (L) and 86 (P).


94 (L) – 86 (P)

: Approx. 108 – 132Ω

OK or NG

OK >> Replace ECM.

NG >> Repair harness between ECM and data link connector.

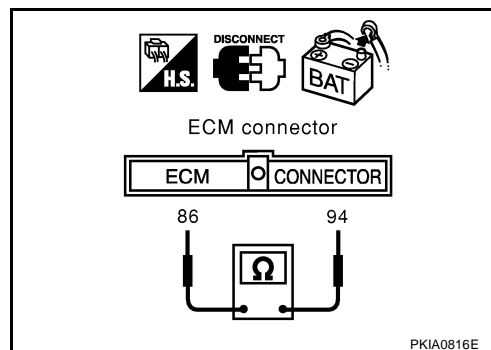

AKS00A9F

Data Link Connector Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of data link connector for damage, bend and loose connection (connector-side and harness-side).

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check resistance between data link connector M8 terminals 6 (L) and 14 (P).


6 (L) – 14 (P)

: Approx. 54 – 66Ω

OK or NG

OK >> Perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-42, "Work Flow"](#).

NG >> Repair harness between data link connector and unified meter and A/C amp.

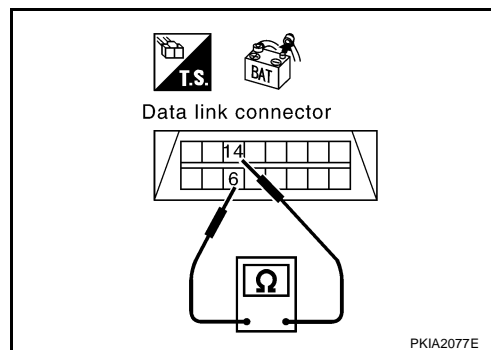

AKS00A9G

Unified Meter and A/C Amp. Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of unified meter and A/C amp. for damage, bend and loose connection (meter-side and harness-side).

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect unified meter and A/C amp. connector.
2. Check resistance between unified meter and A/C amp. harness connector M48 terminals 1 (L) and 11 (P).

1 (L) – 11 (P)

: Approx. 54 – 66Ω

OK or NG

- OK >> Replace unified meter and A/C amp.
 NG >> Repair harness between unified meter and A/C amp. and BCM.

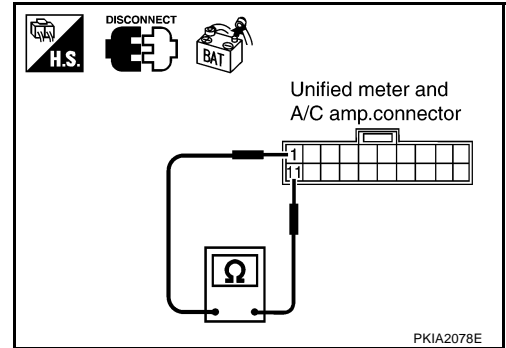

AKS00A9H

BCM Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of BCM for damage, bend and loose connection (control module-side and harness-side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect BCM connector.
2. Check resistance between BCM harness connector M90 terminals 39 (L) and 40 (P).

39 (L) – 40 (P)

: Approx. 54 – 66Ω

OK or NG

- OK >> Replace BCM.
 NG >> Repair harness between BCM and harness connector M15.

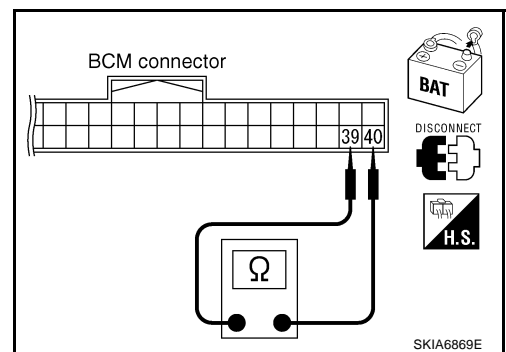

AKS00A9I

ABS Actuator and Electric Unit (Control Unit) Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of ABS actuator and electric unit (control unit) for damage, bend and loose connection (control unit-side and harness-side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect ABS actuator and electric unit (control unit) connector.
2. Check resistance between ABS actuator and electric unit (control unit) harness connector E51 terminals 20 (L) and 23 (P).

20 (L) – 23 (P)

: Approx. 54 – 66Ω

OK or NG

- OK >> Replace ABS actuator and electric unit (control unit).
 NG >> Repair harness between ABS actuator and electric unit (control unit) and IPDM E/R.

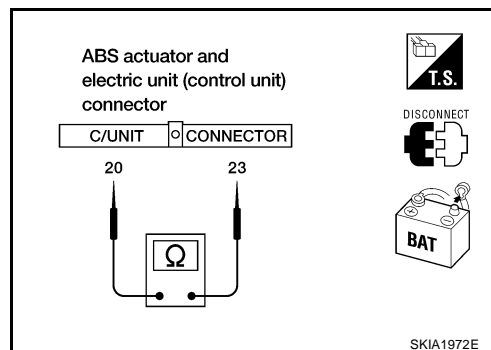

AKS00A9J

IPDM E/R Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of IPDM E/R for damage, bend and loose connection (control module-side and harness-side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect IPDM E/R connector.
2. Check resistance between IPDM E/R harness connector E9 terminals 48 (L) and 49 (P).

48 (L) – 49 (P)

: Approx. 108 – 132Ω

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness between IPDM E/R and ABS actuator and electric unit (control unit).

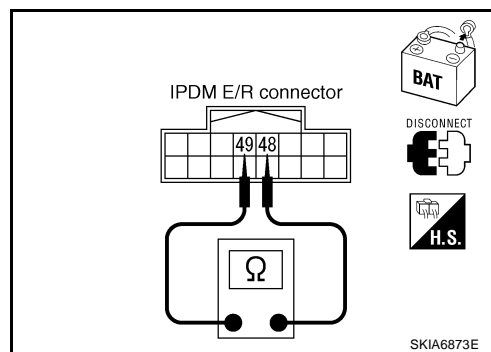

CAN Communication Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connector for damage, bend and loose connection (control module-side, meter-side, control unit-side and harness-side).
 - ECM
 - Unified meter and A/C amp.
 - BCM
 - ABS actuator and electric unit (control unit)
 - IPDM E/R
 - Between ECM and IPDM E/R

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR SHORT CIRCUIT


1. Disconnect ECM connector and harness connector F102.
2. Check continuity between ECM harness connector F101 terminals 94 (L) and 86 (P).

94 (L) – 86 (P) : Continuity should not exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness between ECM and harness connector F102.

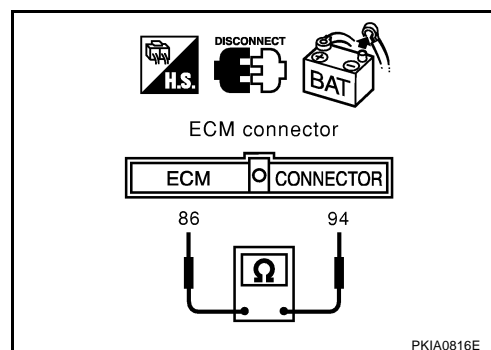

3. CHECK HARNESS FOR SHORT CIRCUIT

Check continuity between ECM harness connector F101 terminals 94 (L), 86 (P) and ground.


94 (L) – ground : Continuity should not exist.

86 (P) – ground : Continuity should not exist.

OK or NG

OK >> GO TO 4.

NG >> Repair harness between ECM and harness connector F102.

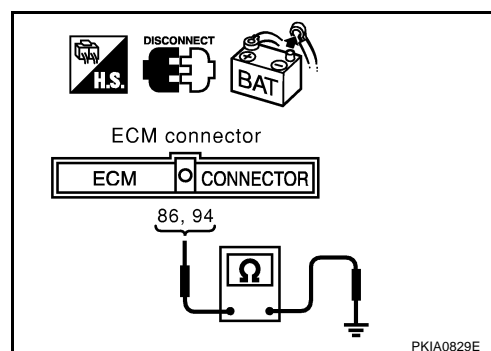

4. CHECK HARNESS FOR SHORT CIRCUIT


- Disconnect following connectors.
 - Unified meter and A/C amp. connector
 - BCM connector
 - Harness connector M15
- Check continuity between data link connector M8 terminals 6 (L) and 14 (P).

6 (L) – 14 (P) : Continuity should not exist.

OK or NG

OK >> GO TO 5.

- NG >> Check the following harnesses. If any harness is damaged, repair the harness.
- Harness between data link connector and harness connector M72.
 - Harness between data link connector and unified meter and A/C amp.
 - Harness between data link connector and BCM.
 - Harness between data link connector and harness connector M15.

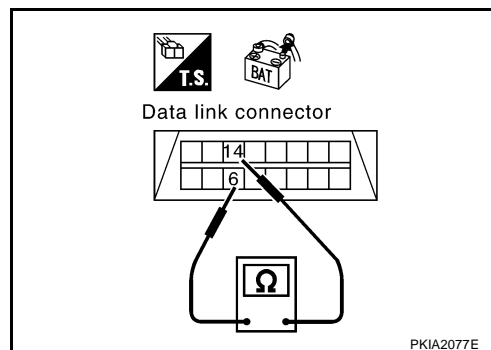

5. CHECK HARNESS FOR SHORT CIRCUIT

Check continuity between data link connector M8 terminals 6 (L), 14 (P) and ground.


6 (L) – ground : Continuity should not exist.

14 (P) – ground : Continuity should not exist.

OK or NG

OK >> GO TO 6.

- NG >> Check the following harnesses. If any harness is damaged, repair the harness.
- Harness between data link connector and harness connector M72.
 - Harness between data link connector and unified meter and A/C amp.
 - Harness between data link connector and BCM.
 - Harness between data link connector and harness connector M15.

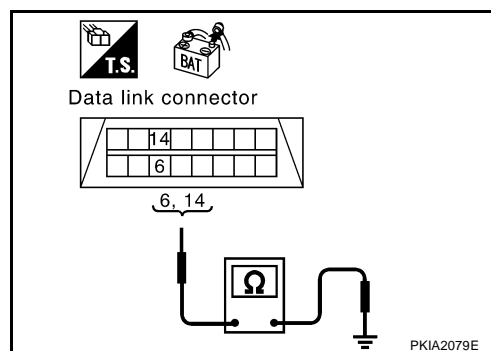

6. CHECK HARNESS FOR SHORT CIRCUIT


- Disconnect ABS actuator and electric unit (control unit) connector and IPDM E/R connector.
- Check continuity between IPDM E/R harness connector E9 terminals 48 (L) and 49 (P).

48 (L) – 49 (P) : Continuity should not exist.

OK or NG

OK >> GO TO 7.

- NG >> Check the following harnesses. If any harness is damaged, repair the harness.
- Harness between IPDM E/R and ABS actuator and electric unit (control unit).
 - Harness between IPDM E/R and harness connector E108.

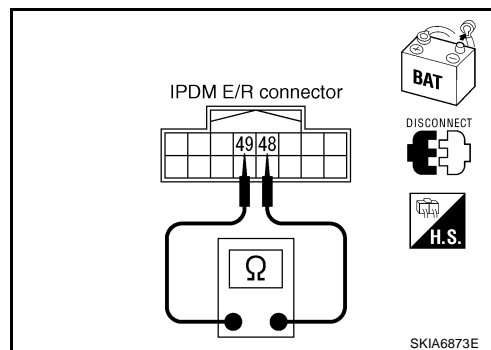

7. CHECK HARNESS FOR SHORT CIRCUIT

Check continuity between IPDM E/R harness connector E9 terminals 48 (L), 49 (P) and ground.

48 (L) – ground : Continuity should not exist.


49 (P) – ground : Continuity should not exist.

OK or NG

OK >> GO TO 8.

NG >> Check the following harnesses. If any harness is damaged, repair the harness.

- Harness between IPDM E/R and ABS actuator and electric unit (control unit).
- Harness between IPDM E/R and harness connector E108.

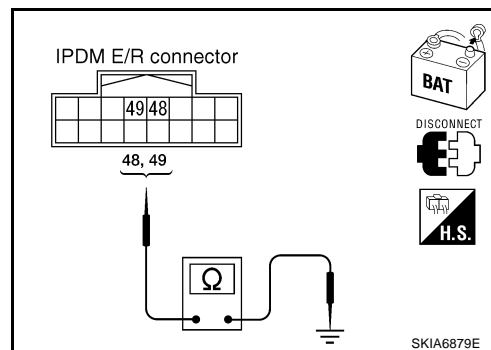

8. ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION

Check components inspection. Refer to [LAN-62, "ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION"](#).

OK or NG

OK >> Reconnect all connectors to perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-42, "Work Flow"](#).

NG >> Replace ECM and/or IPDM E/R.

IPDM E/R Ignition Relay Circuit Check

AKS00A9L

Check the following. If no problem is found, replace the IPDM E/R.

- IPDM E/R power supply circuit. Refer to [PG-28, "IPDM E/R Power/Ground Circuit Inspection"](#).
- Ignition power supply circuit. Refer to [PG-11, "IGNITION POWER SUPPLY — IGNITION SW. IN "ON" AND/OR "START""](#).


Component Inspection

ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION

AKS00A9M

- Remove ECM and IPDM E/R from vehicle.
- Check resistance between ECM terminals 94 and 86.
- Check resistance between IPDM E/R terminals 48 and 49.

Unit	Terminal	Resistance value (Ω) (Approx.)
ECM	94 - 86	108 - 132
IPDM E/R	48 - 49	

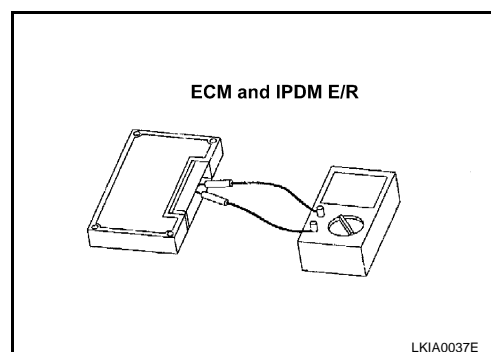


CAN SYSTEM (TYPE 3)

System Description

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.


Component Parts and Harness Connector Location


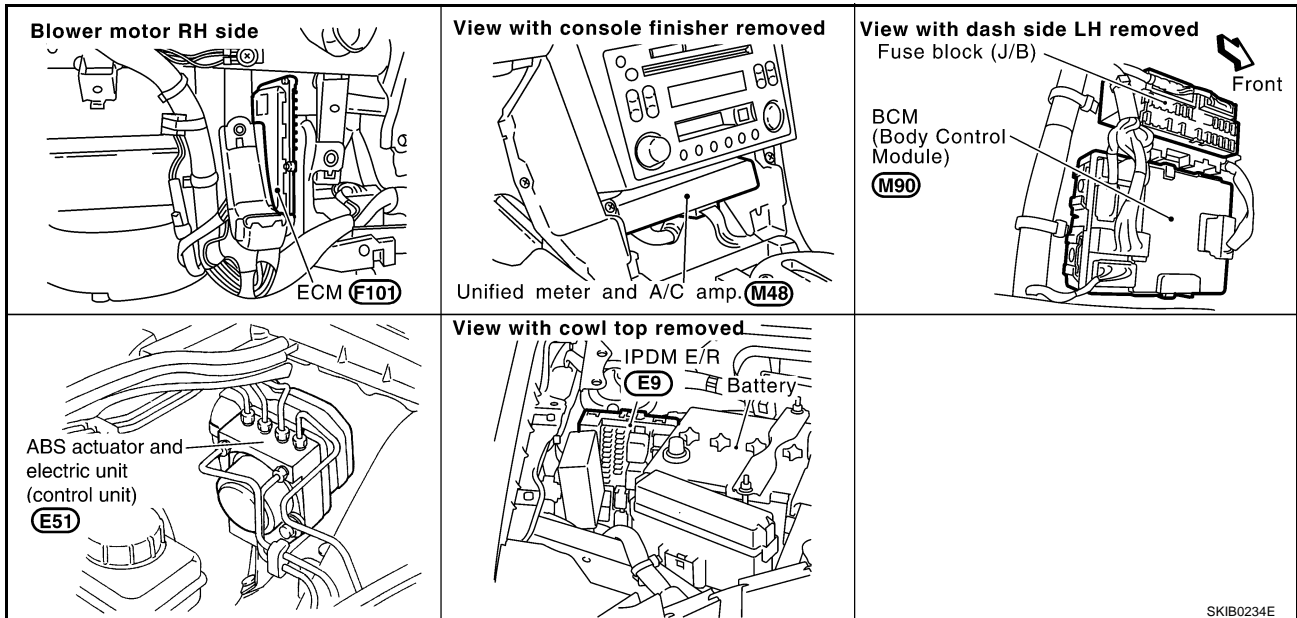


[CAN]

AKS009DE


LAN-CAN-03

 : DATA LINE

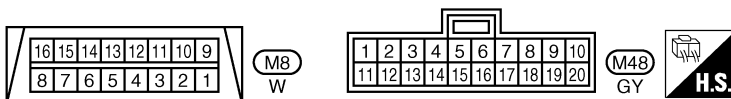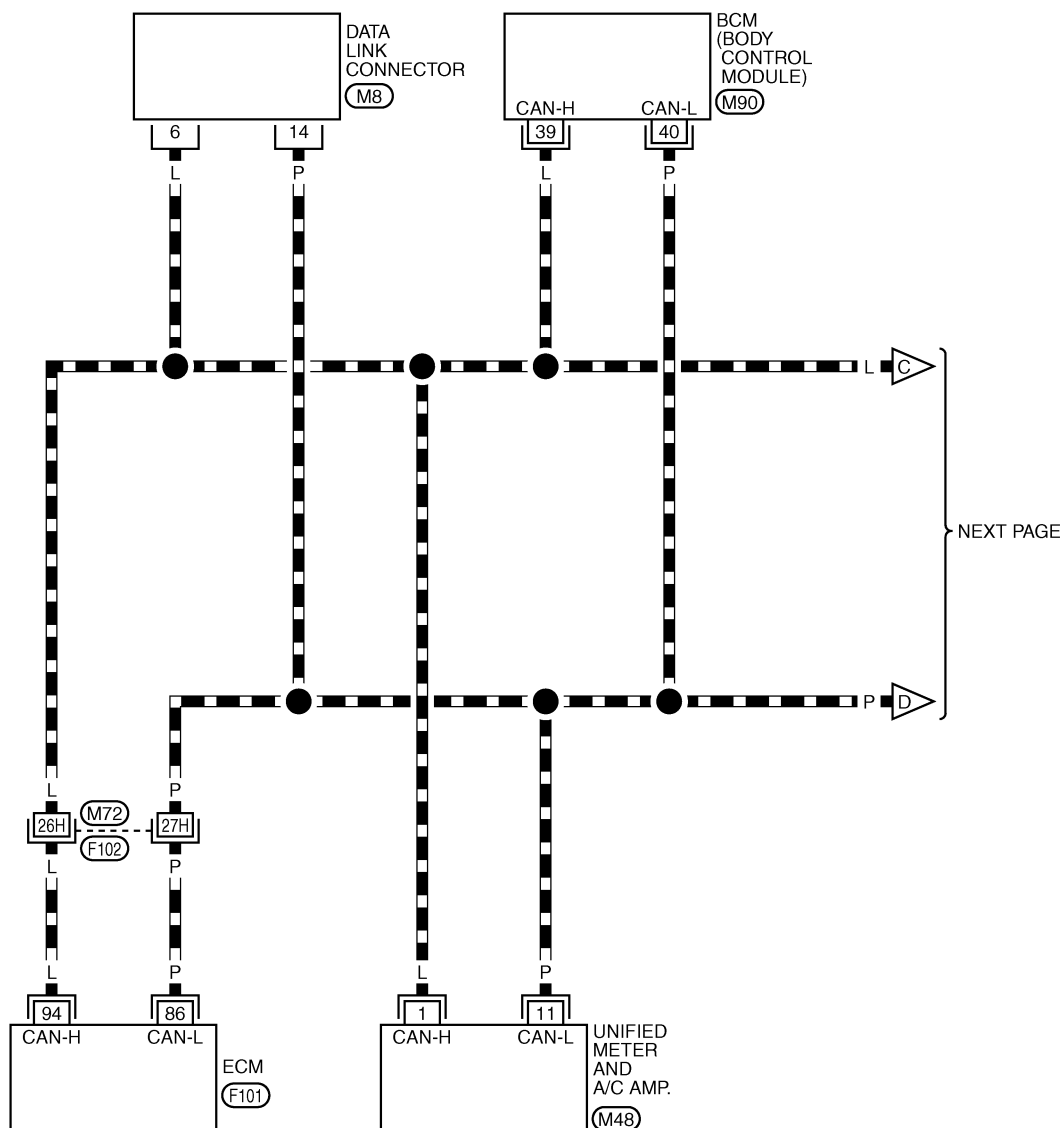

(M90), (F101) -ELECTRICAL
UNITS

DATA LINE

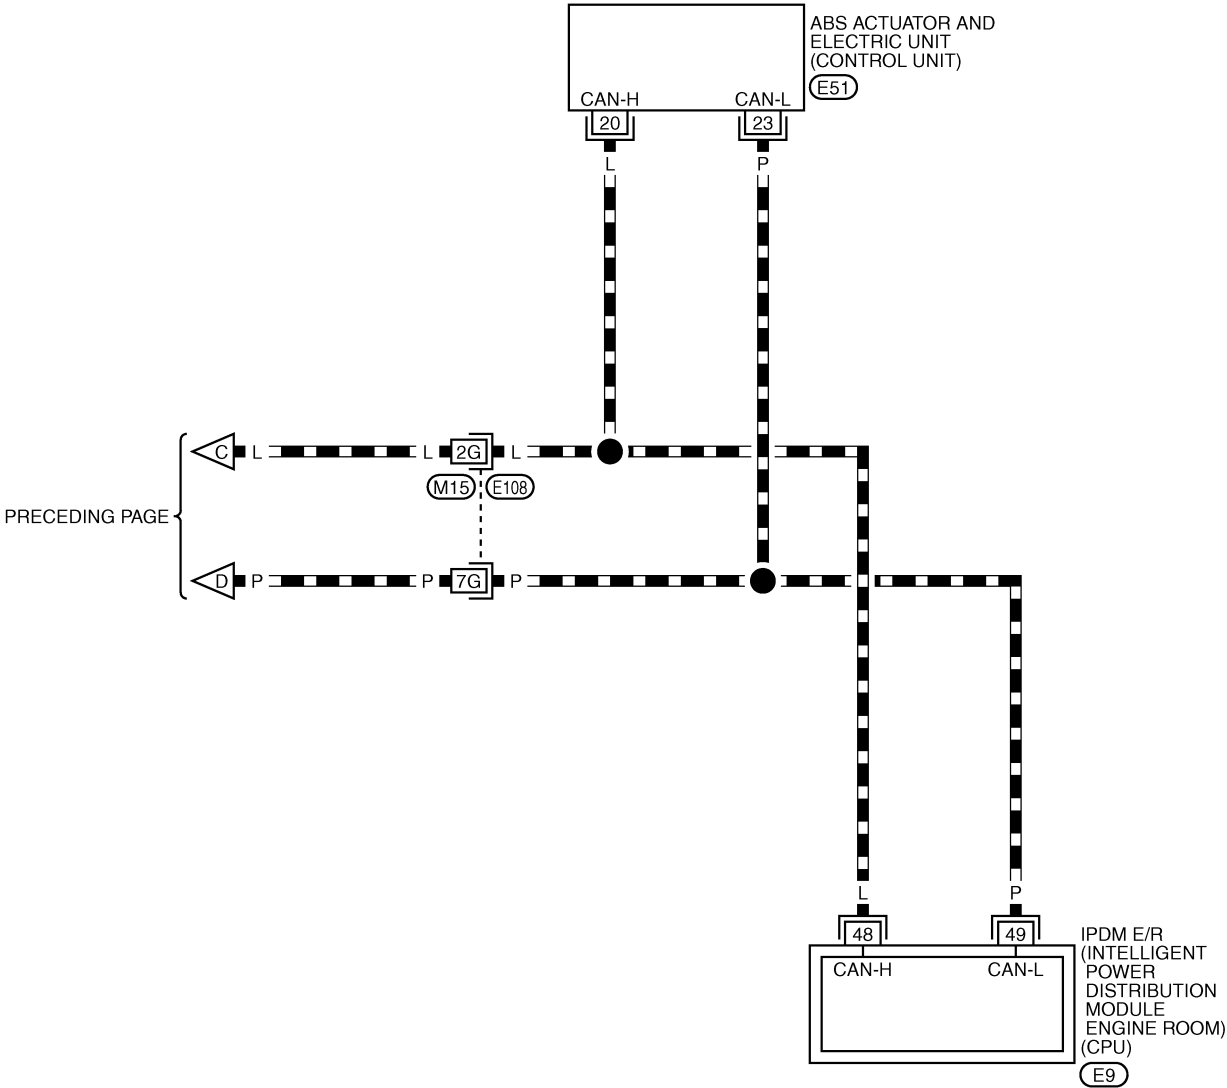

52	51	50	49	48	47	46	45
60	59	58	57	56	55	54	53

E9
W



REFER TO THE FOLLOWING.

E108 -SUPER MULTIPLE JUNCTION (SMJ)

E51 -ELECTRICAL UNITS


Work Flow

AKS00A9N

- When there are no indications of "METER A/C AMP", "BCM" or "IPDM E/R" on "SELECT SYSTEM" display of CONSULT-II, print the "SELECT SYSTEM".

(Example)

NISSAN	
CONSULT- II	
ENGINE	
START (NISSAN BASED VHCL)	
START (RENAULT BASED VHCL)	
SUB MODE	
	LIGHT COPY




SELECT SYSTEM			
ENGINE			
A/T			
ABS			
AIR BAG			
BCM			
METER A/C AMP			
	BACK	LIGHT	COPY

PKIA2093E

- Print all the data of "SELF-DIAG RESULTS" for "ENGINE", "METER A/C AMP", "BCM", "ABS" and "IPDM E/R" displayed on CONSULT-II.

(Example)

SELECT DIAG MODE	
WORK SUPPORT	
SELF-DIAG RESULTS	
DATA MONITOR	
DATA MONITOR (SPEC)	
ACTIVE TEST	
FUNCTION TEST	
Scroll Down	
	BACK LIGHT COPY




SELF-DIAG RESULTS	
DTC RESULTS TIME	
CAN COMM CIRCUIT [U1000]	0
F.F.DATA	
ERASE PRINT	
MODE BACK	LIGHT COPY

PKIA2094E


- Print all the data of "DATA MONITOR (CAN DIAG SUPPORT MNTR)" for "ENGINE", "METER A/C AMP", "BCM", "ABS" and "IPDM E/R" displayed on CONSULT-II.

(Example)

SELECT DIAG MODE	
WORK SUPPORT	
SELF-DIAG RESULTS	
DATA MONITOR	
DATA MONITOR (SPEC)	
ACTIVE TEST	
FUNCTION TEST	
Scroll Down	
	BACK LIGHT COPY



DATA MONITOR		
SELECT MONITOR ITEM		
ECM INPUT SIGNALS		
MAIN SIGNALS		
CAN DIAG SUPPORT MNTR		
SELECTION FROM MENU		
SETTING	Numerical Display	
MODE BACK	LIGHT COPY	



DATA MONITOR	
MONITOR	NO DTC
CAN COMM	OK
CAN CIRC 1	OK
CAN CIRC 2	OK
CAN CIRC 3	OK
CAN CIRC 4	OK
CAN CIRC 5	UNKWN
CAN CIRC 6	OK
CAN CIRC 7	OK
RECORD	
MODE BACK	LIGHT COPY

PKIA2095E

- Attach the printed sheet of "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" onto the check sheet. Refer to [LAN-67, "CHECK SHEET"](#).
- Based on the indications of "SELECT SYSTEM" and the results of "DATA MONITOR (CAN DIAG SUPPORT MNTR)", put marks "v" onto the items with "No indication", "NG", or "UNKWN" in the check sheet table. Refer to [LAN-67, "CHECK SHEET"](#).

NOTE:

- If "NG" is displayed on "CAN COMM" as "DATA MONITOR (CAN DIAG SUPPORT MNTR)" for the diagnosed control unit, replace the control unit.
 - The "DATA MONITOR (CAN DIAG SUPPORT MNTR)" items, which are not in check sheet table, are not related to diagnostic procedure on service manual.
So it is not necessary to check the status of the "DATA MONITOR (CAN DIAG SUPPORT MNTR)" items not in check sheet table.
- According to the check sheet results (example), start inspection. Refer to [LAN-69, "CHECK SHEET RESULTS \(EXAMPLE\)"](#).

CAN SYSTEM (TYPE 3)

[CAN]

CHECK SHEET

NOTE:

If "NG" is displayed on "CAN COMM" as "DATA MONITOR (CAN DIAG SUPPORT MNTR)" for the diagnosed control unit, replace the control unit.

Check sheet table

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	—	CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—

Symptoms :

Attach copy of
SELECT SYSTEM

Attach copy of
SELECT SYSTEM

A
B
C
D
E
F
G
H
I
J
LAN
L
M

Attach copy of
ENGINE
SELF-DIAG RESULTS

Attach copy of
METER A/C AMP
SELF-DIAG RESULTS

Attach copy of
BCM
SELF-DIAG RESULTS

Attach copy of
ABS
SELF-DIAG RESULTS

Attach copy of
IPDM E/R
SELF-DIAG RESULTS

Attach copy of
ENGINE
DATA MONITOR

Attach copy of
METER A/C AMP
DATA MONITOR

Attach copy of
BCM
DATA MONITOR

Attach copy of
ABS
DATA MONITOR

Attach copy of
IPDM E/R
DATA MONITOR

CHECK SHEET RESULTS (EXAMPLE)

NOTE:


If "NG" is displayed on "CAN COMM" as "DATA MONITOR (CAN DIAG SUPPORT MNTR)" for the diagnosed control unit, replace the control unit.

Case 1

Check harness between data link connector and unified meter and A/C amp. Refer to [LAN-79, "Circuit Check Between Data Link Connector and Unified Meter and A/C Amp."](#) .

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4 ✓	CAN CIRC 6 ✓	—	CAN CIRC 7 ✓
METER A/C AMP	No indication ✓	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication ✓	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2 ✓	—	—	—	—
IPDM E/R	No indication ✓	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—

SKIB0158E

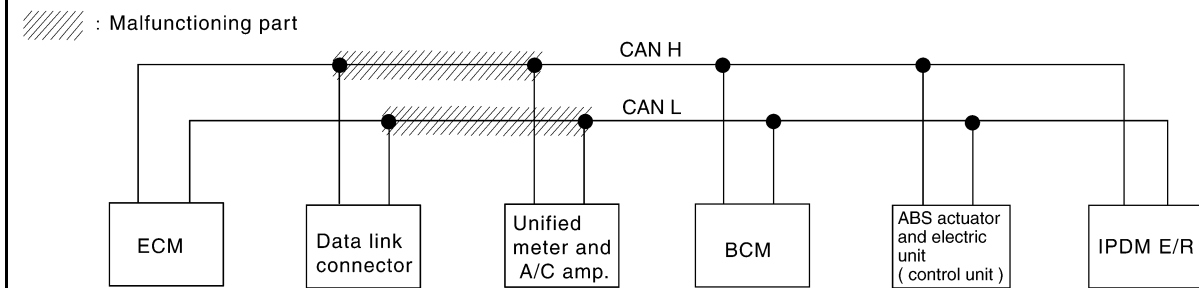

PKIA2018E

CAN SYSTEM (TYPE 3)

[CAN]


Case 2

Check harness between unified meter and A/C amp. and BCM. Refer to [LAN-79, "Circuit Check Between Unified Meter and A/C Amp. and BCM"](#) .

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6 ✓	—	CAN CIRC 7 ✓
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4 ✓	CAN CIRC 5 ✓	—
BCM	No indication ✓	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2 ✓	—	—	—	—
IPDM E/R	No indication ✓	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—

SKIB0159E

/// : Malfunctioning part

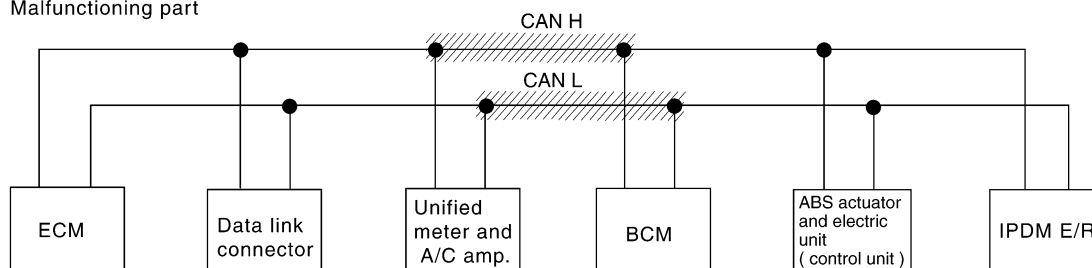

PKIA2019E

CAN SYSTEM (TYPE 3)

[CAN]


Case 3

Check harness between BCM and ABS actuator and electric unit (control unit). Refer to [LAN-79, "Circuit Check Between BCM and ABS Actuator and Electric Unit \(Control Unit\)"](#).

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	—	CAN CIRC 7 ✓
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 5 ✓	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3 ✓
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2 ✓	—	—	—	—
IPDM E/R	No indication ✓	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—

SKIB0160E

/// : Malfunctioning part

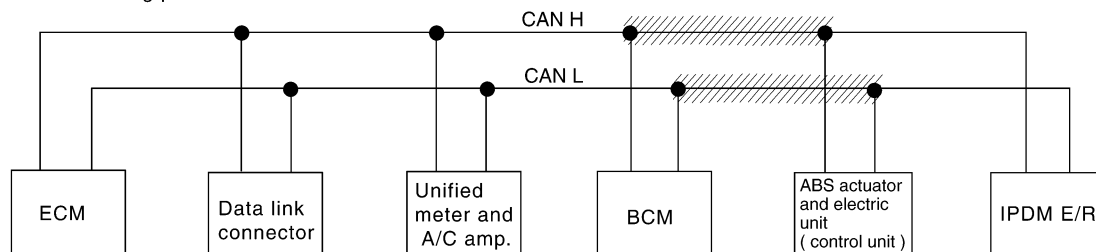

PKIA2020E

LAN

CAN SYSTEM (TYPE 3)

[CAN]


Case 4

Check ECM circuit. Refer to [LAN-80, "ECM Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1 ✓	—	CAN CIRC 4 ✓	CAN CIRC 6 ✓	—	CAN CIRC 7 ✓
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2 ✓	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2 ✓	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2 ✓	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3 ✓	—	CAN CIRC 2	—	—

SKIB0161E

/// : Malfunctioning part

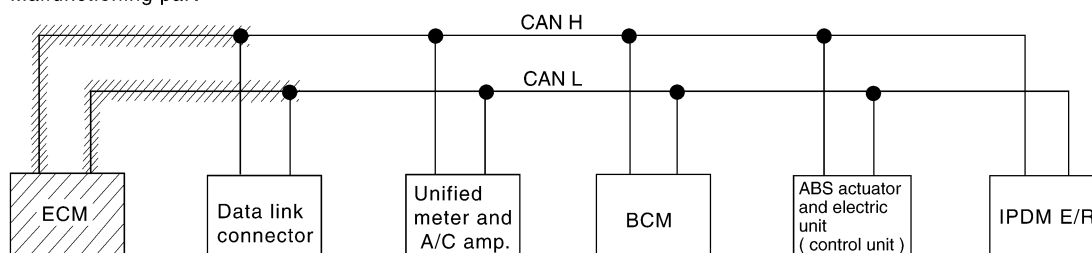

PKIA2021E


Case 5

Check data link connector circuit. Refer to [LAN-81, "Data Link Connector Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	—	CAN CIRC 7
METER A/C AMP	No indication ✓	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication ✓	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	—
IPDM E/R	No indication ✓	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—

SKIB0162E

/// : Malfunctioning part

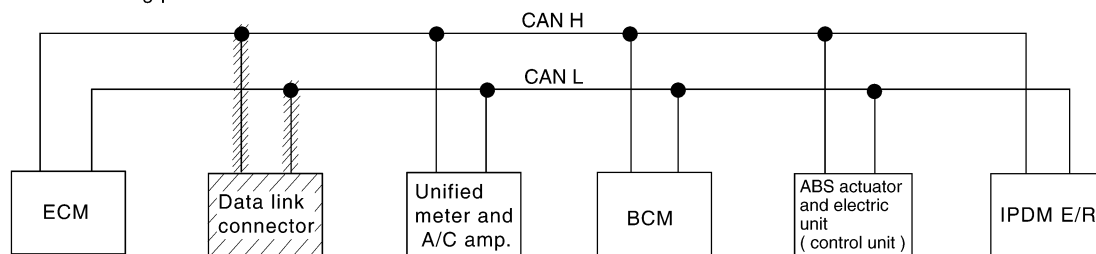

PKIA2022E

CAN SYSTEM (TYPE 3)

[CAN]


Case 6

Check unified meter and A/C amp. circuit. Refer to [LAN-81, "Unified Meter and A/C Amp. Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4 ✓	CAN CIRC 6	—	CAN CIRC 7
METER A/C AMP	No indication ✓	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4 ✓	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—

SKIB0163E

/// : Malfunctioning part

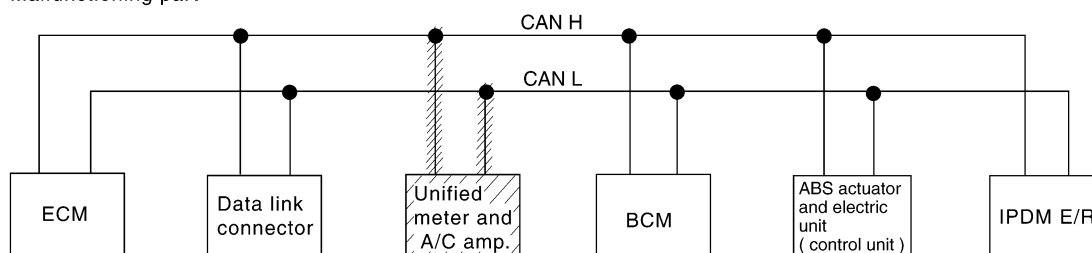

PKIA2023E


Case 7

Check BCM circuit. Refer to [LAN-82. "BCM Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6 ✓	—	CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4 ✓	CAN CIRC 5	—
BCM	No indication ✓	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2 ✓	—	—

SKIB0164E

/// : Malfunctioning part

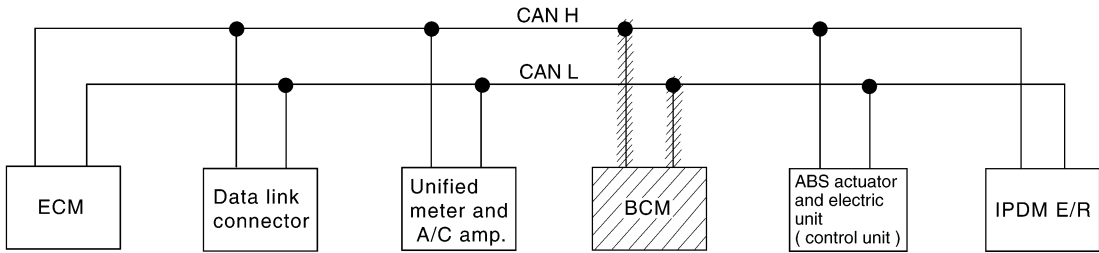

PKIA2024E

CAN SYSTEM (TYPE 3)

[CAN]


Case 8

Check ABS actuator and electric unit (control unit) circuit. Refer to [LAN-82, "ABS Actuator and Electric Unit \(Control Unit\) Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	—	CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—

SKIB0165E

/// : Malfunctioning part

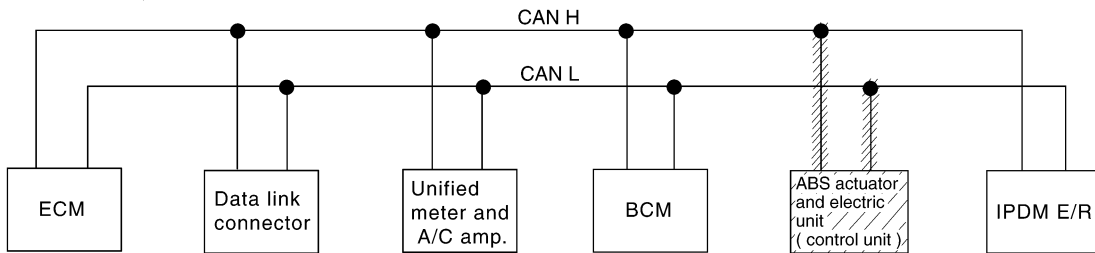

PKIA2025E

CAN SYSTEM (TYPE 3)

[CAN]


Case 9

Check IPDM E/R circuit. Refer to [LAN-83, "IPDM E/R Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	—	CAN CIRC 7 ✓
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3 ✓
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	—
IPDM E/R	No indication ✓	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—

SKIB0166E

/// : Malfunctioning part

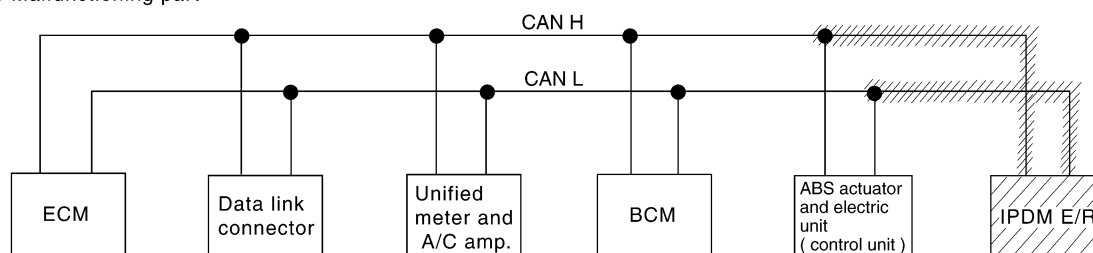

PKIA2026E

Case 10

Check CAN communication circuit. Refer to [LAN-84, "CAN Communication Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1 ✓	—	CAN CIRC 4 ✓	CAN CIRC 6 ✓	—	CAN CIRC 7 ✓
METER A/C AMP	No indication ✓	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication ✓	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1 ✓	CAN CIRC 2	—	—	—	—
IPDM E/R	No indication ✓	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—

SKIB0167E

Case 11

Check IPDM E/R Ignition relay circuit continuously sticks "OFF". Refer to [LAN-86, "IPDM E/R Ignition Relay Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	—	CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 5 ✓	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—

SKIB0168E

Case 12

Check IPDM E/R Ignition relay circuit continuously sticks "ON". Refer to [LAN-86, "IPDM E/R Ignition Relay Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx				
				ECM	Unified meter and A/C amp.	BCM	ABS actuator and electric unit (control unit)	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	—	CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	CAN CIRC 3
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2 ✓	—	—	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—

SKIB0169E

Circuit Check Between Data Link Connector and Unified Meter and A/C Amp.

AKS00A90


1. CHECK HARNESS FOR OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Disconnect ECM connector and unified meter and A/C amp. connector.
4. Check continuity between data link connector M8 terminals 6 (L), 14 (P) and unified meter and A/C amp. harness connector M48 terminals 1 (L), 11 (P).

6 (L) – 1 (L) : Continuity should exist.**14 (P) – 11 (P) : Continuity should exist.**OK or NG

OK >> Reconnect all connectors to perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-66, "Work Flow"](#).

NG >> Repair harness.

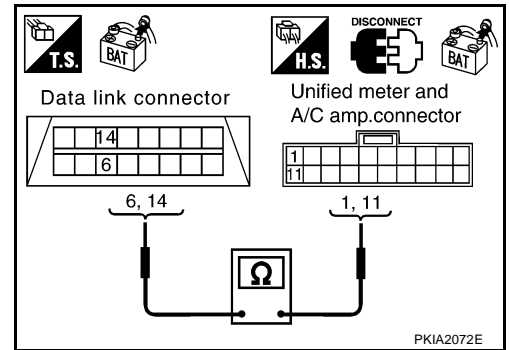

PKIA2072E

Circuit Check Between Unified Meter and A/C Amp. and BCM

AKS00A9P


1. CHECK HARNESS FOR OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Disconnect the following connectors.
 - ECM connector
 - Unified meter and A/C amp. connector
 - BCM connector
4. Check continuity between unified meter and A/C amp. harness connector M48 terminals 1 (L), 11 (P) and BCM harness connector M90 terminals 39 (L), 40 (P).

1 (L) – 39 (L) : Continuity should exist.**11 (P) – 40 (P) : Continuity should exist.**OK or NG

OK >> Reconnect all connectors to perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-66, "Work Flow"](#).

NG >> Repair harness.

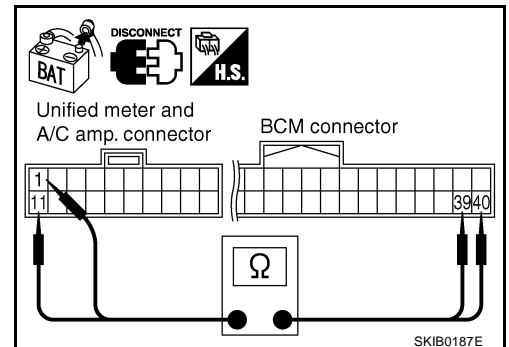

SKIB0187E

Circuit Check Between BCM and ABS Actuator and Electric Unit (Control Unit)

AKS00A9Q

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connector for damage, bend and loose connection (connector-side and harness-side).
 - Harness connector M15
 - Harness connector E108

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect BCM connector and harness connector M15.
2. Check continuity between BCM harness connector M90 terminals 39 (L), 40 (P) and harness connector M15 terminals 2G (L), 7G (P).


39 (L) – 2G (L) : Continuity should exist.

40 (P) – 7G (P) : Continuity should exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness.

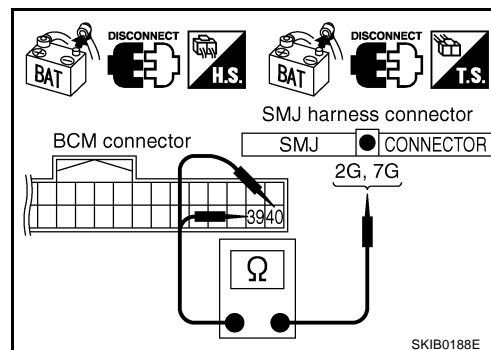

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect ABS actuator and electric unit (control unit) connector.
2. Check continuity between harness connector E108 terminals 2G (L), 7G (P) and ABS actuator and electric unit (control unit) harness connector E51 terminals 20 (L), 23 (P).


2G (L) – 20 (L) : Continuity should exist.

7G (P) – 23 (P) : Continuity should exist.

OK or NG

OK >> Reconnect all connectors to perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-66, "Work Flow"](#).

NG >> Repair harness.

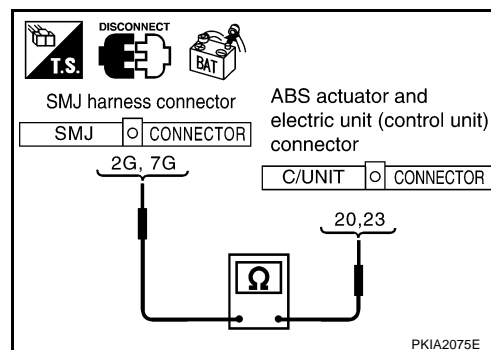

ECM Circuit Check

AKS00A9R

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connector for damage, bend and loose connection (control module-side and harness-side).
 - ECM connector
 - Harness connector F102
 - Harness connector M72

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect ECM connector.
2. Check resistance between ECM harness connector F101 terminals 94 (L) and 86 (P).

94 (L) – 86 (P)

: Approx. 108 – 132Ω

OK or NG

- OK >> Replace ECM.
 NG >> Repair harness between ECM and data link connector.

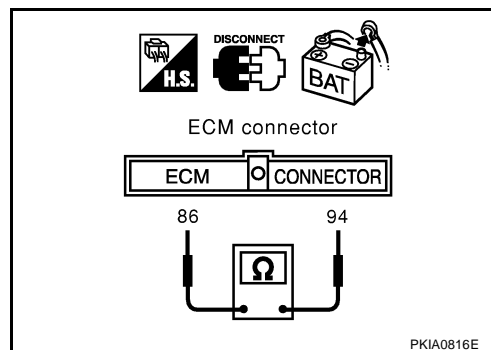

AKS00A9S

Data Link Connector Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of data link connector for damage, bend and loose connection (connector-side and harness-side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


Check resistance between data link connector M8 terminals 6 (L) and 14 (P).

6 (L) – 14 (P)

: Approx. 54 – 66Ω

OK or NG

- OK >> Perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-66, "Work Flow"](#).
 NG >> Repair harness between data link connector and unified meter and A/C amp.

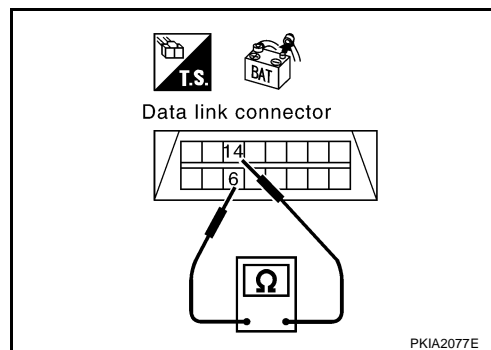

AKS00A9T

Unified Meter and A/C Amp. Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of unified meter and A/C amp. for damage, bend and loose connection (meter-side and harness-side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect unified meter and A/C amp. connector.
2. Check resistance between unified meter and A/C amp. harness connector M48 terminals 1 (L) and 11 (P).

1 (L) – 11 (P)

: Approx. 54 – 66Ω

OK or NG

- OK >> Replace unified meter and A/C amp.
 NG >> Repair harness between unified meter and A/C amp. and BCM.

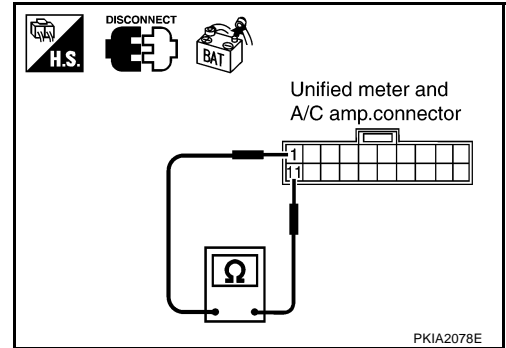

AKS00A9U

BCM Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of BCM for damage, bend and loose connection (control module-side and harness-side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect BCM connector.
2. Check resistance between BCM harness connector M90 terminals 39 (L) and 40 (P).

39 (L) – 40 (P)

: Approx. 54 – 66Ω

OK or NG

- OK >> Replace BCM.
 NG >> Repair harness between BCM and harness connector M15.

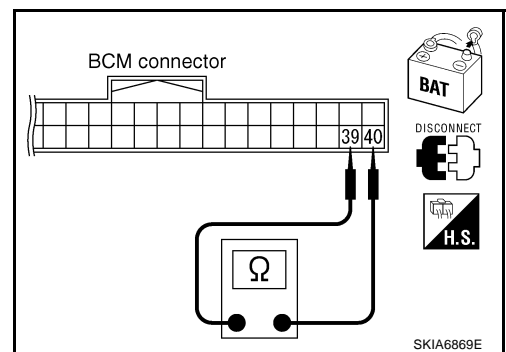

AKS00A9V

ABS Actuator and Electric Unit (Control Unit) Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of ABS actuator and electric unit (control unit) for damage, bend and loose connection (control unit-side and harness-side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect ABS actuator and electric unit (control unit) connector.
2. Check resistance between ABS actuator and electric unit (control unit) harness connector E51 terminals 20 (L) and 23 (P).

20 (L) – 23 (P)

: Approx. 54 – 66Ω

OK or NG

- OK >> Replace ABS actuator and electric unit (control unit).
 NG >> Repair harness between ABS actuator and electric unit (control unit) and IPDM E/R.

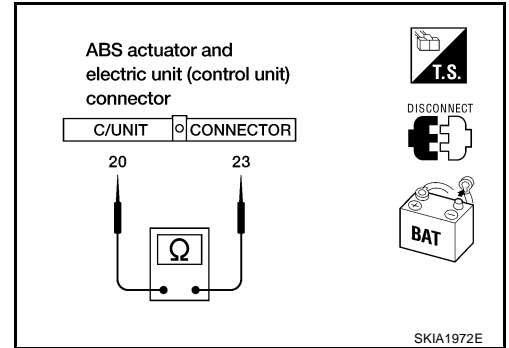

AKS00A9W

IPDM E/R Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of IPDM E/R for damage, bend and loose connection (control module-side and harness-side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect IPDM E/R connector.
2. Check resistance between IPDM E/R harness connector E9 terminals 48 (L) and 49 (P).

48 (L) – 49 (P)

: Approx. 108 – 132Ω

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness between IPDM E/R and ABS actuator and electric unit (control unit).

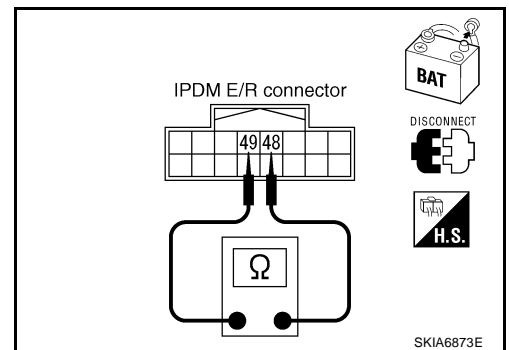

CAN Communication Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connector for damage, bend and loose connection (control module-side, meter-side, control unit-side and harness-side).
 - ECM
 - Unified meter and A/C amp.
 - BCM
 - ABS actuator and electric unit (control unit)
 - IPDM E/R
 - Between ECM and IPDM E/R

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR SHORT CIRCUIT


1. Disconnect ECM connector and harness connector F102.
2. Check continuity between ECM harness connector F101 terminals 94 (L) and 86 (P).

94 (L) – 86 (P) : Continuity should not exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness between ECM and harness connector F102.

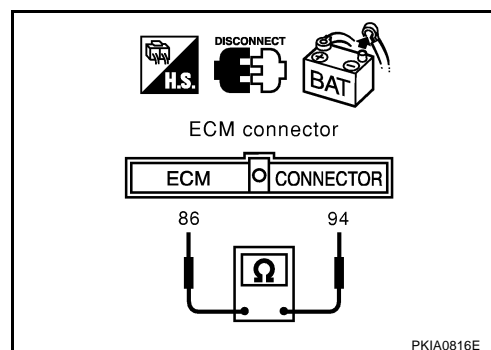

3. CHECK HARNESS FOR SHORT CIRCUIT

Check continuity between ECM harness connector F101 terminals 94 (L), 86 (P) and ground.


94 (L) – ground : Continuity should not exist.

86 (P) – ground : Continuity should not exist.

OK or NG

OK >> GO TO 4.

NG >> Repair harness between ECM and harness connector F102.

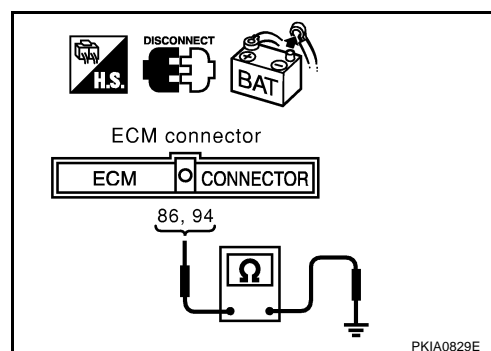

4. CHECK HARNESS FOR SHORT CIRCUIT


- Disconnect following connectors.
 - Unified meter and A/C amp. connector
 - BCM connector
 - Harness connector M15
- Check continuity between data link connector M8 terminals 6 (L) and 14 (P).

6 (L) – 14 (P) : Continuity should not exist.

OK or NG

OK >> GO TO 5.

- NG >> Check the following harnesses. If any harness is damaged, repair the harness.
- Harness between data link connector and harness connector M72.
 - Harness between data link connector and unified meter and A/C amp.
 - Harness between data link connector and BCM.
 - Harness between data link connector and harness connector M15.

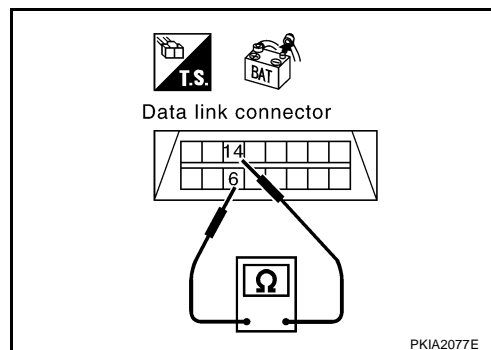

5. CHECK HARNESS FOR SHORT CIRCUIT

Check continuity between data link connector M8 terminals 6 (L), 14 (P) and ground.


6 (L) – ground : Continuity should not exist.

14 (P) – ground : Continuity should not exist.

OK or NG

OK >> GO TO 6.

- NG >> Check the following harnesses. If any harness is damaged, repair the harness.
- Harness between data link connector and harness connector M72.
 - Harness between data link connector and unified meter and A/C amp.
 - Harness between data link connector and BCM.
 - Harness between data link connector and harness connector M15.

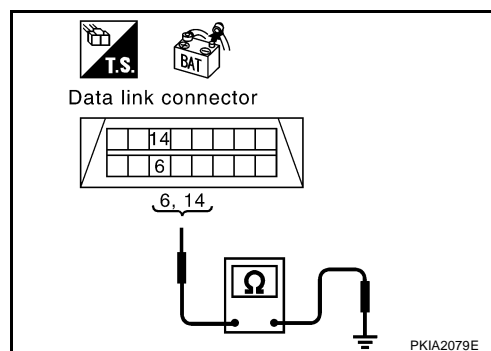

6. CHECK HARNESS FOR SHORT CIRCUIT


- Disconnect ABS actuator and electric unit (control unit) connector and IPDM E/R connector.
- Check continuity between IPDM E/R harness connector E9 terminals 48 (L) and 49 (P).

48 (L) – 49 (P) : Continuity should not exist.

OK or NG

OK >> GO TO 7.

- NG >> Check the following harnesses. If any harness is damaged, repair the harness.
- Harness between IPDM E/R and ABS actuator and electric unit (control unit).
 - Harness between IPDM E/R and harness connector E108.

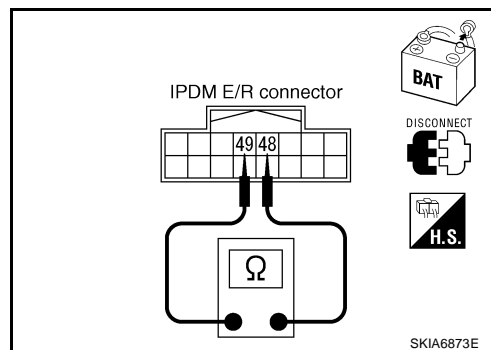

7. CHECK HARNESS FOR SHORT CIRCUIT

Check continuity between IPDM E/R harness connector E9 terminals 48 (L), 49 (P) and ground.

48 (L) – ground : Continuity should not exist.


49 (P) – ground : Continuity should not exist.

OK or NG

OK >> GO TO 8.

NG >> Check the following harnesses. If any harness is damaged, repair the harness.

- Harness between IPDM E/R and ABS actuator and electric unit (control unit).
- Harness between IPDM E/R and harness connector E108.

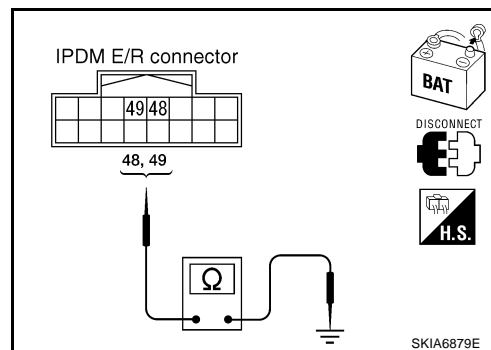

8. ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION

Check components inspection. Refer to [LAN-86, "ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION"](#).

OK or NG

OK >> Reconnect all connectors to perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-66, "Work Flow"](#).

NG >> Replace ECM and/or IPDM E/R.

IPDM E/R Ignition Relay Circuit Check

AKS00A9Y

Check the following. If no problem is found, replace the IPDM E/R.

- IPDM E/R power supply circuit. Refer to [PG-28, "IPDM E/R Power/Ground Circuit Inspection"](#).
- Ignition power supply circuit. Refer to [PG-11, "IGNITION POWER SUPPLY — IGNITION SW. IN "ON" AND/OR "START" "](#).


Component Inspection

ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION

AKS00A9Z

- Remove ECM and IPDM E/R from vehicle.
- Check resistance between ECM terminals 94 and 86.
- Check resistance between IPDM E/R terminals 48 and 49.

Unit	Terminal	Resistance value (Ω) (Approx.)
ECM	94 - 86	108 - 132
IPDM E/R	48 - 49	

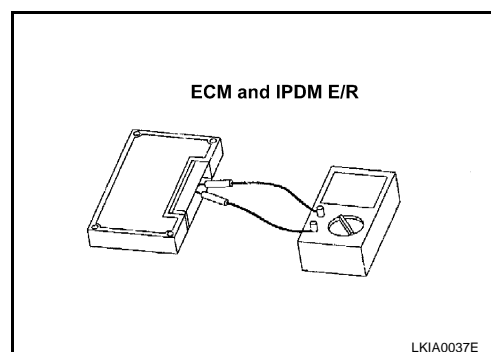


CAN SYSTEM (TYPE 4)

System Description

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

Component Parts and Harness Connector Location

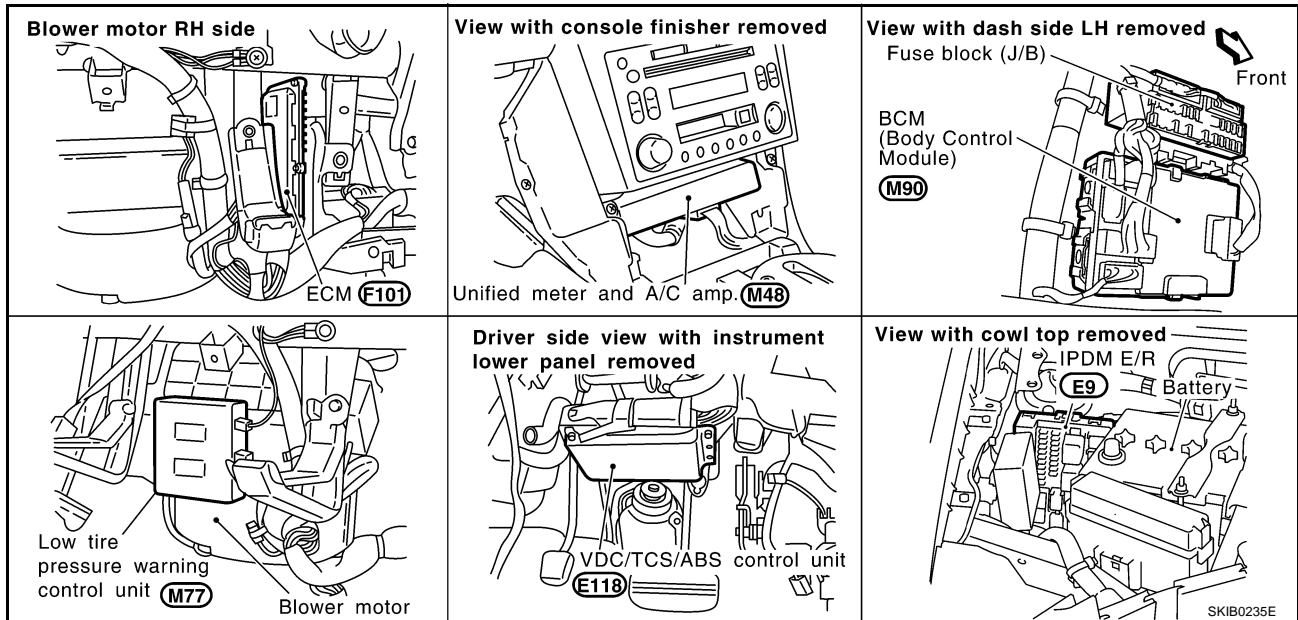

CAN SYSTEM (TYPE 4)






[CAN]

Wiring Diagram — CAN —

AKS009DV

LAN-CAN-05

DATA LINE

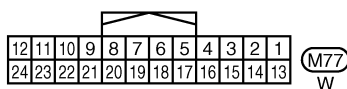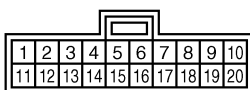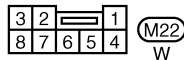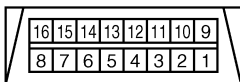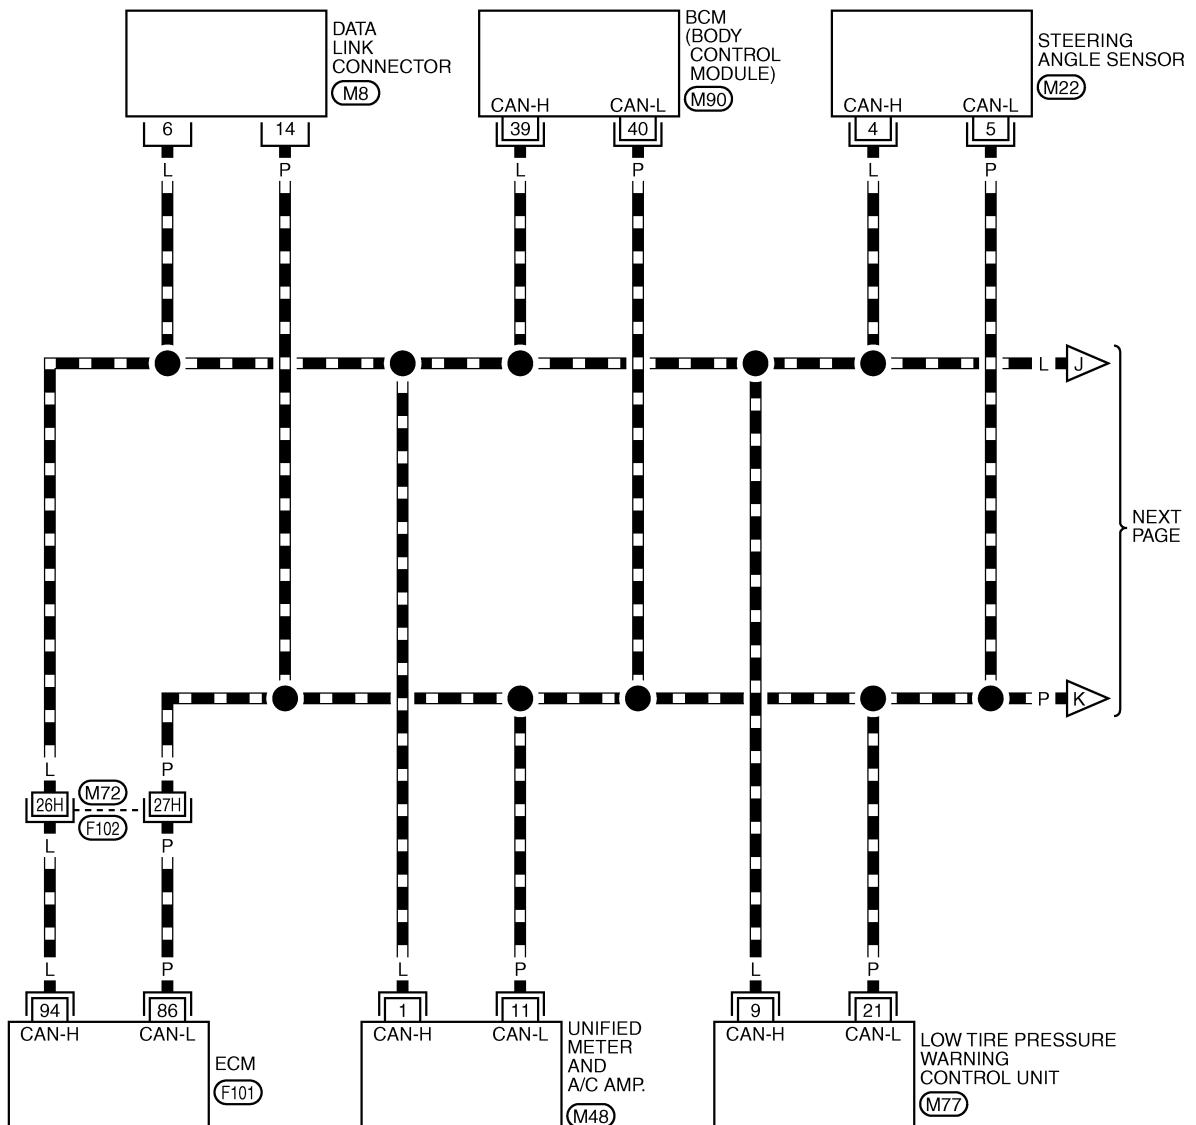

REFER TO THE FOLLOWING.



(F102) -SUPER MULTIPLE JUNCTION (SMJ)

(M90), (F101) -ELECTRICAL UNITS

TKWT1868E

LAN-CAN-06

 : DATA LINE

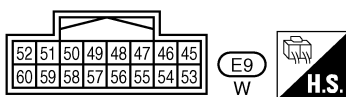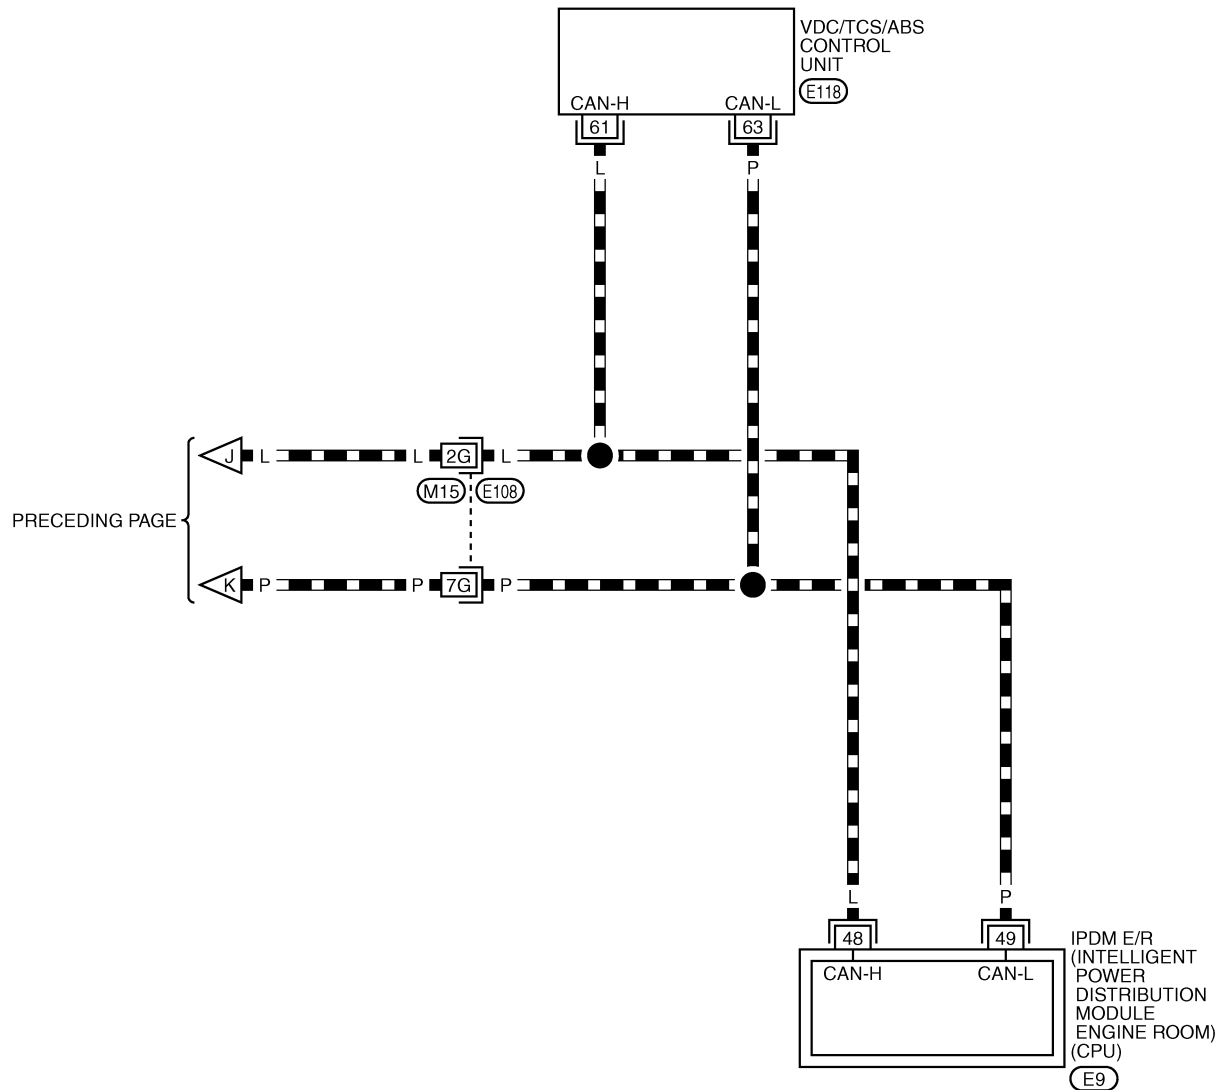

REFER TO THE FOLLOWING.

(E108) -SUPER MULTIPLE JUNCTION (SMJ)

(E118) -ELECTRICAL UNITS


Work Flow

AKS00AA0

- When there are no indications of "METER A/C AMP", "BCM", "AIR PRESSURE MONITOR" or "IPDM E/R" on "SELECT SYSTEM" display of CONSULT-II, print the "SELECT SYSTEM".

(Example)

NISSAN	
CONSULT- II	
ENGINE	
START (NISSAN BASED VHCL)	
START (RENAULT BASED VHCL)	
SUB MODE	
	LIGHT COPY




SELECT SYSTEM			
ENGINE			
A/T			
ABS			
AIR BAG			
BCM			
METER A/C AMP			
	BACK	LIGHT	COPY

PKIA2093E

- Print all the data of "SELF-DIAG RESULTS" for "ENGINE", "METER A/C AMP", "BCM", "AIR PRESSURE MONITOR", "ABS" and "IPDM E/R" displayed on CONSULT-II.

(Example)

SELECT DIAG MODE	
WORK SUPPORT	
SELF-DIAG RESULTS	
DATA MONITOR	
DATA MONITOR (SPEC)	
ACTIVE TEST	
FUNCTION TEST	
Scroll Down	
	BACK LIGHT COPY




SELF-DIAG RESULTS	
DTC RESULTS TIME	
CAN COMM CIRCUIT [U1000]	0
F.F.DATA	
ERASE PRINT	
MODE	BACK LIGHT COPY

PKIA2094E


- Print all the data of "DATA MONITOR (CAN DIAG SUPPORT MNTR)" for "ENGINE", "METER A/C AMP", "BCM", "AIR PRESSURE MONITOR", "ABS" and "IPDM E/R" displayed on CONSULT-II.

(Example)

SELECT DIAG MODE	
WORK SUPPORT	
SELF-DIAG RESULTS	
DATA MONITOR	
DATA MONITOR (SPEC)	
ACTIVE TEST	
FUNCTION TEST	
Scroll Down	
	BACK LIGHT COPY



DATA MONITOR	
SELECT MONITOR ITEM	
ECM INPUT SIGNALS	
MAIN SIGNALS	
CAN DIAG SUPPORT MNTR	
SELECTION FROM MENU	
SETTING	Numerical Display
MODE	BACK LIGHT COPY



DATA MONITOR	
MONITOR	NO DTC
CAN COMM	OK
CAN CIRC 1	OK
CAN CIRC 2	OK
CAN CIRC 3	OK
CAN CIRC 4	OK
CAN CIRC 5	UNKWN
CAN CIRC 6	OK
CAN CIRC 7	OK
RECORD	
MODE	BACK LIGHT COPY

PKIA2095E

- Attach the printed sheet of "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" onto the check sheet. Refer to [LAN-91, "CHECK SHEET"](#).
- Based on the indications of "SELECT SYSTEM" and the results of "DATA MONITOR (CAN DIAG SUPPORT MNTR)", put marks "v" onto the items with "No indication", "NG", or "UNKWN" in the check sheet table. Refer to [LAN-91, "CHECK SHEET"](#).

NOTE:

- If "NG" is displayed on "CAN COMM" as "DATA MONITOR (CAN DIAG SUPPORT MNTR)" for the diagnosed control unit, replace the control unit.
 - The "DATA MONITOR (CAN DIAG SUPPORT MNTR)" items, which are not in check sheet table, are not related to diagnostic procedure on service manual.
So it is not necessary to check the status of the "DATA MONITOR (CAN DIAG SUPPORT MNTR)" items not in check sheet table.
- According to the check sheet results (example), start inspection. Refer to [LAN-93, "CHECK SHEET RESULTS \(EXAMPLE\)"](#).

CAN SYSTEM (TYPE 4)

[CAN]

CHECK SHEET

NOTE:

If "NG" is displayed on "CAN COMM" as "DATA MONITOR (CAN DIAG SUPPORT MNTR)" for the diagnosed control unit, replace the control unit.

Check sheet table

	CONSULT indication	CAN system	Tx	Rx						
				ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS /ABS control unit	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	—	—	CAN CIRC 3	CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 14	—	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	—	—	CAN CIRC 3
AIR PRESSURE MONITOR	No indication	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	—	—	—	—	—
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	CAN CIRC 5	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—	—	—

Symptoms :

Attach copy of
SELECT SYSTEM

Attach copy of
SELECT SYSTEM

A
B
C
D
E
F
G
H
I
J
LAN
L
M

Attach copy of
ENGINE
SELF-DIAG RESULTS

Attach copy of
METER A/C AMP
SELF-DIAG RESULTS

Attach copy of
BCM
SELF-DIAG RESULTS

Attach copy of
AIR PRESSURE
MONITOR
SELF-DIAG RESULTS

Attach copy of
ABS
SELF-DIAG RESULTS

Attach copy of
IPDM E/R
SELF-DIAG RESULTS

Attach copy of
ENGINE
DATA MONITOR

Attach copy of
METER A/C AMP
DATA MONITOR

Attach copy of
BCM
DATA MONITOR

Attach copy of
AIR PRESSURE
MONITOR
DATA MONITOR

Attach copy of
ABS
DATA MONITOR

Attach copy of
IPDM E/R
DATA MONITOR










CHECK SHEET RESULTS (EXAMPLE)

NOTE:


If "NG" is displayed on "CAN COMM" as "DATA MONITOR (CAN DIAG SUPPORT MNTR)" for the diagnosed control unit, replace the control unit.


Case 1

Check harness between data link connector and unified meter and A/C amp. Refer to [LAN-107, "Circuit Check Between Data Link Connector and Unified Meter and A/C Amp."](#)

	CONSULT indication	CAN system	Tx	Rx						
				ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS /ABS control unit	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—			—	—		
METER A/C AMP		—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 14	—	CAN CIRC 5	—
BCM		CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	—	—	CAN CIRC 3
AIR PRESSURE MONITOR		CAN COMM	CAN CIRC 1	—	CAN CIRC 2	—	—	—	—	—
ABS	—	CAN COMM	CAN CIRC 1		—	—	—	CAN CIRC 5	—	—
IPDM E/R		—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—	—	—

SKIB0171E

 : Malfunctioning part

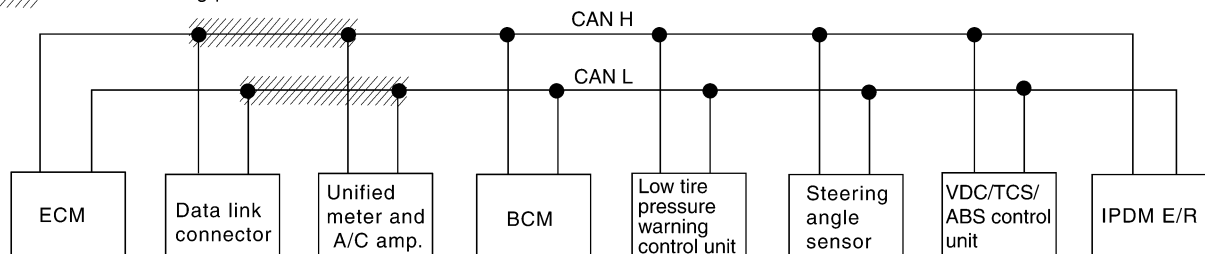

PKIA2049E

CAN SYSTEM (TYPE 4)

[CAN]


Case 2

Check harness between unified meter and A/C amp. and BCM. Refer to [LAN-107, "Circuit Check Between Unified Meter and A/C Amp. and BCM"](#) .

	CONSULT indication	CAN system	Tx	Rx						
				ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS/ABS control unit	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	✓ CAN CIRC 6	—	—	✓ CAN CIRC 3	✓ CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	✓ CAN CIRC 4	✓ CAN CIRC 14	—	✓ CAN CIRC 5	—
BCM	✓ No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	—	—	CAN CIRC 3
AIR PRESSURE MONITOR	✓ No indication	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	—	—	—	—	—
ABS	—	CAN COMM	CAN CIRC 1	✓ CAN CIRC 2	—	—	—	CAN CIRC 5	—	—
IPDM E/R	✓ No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—	—	—

SKIB0172E

//// : Malfunctioning part

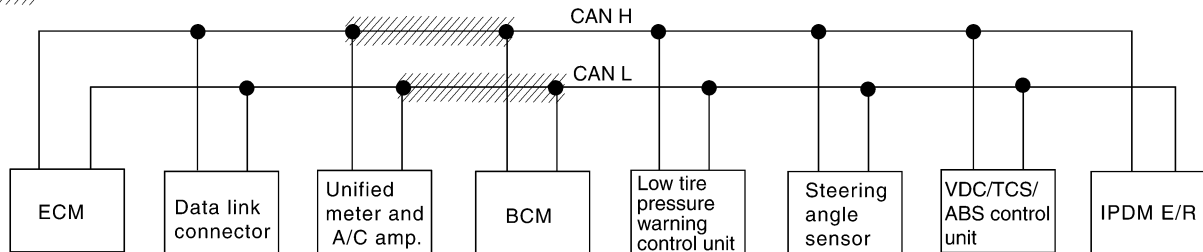

PKIA2050E

CAN SYSTEM (TYPE 4)


[CAN]

Case 3

Check harness between BCM and Low Tire Pressure Warning Control Unit. Refer to [LAN-108, "Circuit Check Between BCM and Low Tire Pressure Warning Control Unit"](#) .

	CONSULT indication	CAN system	Tx	Rx						
				ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS /ABS control unit	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	—	—	CAN CIRC 3	CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 14	—	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	—	—	CAN CIRC 3
AIR PRESSURE MONITOR	No indication	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	—	—	—	—	—
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	CAN CIRC 5	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—	—	—

SKIB0173E

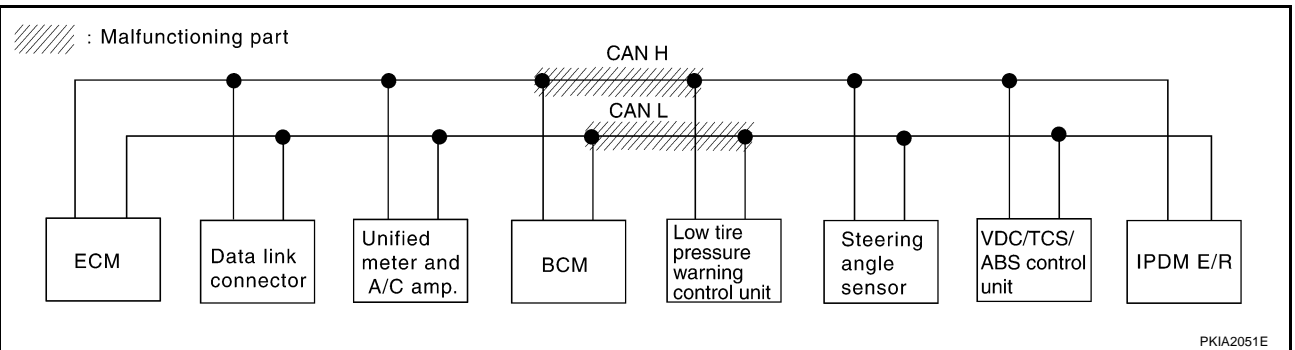

PKIA2051E

CAN SYSTEM (TYPE 4)

[CAN]


Case 4

Check harness between Low Tire Pressure Warning Control Unit and steering angle sensor. Refer to [LAN-108, "Circuit Check Between Low Tire Pressure Warning Control Unit and Steering Angle Sensor"](#) .

	CONSULT indication	CAN system	Tx	Rx						
				ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS /ABS control unit	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	—	—	✓ CAN CIRC 3	✓ CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 14	—	✓ CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	—	—	✓ CAN CIRC 3
AIR PRESSURE MONITOR	No indication	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	—	—	—	—	—
ABS	—	CAN COMM	CAN CIRC 1	✓ CAN CIRC 2	—	—	—	CAN CIRC 5	—	—
IPDM E/R	✓ No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—	—	—

SKIB0174E

//// : Malfunctioning part

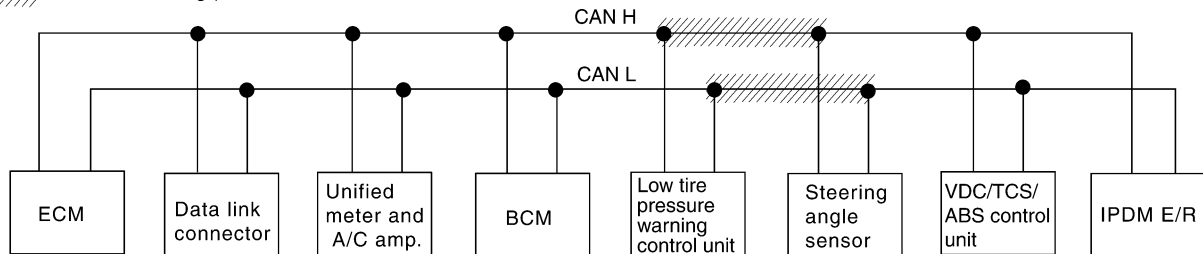

PKIA2052E

CAN SYSTEM (TYPE 4)


[CAN]

Case 5

Check harness between steering angle sensor and VDC/TCS/ABS control unit. Refer to [LAN-109, "Circuit Check Between Steering Angle Sensor and VDC/TCS/ABS Control Unit"](#).

	CONSULT indication	CAN system	Tx	Rx						
				ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS /ABS control unit	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	—	—	CAN CIRC 3	CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 14	—	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	—	—	CAN CIRC 3
AIR PRESSURE MONITOR	No indication	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	—	—	—	—	—
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	CAN CIRC 5	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—	—	—



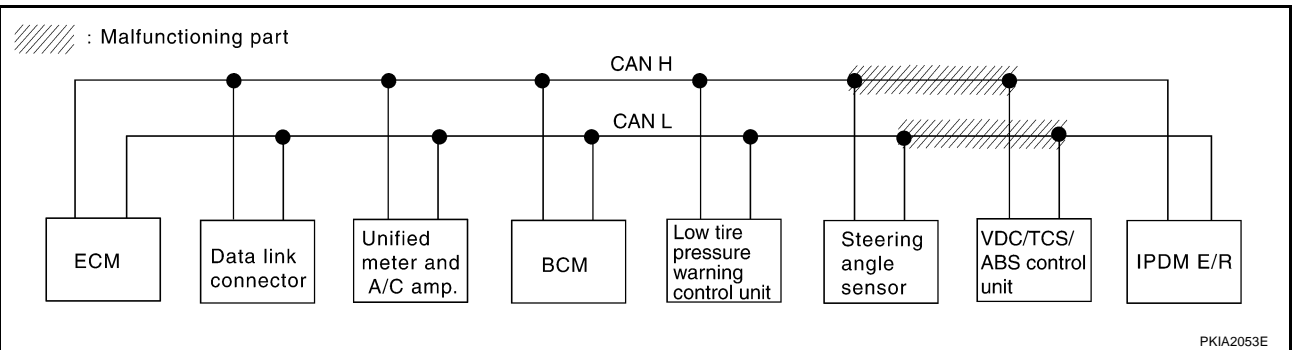






SKIB0175E



PKIA2053E


Case 6

Check ECM circuit. Refer to [LAN-110, "ECM Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx						
				ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS /ABS control unit	IPDM E/R
ENGINE	—	CAN COMM		—			—	—		
METER A/C AMP	No indication	—	CAN CIRC 1		—	CAN CIRC 4	CAN CIRC 14	—	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1		CAN CIRC 4	—	—	—	—	CAN CIRC 3
AIR PRESSURE MONITOR	No indication	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	—	—	—	—	—
ABS	—	CAN COMM	CAN CIRC 1		—	—	—	CAN CIRC 5	—	—
IPDM E/R	No indication	—	CAN CIRC 1		—	CAN CIRC 2	—	—	—	—

SKIB0176E

 : Malfunctioning part

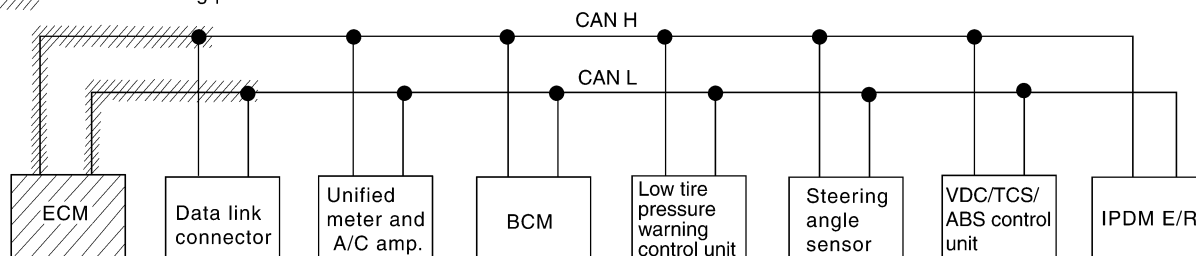

PKIA2054E

CAN SYSTEM (TYPE 4)

[CAN]


Case 7

Check data link connector circuit. Refer to [LAN-110, "Data Link Connector Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx						
				ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS/ABS control unit	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	—	—	CAN CIRC 3	CAN CIRC 7
METER A/C AMP	No indication ✓	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 14	—	CAN CIRC 5	—
BCM	No indication ✓	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	—	—	CAN CIRC 3
AIR PRESSURE MONITOR	No indication ✓	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	—	—	—	—	—
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	CAN CIRC 5	—	—
IPDM E/R	No indication ✓	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—	—	—

SKIB0177E

/// : Malfunctioning part

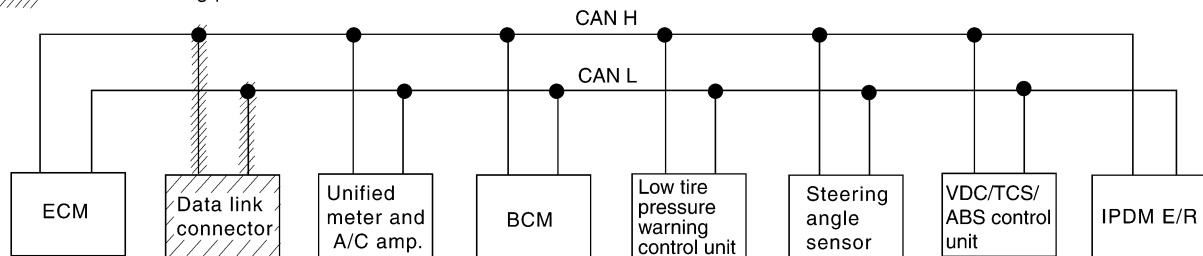

PKIA2055E

CAN SYSTEM (TYPE 4)

[CAN]


Case 8

Check unified meter and A/C amp. circuit. Refer to [LAN-111, "Unified Meter and A/C Amp. Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx						
				ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS/ABS control unit	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	—	—	CAN CIRC 3	CAN CIRC 7
METER A/C AMP	No indication ✓	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 14	—	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	—	—	CAN CIRC 3
AIR PRESSURE MONITOR	No indication	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	—	—	—	—	—
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	CAN CIRC 5	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—	—	—

SKIB0178E

//// : Malfunctioning part

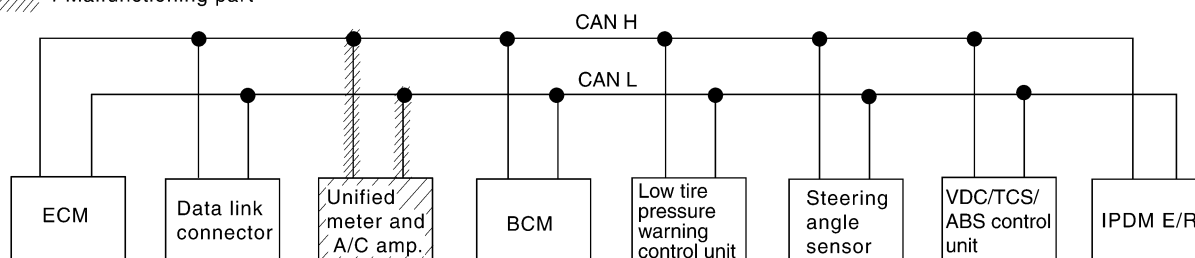

PKIA2056E

CAN SYSTEM (TYPE 4)

[CAN]

Case 9


Check BCM circuit. Refer to [LAN-111, "BCM Circuit Check"](#) .

A
B
C
D
E
F
G
H
I
J
LAN
L
M

	CONSULT indication	CAN system	Tx	Rx						
				ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS /ABS control unit	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	—	—	CAN CIRC 3	CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 14	—	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	—	—	CAN CIRC 3
AIR PRESSURE MONITOR	No indication	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	—	—	—	—	—
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	CAN CIRC 5	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—	—	—

SKIB0179E

//// : Malfunctioning part

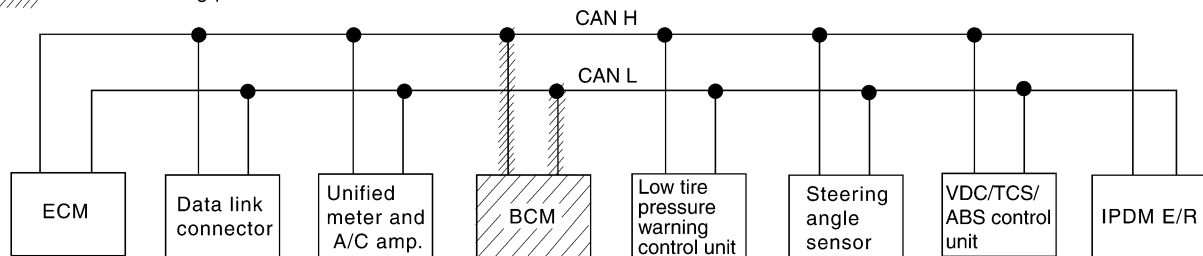

PKIA2057E

CAN SYSTEM (TYPE 4)

[CAN]


Case 10

Check Low Tire Pressure Warning Control Unit circuit. Refer to [LAN-112, "Low Tire Pressure Warning Control Unit Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx						
				ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS/ABS control unit	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	—	—	CAN CIRC 3	CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	✓ CAN CIRC 14	—	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	—	—	CAN CIRC 3
AIR PRESSURE MONITOR	✓ No indication	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	—	—	—	—	—
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	CAN CIRC 5	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—	—	—

SKIB0180E

//// : Malfunctioning part

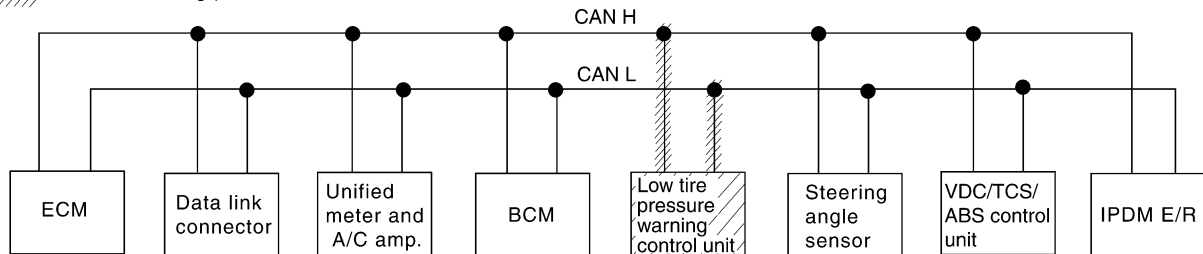

PKIA2058E


Case 11

Check steering angle sensor circuit. Refer to [LAN-112, "Steering Angle Sensor Circuit Check"](#).

	CONSULT indication	CAN system	Tx	Rx						
				ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS/ABS control unit	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	—	—	CAN CIRC 3	CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 14	—	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	—	—	CAN CIRC 3
AIR PRESSURE MONITOR	No indication	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	—	—	—	—	—
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	CAN CIRC 5	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—	—	—

SKIB0181E

//// : Malfunctioning part

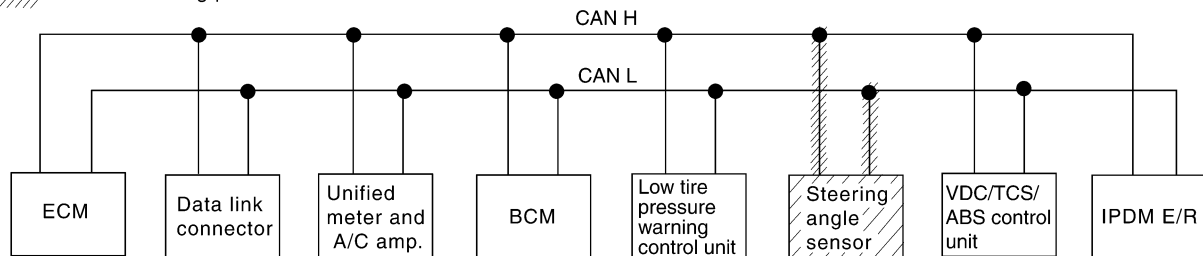

PKIA2059E

CAN SYSTEM (TYPE 4)

[CAN]


Case 12

Check VDC/TCS/ABS control unit circuit. Refer to [LAN-113, "VDC/TCS/ABS Control Unit Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx						
				ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS /ABS control unit	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	—	—	CAN CIRC 3	CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 14	—	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	—	—	CAN CIRC 3
AIR PRESSURE MONITOR	No indication	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	—	—	—	—	—
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	CAN CIRC 5	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—	—	—

SKIB0182E

//// : Malfunctioning part

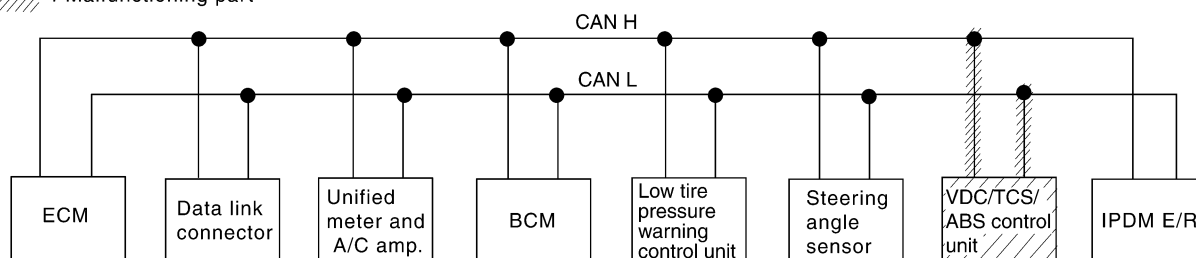

PKIA2060E

CAN SYSTEM (TYPE 4)


[CAN]

Case 13

Check IPDM E/R circuit. Refer to [LAN-113, "IPDM E/R Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx						
				ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS /ABS control unit	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	—	—	CAN CIRC 3	✓ CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 14	—	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	—	—	✓ CAN CIRC 3
AIR PRESSURE MONITOR	No indication	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	—	—	—	—	—
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	CAN CIRC 5	—	—
IPDM E/R	✓ No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—	—	—

SKIB0183E

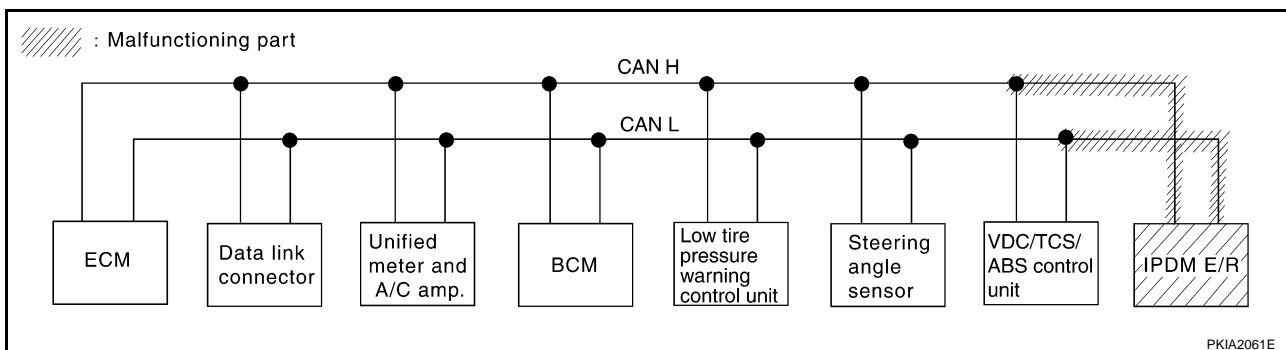

PKIA2061E

Case 14



Check CAN communication circuit. Refer to [LAN-114, "CAN Communication Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx						
				ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS /ABS control unit	IPDM E/R
ENGINE	—	CAN COMM	✓ CAN CIRC 1	—	✓ CAN CIRC 4	✓ CAN CIRC 6	—	—	✓ CAN CIRC 3	✓ CAN CIRC 7
METER A/C AMP	✓ No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 14	—	CAN CIRC 5	—
BCM	✓ No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	—	—	CAN CIRC 3
AIR PRESSURE MONITOR	✓ No indication	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	—	—	—	—	—
ABS	—	✓ CAN COMM	✓ CAN CIRC 1	✓ CAN CIRC 2	—	—	—	✓ CAN CIRC 5	—	—
IPDM E/R	✓ No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—	—	—

SKIB0184E

Case 15



Check IPDM E/R Ignition relay circuit continuously sticks "OFF". Refer to [LAN-116, "IPDM E/R Ignition Relay Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx						
				ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS /ABS control unit	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	—	—	 CAN CIRC 3	CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 14	—	 CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	—	—	CAN CIRC 3
AIR PRESSURE MONITOR	No indication	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	—	—	—	—	—
ABS	—	CAN COMM	CAN CIRC 1	CAN CIRC 2	—	—	—	CAN CIRC 5	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—	—	—

SKIB0185E

Case 16

Check IPDM E/R Ignition relay circuit continuously sticks "ON". Refer to [LAN-116, "IPDM E/R Ignition Relay Circuit Check"](#) .

	CONSULT indication	CAN system	Tx	Rx						
				ECM	Unified meter and A/C amp.	BCM	Low tire pressure warning control unit	Steering angle sensor	VDC/TCS /ABS control unit	IPDM E/R
ENGINE	—	CAN COMM	CAN CIRC 1	—	CAN CIRC 4	CAN CIRC 6	—	—	CAN CIRC 3	CAN CIRC 7
METER A/C AMP	No indication	—	CAN CIRC 1	CAN CIRC 2	—	CAN CIRC 4	CAN CIRC 14	—	CAN CIRC 5	—
BCM	No indication	CAN COMM	CAN CIRC 1	CAN CIRC 2	CAN CIRC 4	—	—	—	—	CAN CIRC 3
AIR PRESSURE MONITOR	No indication	CAN COMM	CAN CIRC 1	—	CAN CIRC 2	—	—	—	—	—
ABS	—	CAN COMM	CAN CIRC 1	 CAN CIRC 2	—	—	—	 CAN CIRC 5	—	—
IPDM E/R	No indication	—	CAN CIRC 1	CAN CIRC 3	—	CAN CIRC 2	—	—	—	—

SKIB0186E

Circuit Check Between Data Link Connector and Unified Meter and A/C Amp.**1. CHECK HARNESS FOR OPEN CIRCUIT**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Disconnect ECM connector and unified meter and A/C amp. connector.
4. Check continuity between data link connector M8 terminals 6 (L), 14 (P) and unified meter and A/C amp. harness connector M48 terminals 1 (L), 11 (P).


6 (L) – 1 (L) : Continuity should exist.

14 (P) – 11 (P) : Continuity should exist.

OK or NG

OK >> Reconnect all connectors to perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-90, "Work Flow"](#).

NG >> Repair harness.

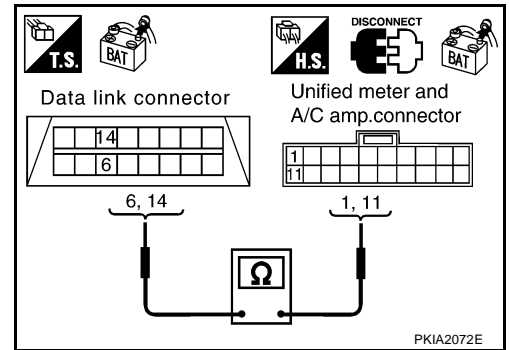

PKIA2072E

Circuit Check Between Unified Meter and A/C Amp. and BCM**1. CHECK HARNESS FOR OPEN CIRCUIT**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Disconnect the following connectors.
 - ECM connector
 - Unified meter and A/C amp. connector
 - BCM connector
4. Check continuity between unified meter and A/C amp. harness connector M48 terminals 1 (L), 11 (P) and BCM harness connector M90 terminals 39 (L), 40 (P).


1 (L) – 39 (L) : Continuity should exist.

11 (P) – 40 (P) : Continuity should exist.

OK or NG

OK >> Reconnect all connectors to perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-90, "Work Flow"](#).

NG >> Repair harness.

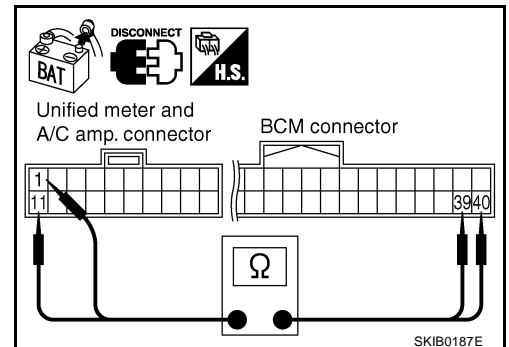

SKIB0187E

Circuit Check Between BCM and Low Tire Pressure Warning Control Unit

AKS009DZ

1. CHECK HARNESS FOR OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Disconnect the following connectors.
 - ECM connector
 - BCM connector
 - Low tire pressure warning control unit connector
4. Check continuity between BCM harness connector M90 terminals 39 (L), 40 (P) and low tire pressure warning control unit harness connector M77 terminals 9 (L), 21 (P).


39 (L) – 9 (L) : Continuity should exist.

40 (P) – 21 (P) : Continuity should exist.

OK or NG

OK >> Reconnect all connectors to perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-90, "Work Flow"](#).

NG >> Repair harness.

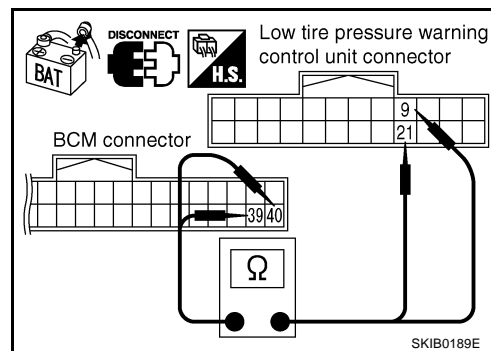**Circuit Check Between Low Tire Pressure Warning Control Unit and Steering Angle Sensor**

AKS009E0

1. CHECK HARNESS FOR OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Disconnect the following connectors.
 - ECM connector
 - Low tire pressure warning control unit connector
 - Steering angle sensor connector
4. Check continuity between Low tire pressure warning control unit harness connector M77 terminals 9 (L), 21 (P) and steering angle sensor harness connector M22 terminals 4 (L), 5 (P).


9 (L) – 4 (L) : Continuity should exist.

21 (P) – 5 (P) : Continuity should exist.

OK or NG

OK >> Reconnect all connectors to perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-90, "Work Flow"](#).

NG >> Repair harness.

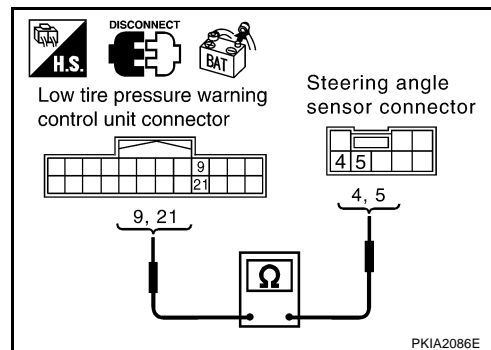

Circuit Check Between Steering Angle Sensor and VDC/TCS/ABS Control Unit

AKS00AA3

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connector for damage, bend and loose connection (connector-side and harness-side).

- Harness connector M15
- Harness connector E108

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect steering angle sensor connector and harness connector M15.
2. Check continuity between steering angle sensor harness connector M22 terminals 4 (L), 5 (P) and harness connector M15 terminals 2G (L), 7G (P).


4 (L) – 2G (L) : Continuity should exist.

5 (P) – 7G (P) : Continuity should exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness.

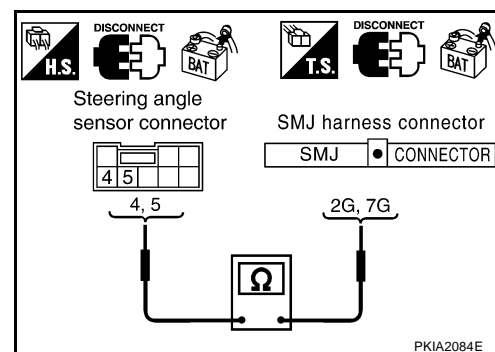

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect VDC/TCS/ABS control unit connector.
2. Check continuity between harness connector E108 terminals 2G (L), 7G (P) and VDC/TCS/ABS control unit harness connector E118 terminals 61 (L), 63 (P).


2G (L) – 61 (L) : Continuity should exist.

7G (P) – 63 (P) : Continuity should exist.

OK or NG

OK >> Reconnect all connectors to perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-90, "Work Flow"](#).

NG >> Repair harness.

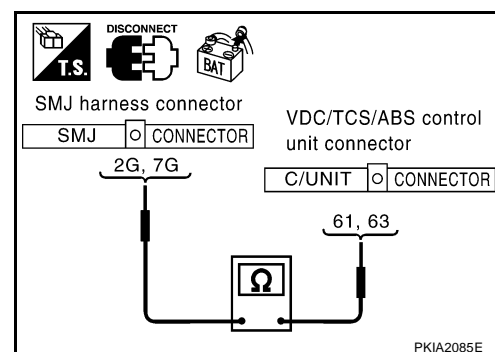

ECM Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connector for damage, bend and loose connection (control module-side and harness-side).
 - ECM connector
 - Harness connector F102
 - Harness connector M72

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect ECM connector.
2. Check resistance between ECM harness connector F101 terminals 94 (L) and 86 (P).

94 (L) – 86 (P)**: Approx. 108 – 132Ω**

OK or NG

OK >> Replace ECM.

NG >> Repair harness between ECM and data link connector.

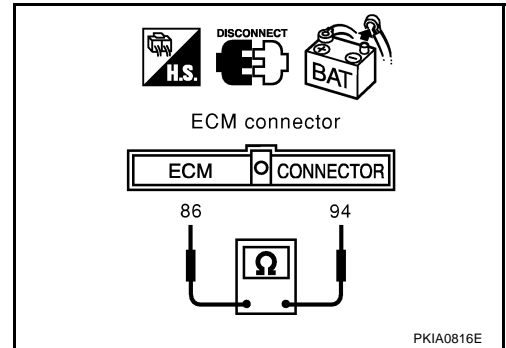

PKIA0816E

Data Link Connector Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of data link connector for damage, bend and loose connection (connector-side and harness-side).

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


Check resistance between data link connector M8 terminals 6 (L) and 14 (P).

6 (L) – 14 (P)**: Approx. 54 – 66Ω**

OK or NG

OK >> Perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-90, "Work Flow"](#).

NG >> Repair harness between data link connector and unified meter and A/C amp.

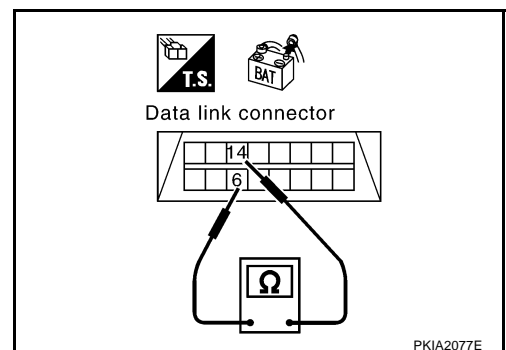

PKIA2077E

Unified Meter and A/C Amp. Circuit Check**1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of unified meter and A/C amp. for damage, bend and loose connection (meter-side and harness-side).

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect unified meter and A/C amp. connector.
2. Check resistance between unified meter and A/C amp. harness connector M48 terminals 1 (L) and 11 (P).

1 (L) – 11 (P)**: Approx. 54 – 66Ω**

OK or NG

OK >> Replace unified meter and A/C amp.

NG >> Repair harness between unified meter and A/C amp. and BCM.

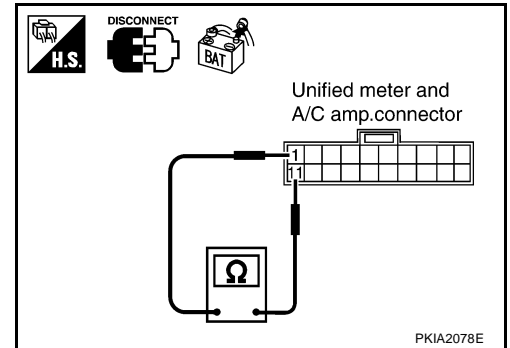**BCM Circuit Check****1. CHECK CONNECTOR**

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of BCM for damage, bend and loose connection (control module-side and harness-side).

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT


1. Disconnect BCM connector.
2. Check resistance between BCM harness connector M90 terminals 39 (L) and 40 (P).

39 (L) – 40 (P)**: Approx. 54 – 66Ω**

OK or NG

OK >> Replace BCM.

NG >> Repair harness between BCM and steering angle sensor.

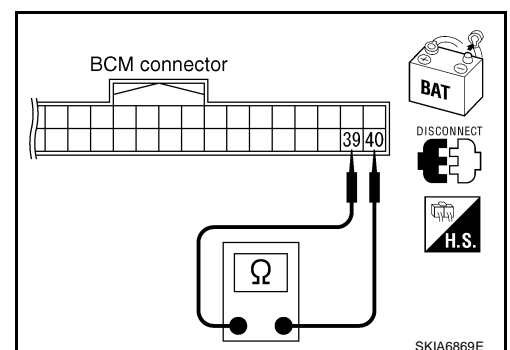

Low Tire Pressure Warning Control Unit Circuit Check

AKS009E6

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of low tire pressure warning control unit for damage, bend and loose connection (control unit-side and harness-side).

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect low tire pressure warning control unit connector.
2. Check resistance between low tire pressure warning control unit harness connector M77 terminals 9 (L) and 21 (P).


9 (L) – 21 (P)

: Approx. 54 – 66Ω

OK or NG

OK >> Replace low tire pressure warning control unit.

NG >> Repair harness between low tire pressure warning control unit and steering angle sensor.

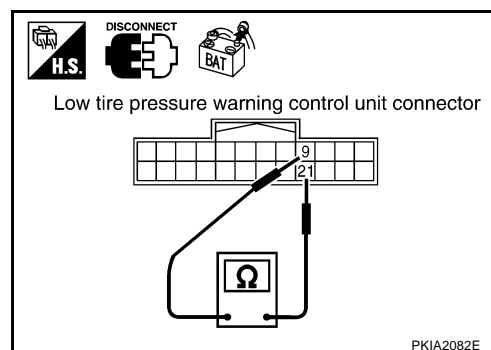

Steering Angle Sensor Circuit Check

AKS00A48

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of steering angle sensor for damage, bend and loose connection (sensor-side and harness-side).

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect steering angle sensor connector.
2. Check resistance between steering angle sensor harness connector M22 terminals 4 (L) and 5 (P).


4 (L) – 5 (P)

: Approx. 54 – 66Ω

OK or NG

OK >> Replace steering angle sensor.

NG >> Repair harness between steering angle sensor and harness connector M15.

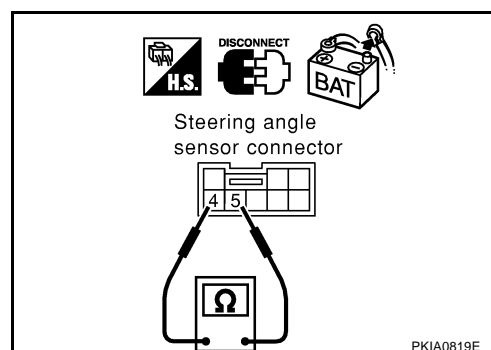

VDC/TCS/ABS Control Unit Circuit Check

AKS00AA9

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of VDC/TCS/ABS control unit for damage, bend and loose connection (control unit-side and harness-side).

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect VDC/TCS/ABS control unit connector.
2. Check resistance between VDC/TCS/ABS control unit harness connector E118 terminals 61 (L) and 63 (P).

61 (L) – 63 (P)**: Approx. 54 – 66Ω**OK or NG

OK >> Replace VDC/TCS/ABS control unit.

NG >> Repair harness between VDC/TCS/ABS control unit and IPDM E/R.

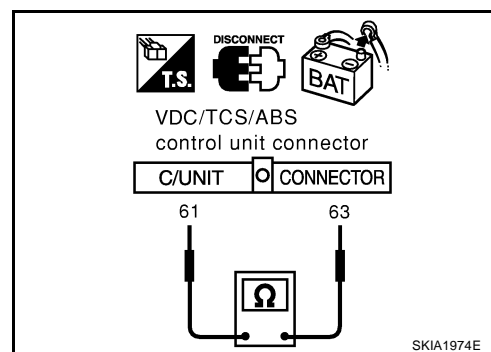

SKIA1974E

IPDM E/R Circuit Check

AKS00AAA

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check terminals and connector of IPDM E/R for damage, bend and loose connection (control module-side and harness-side).

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.


2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check resistance between IPDM E/R harness connector E9 terminals 48 (L) and 49 (P).

48 (L) – 49 (P)**: Approx. 108 – 132Ω**OK or NG

OK >> Replace IPDM E/R.

NG >> Repair harness between IPDM E/R and VDC/TCS/ABS control unit.

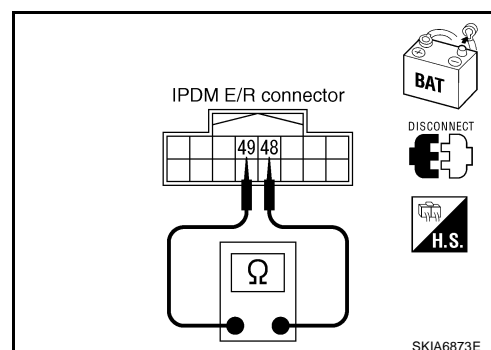

SKIA6873E

CAN Communication Circuit Check

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the negative battery terminal.
3. Check following terminals and connector for damage, bend and loose connection (control module-side, meter-side, sensor-side, control unit-side and harness-side).
 - ECM
 - Unified meter and A/C amp.
 - BCM
 - Low tire pressure warning control unit
 - Steering angle sensor
 - VDC/TCS/ABS control unit
 - IPDM E/R
 - Between ECM and IPDM E/R

OK or NG

OK >> GO TO 2.

NG >> Repair terminal or connector.

2. CHECK HARNESS FOR SHORT CIRCUIT


1. Disconnect ECM connector and harness connector F102.
2. Check continuity between ECM harness connector F101 terminals 94 (L) and 86 (P).

94 (L) – 86 (P) : Continuity should not exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness between ECM and harness connector F102.

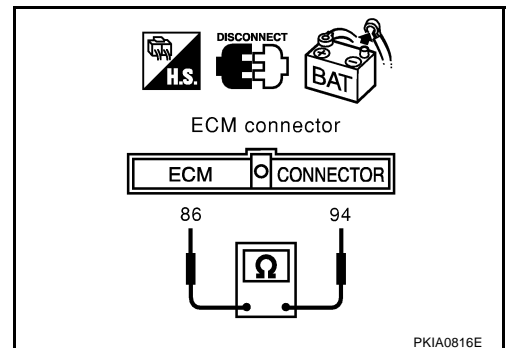

3. CHECK HARNESS FOR SHORT CIRCUIT

Check continuity between ECM harness connector F101 terminals 94 (L), 86 (P) and ground.


94 (L) – ground : Continuity should not exist.

86 (P) – ground : Continuity should not exist.

OK or NG

OK >> GO TO 4.

NG >> Repair harness between ECM and harness connector F102.

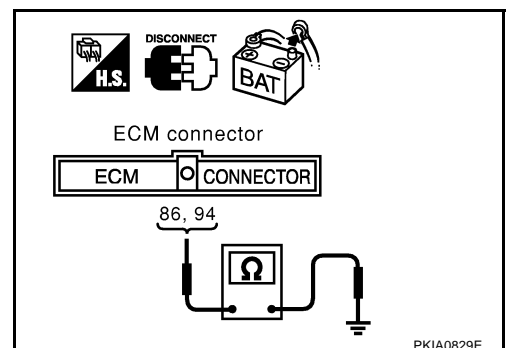

4. CHECK HARNESS FOR SHORT CIRCUIT


1. Disconnect following connectors.
 - Unified meter and A/C amp. connector
 - BCM connector
 - Low tire pressure warning control unit connector
 - Steering angle sensor connector
 - Harness connector M15
2. Check continuity between data link connector M8 terminals 6 (L) and 14 (P).

6 (L) – 14 (P) : Continuity should not exist.

OK or NG

OK >> GO TO 5.

- NG >> Check the following harnesses. If any harness is damaged, repair the harness.
- Harness between data link connector and harness connector M72.
 - Harness between data link connector and unified meter and A/C amp.
 - Harness between data link connector and BCM.
 - Harness between data link connector and low tire pressure warning control unit.
 - Harness between data link connector and steering angle sensor.
 - Harness between data link connector and harness connector M15.

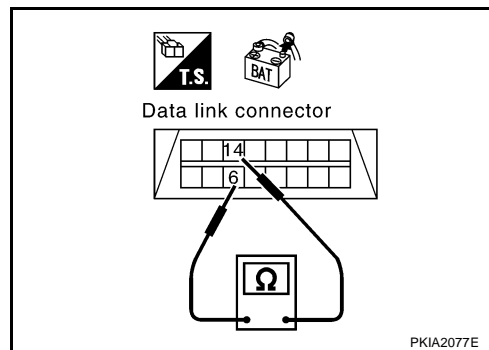

5. CHECK HARNESS FOR SHORT CIRCUIT

Check continuity between data link connector M8 terminals 6 (L), 14 (P) and ground.


6 (L) – ground : Continuity should not exist.

14 (P) – ground : Continuity should not exist.

OK or NG

OK >> GO TO 6.

- NG >> Check the following harnesses. If any harness is damaged, repair the harness.
- Harness between data link connector and harness connector M72.
 - Harness between data link connector and unified meter and A/C amp.
 - Harness between data link connector and BCM.
 - Harness between data link connector and low tire pressure warning control unit.
 - Harness between data link connector and steering angle sensor.
 - Harness between data link connector and harness connector M15.

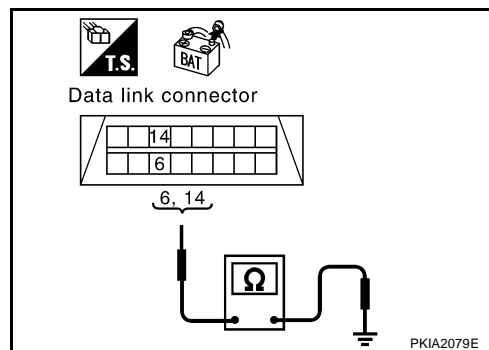

6. CHECK HARNESS FOR SHORT CIRCUIT

1. Disconnect VDC/TCS/ABS control unit connector and IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector E9 terminals 48 (L) and 49 (P).


48 (L) – 49 (P) : Continuity should not exist.

OK or NG

OK >> GO TO 7.

NG >> Check the following harnesses. If any harness is damaged, repair the harness.

- Harness between IPDM E/R and VDC/TCS/ABS control unit.
- Harness between IPDM E/R and harness connector E108.

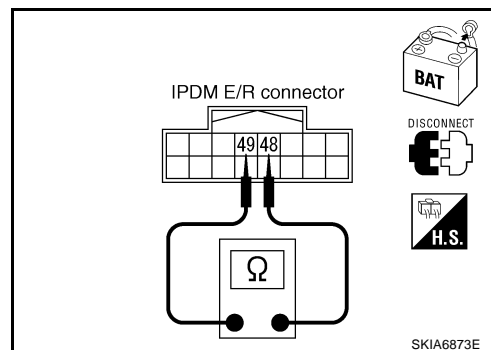

7. CHECK HARNESS FOR SHORT CIRCUIT

Check continuity between IPDM E/R harness connector E9 terminals 48 (L), 49 (P) and ground.

48 (L) – ground : Continuity should not exist.


49 (P) – ground : Continuity should not exist.

OK or NG

OK >> GO TO 8.

NG >> Check the following harnesses. If any harness is damaged, repair the harness.

- Harness between IPDM E/R and VDC/TCS/ABS control unit.
- Harness between IPDM E/R and harness connector E108.

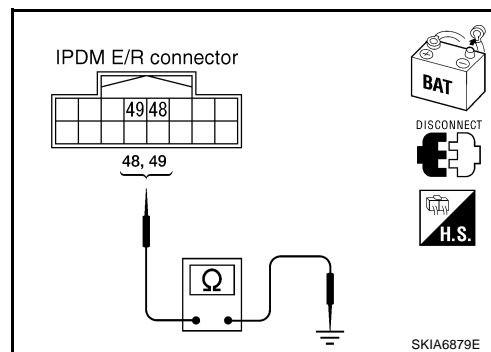

8. ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION

Check components inspection. Refer to [LAN-117, "ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION"](#).

OK or NG

OK >> Reconnect all connectors to perform "SELECT SYSTEM", "SELF-DIAG RESULTS" and "DATA MONITOR (CAN DIAG SUPPORT MNTR)" displayed on CONSULT-II. Refer to [LAN-90, "Work Flow"](#).

NG >> Replace ECM and/or IPDM E/R.

IPDM E/R Ignition Relay Circuit Check

AKS00AAC


Check the following. If no problem is found, replace the IPDM E/R.

- IPDM E/R power supply circuit. Refer to [PG-28, "IPDM E/R Power/Ground Circuit Inspection"](#).
- Ignition power supply circuit. Refer to [PG-11, "IGNITION POWER SUPPLY — IGNITION SW. IN "ON" AND/OR "START""](#).

Component Inspection**ECM/IPDM E/R INTERNAL CIRCUIT INSPECTION**

- Remove ECM and IPDM E/R from vehicle.
- Check resistance between ECM terminals 94 and 86.
- Check resistance between IPDM E/R terminals 48 and 49.

Unit	Terminal	Resistance value (Ω) (Approx.)
ECM	94 - 86	108 - 132
IPDM E/R	48 - 49	

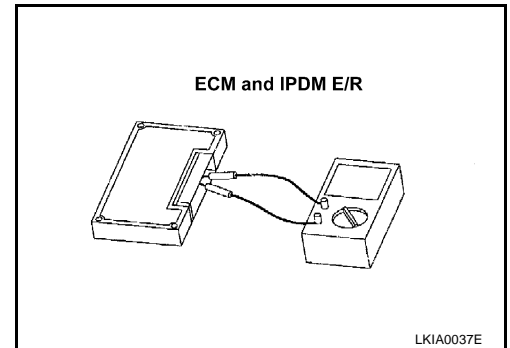

A

B

C

D

E

F

G

H

I

J

LAN

L

M

