

PWC

SECTION

POWER WINDOW CONTROL SYSTEM

CONTENTS

BASIC INSPECTION	4	BCM	14
DIAGNOSIS AND REPAIR WORK FLOW	4	BCM : Diagnosis Procedure	14
Work Flow	4	POWER WINDOW MAIN SWITCH	14
INSPECTION AND ADJUSTMENT	5	POWER WINDOW MAIN SWITCH : Diagnosis Procedure	14
ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL	5	POWER WINDOW SUB-SWITCH	15
ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Description	5	POWER WINDOW SUB-SWITCH : Diagnosis Procedure	15
ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Special Re- pair Requirement	5	POWER WINDOW MOTOR	17
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT	5	DRIVER SIDE	17
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description	6	DRIVER SIDE : Description	17
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement	6	DRIVER SIDE : Component Function Check	17
FUNCTION DIAGNOSIS	7	DRIVER SIDE : Diagnosis Procedure	17
POWER WINDOW SYSTEM	7	DRIVER SIDE : Component Inspection	18
System Diagram	7	PASSENGER SIDE	18
System Description	7	PASSENGER SIDE : Description	18
Component Parts Location	10	PASSENGER SIDE : Component Function Check	18
Component Description	10	PASSENGER SIDE : Diagnosis Procedure	18
DIAGNOSIS SYSTEM (BCM)	12	PASSENGER SIDE : Component Inspection	19
COMMON ITEM	12	ENCODER	21
COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)	12	DRIVER SIDE	21
RETAINED PWR	13	DRIVER SIDE : Description	21
RETAINED PWR : CONSULT-III Function (BCM - RETAINED PWR)	13	DRIVER SIDE : Component Function Check	21
COMPONENT DIAGNOSIS	14	DRIVER SIDE : Diagnosis Procedure	21
POWER SUPPLY AND GROUND CIRCUIT	14	PASSENGER SIDE	23
		PASSENGER SIDE : Description	23
		PASSENGER SIDE : Component Function Check	23
		PASSENGER SIDE : Diagnosis Procedure	23
		POWER WINDOW SERIAL LINK	26
		POWER WINDOW MAIN SWITCH	26
		POWER WINDOW MAIN SWITCH : Description	26

A

B

C

D

E

F

G

H

I

J

PWC

L

M

N

O

P

POWER WINDOW MAIN SWITCH : Component Function Check	26	WITH BOTH POWER WINDOW MAIN SWITCH AND POWER WINDOW SUB-SWITCH	81
POWER WINDOW MAIN SWITCH : Diagnosis Procedure	26	WITH BOTH POWER WINDOW MAIN SWITCH AND POWER WINDOW SUB-SWITCH : Description	81
POWER WINDOW SUB-SWITCH	27	WITH BOTH POWER WINDOW MAIN SWITCH AND POWER WINDOW SUB-SWITCH : Diagnosis Procedure	82
POWER WINDOW SUB-SWITCH : Description	27	ANTI-PINCH FUNCTION DOES NOT OPERATE	83
POWER WINDOW SUB-SWITCH : Component Function Check	27	DRIVER SIDE	83
POWER WINDOW SUB-SWITCH : Diagnosis Procedure	28	DRIVER SIDE : Description	83
ECU DIAGNOSIS	30	DRIVER SIDE : Diagnosis Procedure	83
BCM (BODY CONTROL MODULE)	30	PASSENGER SIDE	83
Reference Value	30	PASSENGER SIDE : Description	83
Wiring Diagram - BCM -	53	PASSENGER SIDE : Diagnosis Procedure	83
Fail-safe	58	AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY	84
DTC Inspection Priority Chart	61	DRIVER SIDE	84
DTC Index	62	DRIVER SIDE : Diagnosis Procedure	84
POWER WINDOW MAIN SWITCH	65	PASSENGER SIDE	84
Reference Value	65	PASSENGER SIDE : Diagnosis Procedure	84
Wiring Diagram - POWER WINDOW CONTROL SYSTEM -	67	POWER WINDOW RETAINED POWER FUNCTION DOES NOT OPERATE NORMALLY	85
Fail-Safe	70	Description	85
POWER WINDOW SUB-SWITCH	72	Diagnosis Procedure	85
Reference Value	72	DOOR KEY CYLINDER SWITCH DOES NOT OPERATE POWER WINDOWS	86
Wiring Diagram - POWER WINDOW CONTROL SYSTEM -	74	Description	86
Fail-Safe	77	Diagnosis Procedure	86
SYMPTOM DIAGNOSIS	79	KEYLESS POWER WINDOW DOWN DOES NOT OPERATE	87
POWER WINDOWS DO NOT OPERATE WITH ANY POWER WINDOW SWITCHES	79	Description	87
Description	79	Diagnosis Procedure	87
Diagnosis Procedure	79	POWER WINDOW LOCK SWITCH DOES NOT FUNCTION	88
DRIVER SIDE POWER WINDOW ALONE DOES NOT OPERATE	80	Diagnosis Procedure	88
Description	80	POWER WINDOW SWITCH ILLUMINATION DOES NOT ILLUMINATE	89
Diagnosis Procedure	80	DRIVER SIDE	89
PASSENGER SIDE POWER WINDOW ALONE DOES NOT OPERATE	81	DRIVER SIDE : Diagnosis Procedure	89
WHEN POWER WINDOW MAIN SWITCH IS OPERATED	81	PASSENGER SIDE	89
WHEN POWER WINDOW MAIN SWITCH IS OPERATED : Description	81	PASSENGER SIDE : Diagnosis Procedure	89
WHEN POWER WINDOW MAIN SWITCH IS OPERATED : Diagnosis Procedure	81	AUTOMATIC WINDOW ADJUSTING FUNCTION DOES NOT OPERATE	90
WHEN POWER WINDOW SUB-SWITCH IS OPERATED	81	DRIVER SIDE	90
WHEN POWER WINDOW SUB-SWITCH IS OPERATED : Description	81		
WHEN POWER WINDOW SUB-SWITCH IS OPERATED : Diagnosis Procedure	81		

DRIVER SIDE : Diagnosis Procedure90	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"92	A
PASSENGER SIDE90	Precaution for Battery Service92	
PASSENGER SIDE : Diagnosis Procedure90		
PRECAUTION92	ON-VEHICLE REPAIR93	B
PRECAUTIONS92	POWER WINDOW MAIN SWITCH93	
	Removal and Installation93	C
		D
		E
		F
		G
		H
		I
		J
		PWC
		L
		M
		N
		O
		P

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000004460993

DETAILED FLOW

1.OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain as much malfunction information (conditions and environment when the malfunction occurs) as possible when the customer brings the vehicle in.

>> GO TO 2.

2.REPRODUCE THE MALFUNCTION INFORMATION

Check the malfunction on the vehicle that the customer describes.
Inspect the relation of the symptoms and the conditions when the symptoms occur.

>> GO TO 3.

3.IDENTIFY THE MALFUNCTIONING SYSTEM WITH "SYMPTOM DIAGNOSIS"

Use "Symptom diagnosis" from the symptom inspection result in step 2 and then identify where to start performing the diagnosis based on possible causes and symptoms.

>> GO TO 4.

4.IDENTIFY THE MALFUNCTIONING PARTS WITH "COMPONENT DIAGNOSIS"

Diagnose with "Component diagnosis" of the applicable system.

>> GO TO 5.

5.REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the specified malfunctioning parts.

>> GO TO 6.

6.FINAL CHECK

Check that malfunctions are not reproduced when obtaining the malfunction information from the customer, referring to the symptom inspection result in step 2.

Are the malfunctions corrected?

YES >> INSPECTION END
NO >> GO TO 3.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL

ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Description

INFOID:000000004460994

When the battery negative terminal is disconnected, the initialization is necessary.

If any of the following operations are performed, the initialization is necessary as well as when the negative battery terminal is disconnected.

- Power supply to the power window switch or power window motor is cut off by removal of battery terminal or if the battery fuse is blown.
- Disconnection and connection of power window switch harness connector.
- Removal and installation of motor from regulator assembly.
- Operation of regulator assembly as an independent unit.
- Removal and installation of door glass or door glass run.

The following specified operations cannot be performed under the non initialized condition.

- Auto-up operation
- Anti-pinch function
- Key cylinder switch power window function
- Automatic window adjusting function

ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Special Repair Requirement

INFOID:000000004460995

INITIALIZATION PROCEDURE

1. Disconnect battery negative terminal or power window switch connector. Reconnect it after a minute or more.
2. Door switch is OFF (close).
3. Turn ignition switch ON.
4. Operate power window switch to fully open the window. (This operation is unnecessary if the window is already fully open.)
5. Continue pulling the power window switch AUTO-UP. Even after glass stops at the fully closed position, keep pulling the switch for 3 seconds or more.
6. Initializing procedure is completed.
7. Inspect anti-pinch function.

CAUTION:

When initialization is not complete, power window UP does not operate while door is open.

CHECK ANTI-PINCH FUNCTION

1. Fully open the door window.
 2. Place a piece of wood near the fully closed position.
 3. Close door glass completely with AUTO-UP.
- Check that glass lowers for approximately 150 mm (5.9 in) without pinching piece of wood and stops.
 - Check that glass does not rise when operating the power window main switch while lowering.

CAUTION:

- **Never check with hands and other part of body because they may be pinched. Never get pinched.**
- **Check that AUTO-UP operates before inspection when system initialization is performed.**
- **It may switch to fail-safe mode if open/close operation is performed continuously. Perform initial setting in that situation. Refer to [PWC-70, "Fail-Safe"](#)**
- **Perform initial setting when auto-up operation or anti-pinch function does not operate normally.**
- **Finish initial setting. Otherwise, next operation cannot be performed.**

1. Auto-up operation
2. Anti-pinch function
3. Key cylinder switch power window function
4. Automatic window adjusting function
5. Auto-up, manual-up does not operate when door is open

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description

INFOID:000000004460996

When the control unit is replaced, the initialization is necessary.

If any of the following operations are performed, the initialization is necessary and the control unit must be disconnected.

- Power supply to the power window switch or power window motor is cut off by removal of battery terminal or if the battery fuse is blown.
- Disconnection and connection of power window switch harness connector.
- Removal and installation of motor from regulator assembly.
- Operation of regulator assembly as an independent unit.
- Removal and installation of door glass or door glass run.

The following specified operations cannot be performed under the non initialized condition.

- Auto-up operation
- Anti-pinch function
- Key cylinder switch power window function
- Automatic window adjusting function

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:000000004460997

INITIALIZATION PROCEDURE

1. Disconnect battery negative terminal or power window switch connector. Reconnect it after a minute or more.
2. Door switch is OFF (close).
3. Turn ignition switch ON.
4. Operate power window switch to fully open the window. (This operation is unnecessary if the window is already fully open.)
5. Continue pulling the power window switch AUTO-UP. Even after glass stops at the fully closed position, keep pulling the switch for 3 seconds or more.
6. Initializing procedure is completed.
7. Inspect anti-pinch function.

CAUTION:

When initialization is not complete, power window UP does not operate while door is open.

CHECK ANTI-PINCH FUNCTION

1. Fully open the door window.
 2. Place a piece of wood near the fully closed position.
 3. Close door glass completely with AUTO-UP.
- Check that glass lowers for approximately 150 mm (5.9 in) without pinching piece of wood and stops.
 - Check that glass does not rise when operating the power window switch while lowering.

CAUTION:

- **Never check with hands and other part of body because they may be pinched. Never get pinched.**
 - **Check that AUTO-UP operates before inspection when system initialization is performed.**
 - **It may switch to fail-safe mode if open/close operation is performed continuously. Perform initial setting in that situation. Refer to [PWC-70, "Fail-Safe"](#)**
 - **Perform initial setting when auto-up operation or anti-pinch function does not operate normally.**
 - **Finish initial setting. Otherwise, next operation cannot be performed.**
1. Auto-up operation
 2. Anti-pinch function
 3. Key cylinder switch power window function
 4. Automatic window adjusting function
 5. Auto-up, manual-up does not operate when door is open

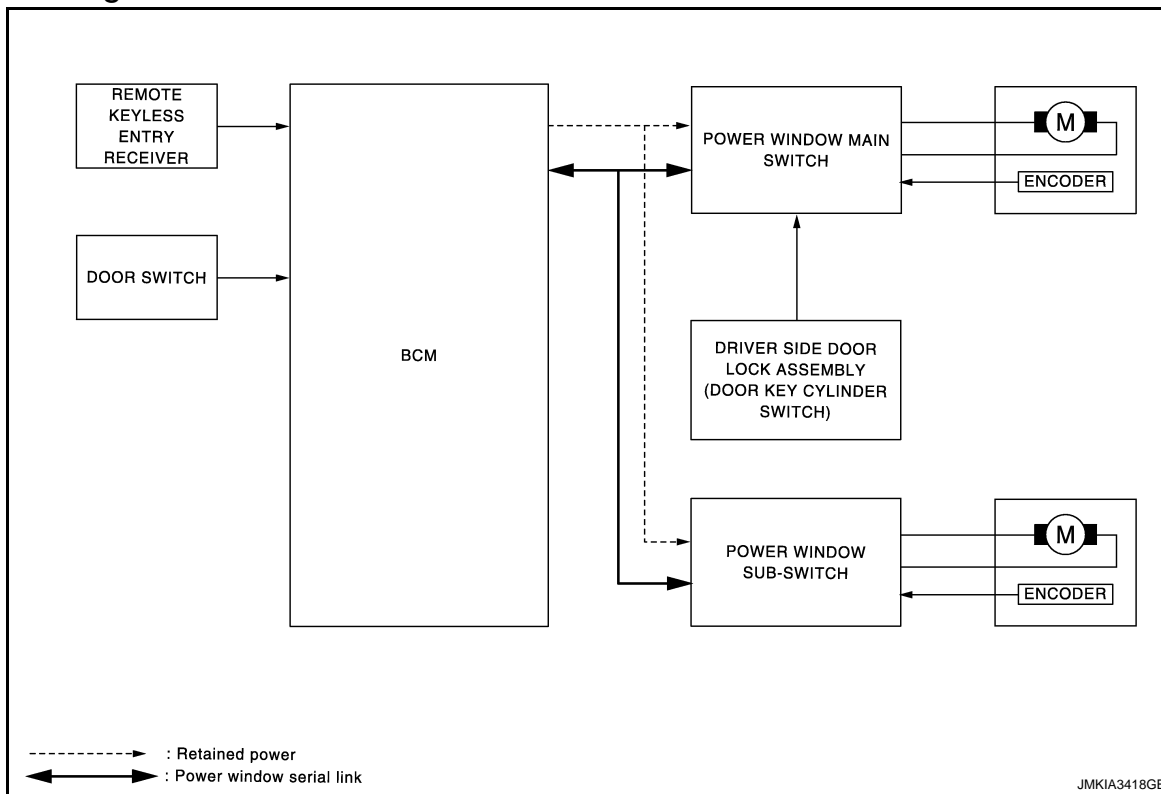
POWER WINDOW SYSTEM

< FUNCTION DIAGNOSIS >

FUNCTION DIAGNOSIS

POWER WINDOW SYSTEM

System Diagram



System Description

INFOID:0000000004460999

POWER WINDOW SYSTEM

- Power window system is activated by power window switch operation when ignition switch is turned ON and during the retained power operation, after ignition switch turned OFF.
- Power window main switch can open/close all windows.
- Power window sub-switch can open/close the passenger side windows.
- AUTO operation can be activated by operating the power window switch once.
- It transmits and receives the signal between BCM and power window main switch or power window sub switch, via serial communication.
- When pressing power window lock switch, operation other than power window main switch becomes impossible.
- When detecting the pinching resistance of foreign materials, etc. during power window AUTO UP operation, it lowers door glass to the specified value.
- When opening driver side or passenger side door while door glass is being fully closed, it lowers door glass of the door a little from the closed position. When closing the door, it return door glass to the fully closed position.
- All power windows open or close when Intelligent Key unlock button is pressed for 3seconds.
- Hold the door key cylinder to the LOCK or UNLOCK direction for 1 second or more to OPEN or CLOSE all power windows when ignition switch OFF.

POWER WINDOW AUTO-OPERATION

- AUTO UP/DOWN operation can be performed when power window main switch turns to AUTO.
- Encoder continues detecting the movement of power window motor and transmits to power window switch as the encoder pulse signal while power window motor is operating.
- Power window switch reads the changes of encoder signal and stops AUTO operation when door glass is at the fully open/closed position.
- Auto function is inoperable if encoder is malfunctioning.

POWER WINDOW SYSTEM

< FUNCTION DIAGNOSIS >

POWER WINDOW SERIAL LINK

Power window main switch, power window sub-switch and BCM transmit and receive the signal by power window serial link.

The under mentioned signal is transmitted from BCM to power window main switch.

- Driver side door switch signal.
- Keyless power window down signal.
- Retained power operation signal.

The under mentioned signal is transmitted from BCM to power window sub-switch.

- Passenger side door switch signal.
- Keyless power window down signal.
- Retained power operation signal.

The following signal is transmitted from power window main switch to power window sub-switch.

- Passenger side door window operation signal.
- Power window lock signal.
- Power window control by key cylinder switch signal.

RETAINED POWER OPERATION

Retained power operation is an additional power supply function that enables power window system to operate for 45 seconds after ignition switch turns OFF.

RETAINED POWER FUNCTION CANCEL CONDITIONS

- Front door CLOSED (door switch OFF) → OPEN (door switch ON).
- When ignition switch turns ON again.
- When timer times out. (45 seconds)

POWER WINDOW LOCK FUNCTION

Ground circuit inside power window main switch shuts off when power window lock switch is ON. This inhibits power window switch operation except with the power window main switch.

ANTI-PINCH FUNCTION

- The anti-pinch function detects foreign matter being pinched in the door glass, during AUTO-UP operation, and lowers the door glass 150 mm (5.9in).
- Encoder continues detecting the movement of power window motor and transmits to power window switch as the encoder pulse signal while power window motor is operating.
- Resistance is applied to the power window motor rotation that changes the frequency of encoder pulse signal if foreign material is trapped in the door glass.
- Power window switch controls to lower the door glass for 150 mm (5.9in) after it detects encoder pulse signal frequency change.

OPERATION CONDITION

- When all door glass AUTO-UP operation is performed (anti-pinch function does not operate just before the door glass closes and is fully closed.)

NOTE:

Depending on environment and driving conditions, if a similar impact or load is applied to the door glass, it may lower.

AUTOMATIC WINDOW ADJUSTING FUNCTION

When the driver/passenger door(s) is open, the window of the opened door is lowered approximately 10 mm (0.39 in).

When the door is closed, the window is raised to the fully closed position.

Automatic window adjusting function system (opening operation) does not operate when the following item occurs.

- The window is 10 mm (0.39 in) or more open from the fully closed position.

Automatic window adjusting function system (closing operation) does not operate when the following item occurs.

- The automatic window adjusting function system (opening operation) operation.

DOOR KEY CYLINDER SWITCH POWER WINDOW FUNCTION

Hold the door key cylinder to the LOCK or UNLOCK position for 1 second or more to OPEN or CLOSE all power windows when ignition switch is OFF. In addition, it stops when the key position is NEUTRAL when operating.

OPERATION CONDITION

- Ignition switch OFF.
- Hold door key cylinder to the LOCK position for 1 second or more to perform CLOSE operation of the door glass.

POWER WINDOW SYSTEM

< FUNCTION DIAGNOSIS >

- Hold door key cylinder in the UNLOCK position for 1 second or more to perform OPEN operation of the door glass.

KEYLESS POWER WINDOW DOWN FUNCTION

All power windows open when the unlock button on Intelligent Key is activated and pressed and held for more than 3* seconds with the ignition switch OFF. The windows keep opening if the unlock button is continuously pressed.

The power window opening function stops when the following operations are performed.

- When the unlock button is pressed and held for more than 15 seconds.
- When the ignition switch is turned ON while the power window opening is operated.
- When the unlock button is released.

While retained power operation activates, keyless power window down function cannot be operated.

Keyless power window down operation mode can be changed by "PW DOWN SET" mode in "WORK SUPPORT". Refer to [DLK-49, "INTELLIGENT KEY : CONSULT-III Function \(BCM - INTELLIGENT KEY\)"](#).

NOTE:

Use CONSULT-III to change settings.

MODE 1 (3 sec) / MODE 2 (OFF) / MODE 3 (5 sec)

POWER CONSUMPTION CONTROL SYSTEM

Power window switch incorporates a power consumption control function that reduces the power consumption according the vehicle status.

LOW POWER CONSUMPTION MODE

- Ignition switch OFF.
- Power window main switch and power window sub-switch do not receive a signal from serial link.
- Power window motor does not move.

If any of the following conditions are satisfied, the low power consumption mode is released.

- Ignition switch ON.
- When door key cylinder switch signal is received.
- When door lock signal is received.
- When the signal is received from serial link.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

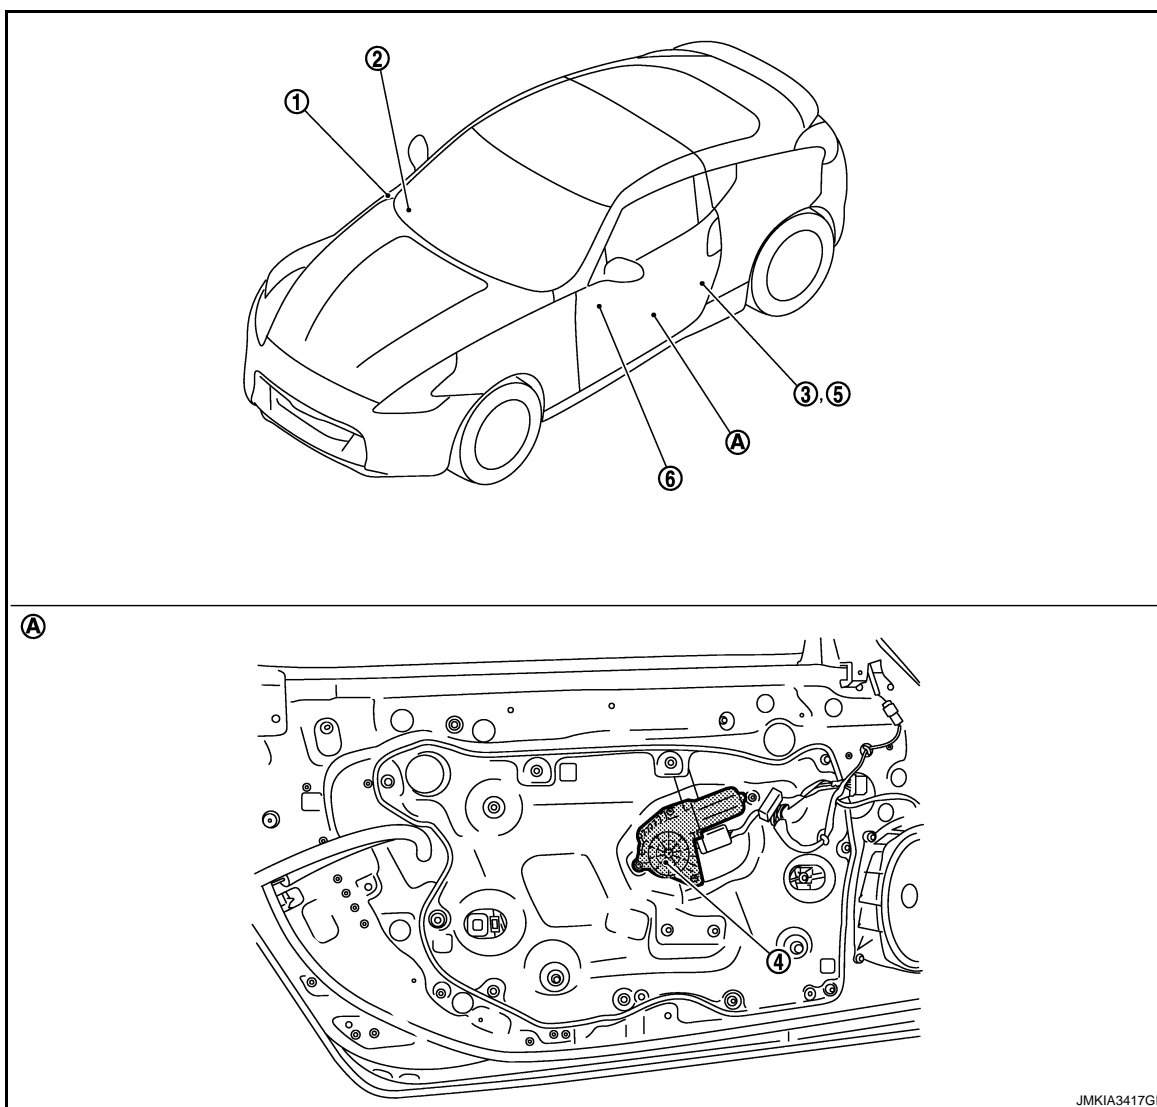
PWC

POWER WINDOW SYSTEM

< FUNCTION DIAGNOSIS >

Component Parts Location

INFOID:000000004461000



1. BCM M118, M119, M122, M123
[BCS-8, "Component Parts Location"](#)
 2. Remote keyless entry receiver M104
[DLK-30, "REMOTE KEYLESS ENTRY FUNCTION : Component Parts Location"](#)
 3. Driver side door lock assembly (door key cylinder switch) D15
 4. Driver side power window motor D10
 5. Driver side door switch B16
 6. Power window main switch D8
- A. View with door finisher removed

Component Description

INFOID:000000004461001

Component	Function
BCM	<ul style="list-style-type: none"> Supplies power to power window switches. Controls retained power function
Power window main switch	<ul style="list-style-type: none"> Directly controls all power window motors in all doors. Controls anti-pinch operation of power window.
Power window sub-switch	<ul style="list-style-type: none"> Controls anti-pinch operation of power window. Controls power window motor of passenger door.
Power window motor	<ul style="list-style-type: none"> Integrates the encoder and window motor. Starts operating with signals from each power window switch. Transmits power window motor rotation as a pulse signal to power window switch.

POWER WINDOW SYSTEM

< FUNCTION DIAGNOSIS >

Component	Function
Driver side door lock assembly (door key cylinder switch)	Transmits operation condition of key cylinder switch to power window main switch.
Remote keyless entry receiver	Receives lock/unlock signal from intelligent key, and then transmits to BCM.
Door switch	Detects door open/close condition and transmits to BCM.

A

B

C

D

E

F

G

H

I

J

PWC

L

M

N

O

P

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000004555918

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM. Refer to CONSULT-III operation manual.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none"> Read and save the vehicle specification. Write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
—	AIR CONDITONER*			
<ul style="list-style-type: none"> Intelligent Key system Engine start system 	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
IVIS - NATS	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Trunk lid open	TRUNK		×	×
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×
TPMS	TPMS (AIR PRESSURE MONITOR)	×	×	×

NOTE:

*: This item is displayed, but is not used.

FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT-III.

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

CONSULT screen item	Indication/Unit	Description	
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected	
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected	
Vehicle Condition	SLEEP>LOCK	Power position status of the moment a particular DTC is detected	While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK")
	SLEEP>OFF		While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)
	LOCK>ACC		While turning power supply position from "LOCK" to "ACC"
	ACC>ON		While turning power supply position from "ACC" to "IGN"
	RUN>ACC		While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.)
	CRANK>RUN		While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)
	RUN>URGENT		While turning power supply position from "RUN" to "ACC" (Emergency stop operation)
	ACC>OFF		While turning power supply position from "ACC" to "OFF"
	OFF>LOCK		While turning power supply position from "OFF" to "LOCK"
	OFF>ACC		While turning power supply position from "OFF" to "ACC"
	ON>CRANK		While turning power supply position from "IGN" to "CRANKING"
	OFF>SLEEP		While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode
	LOCK>SLEEP		While turning BCM status from normal mode (Power supply position is "LOCK".) to low power consumption mode
	LOCK		Power supply position is "LOCK" (Ignition switch OFF with steering is locked.)
	OFF		Power supply position is "OFF" (Ignition switch OFF with steering is unlocked.)
	ACC		Power supply position is "ACC" (Ignition switch ACC)
	ON		Power supply position is "IGN" (Ignition switch ON with engine stopped)
	ENGINE RUN		Power supply position is "RUN" (Ignition switch ON with engine running)
	CRANKING		Power supply position is "CRANKING" (At engine cranking)
IGN Counter	0 - 39	The number of times that ignition switch is turned ON after DTC is detected <ul style="list-style-type: none"> • The number is 0 when a malfunction is detected now. • The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. • The number is fixed to 39 until the self-diagnosis results are erased if it is over 39. 	

RETAINED PWR

RETAINED PWR : CONSULT-III Function (BCM - RETAINED PWR)

INFOID:0000000004747508

Data monitor

Monitor Item	Description
DOOR SW-DR	Indicates [ON/OFF] condition of driver side door switch.
DOOR SW-AS	Indicates [ON/OFF] condition of passenger side door switch.

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT

BCM

BCM : Diagnosis Procedure

INFOID:000000004461002

1.CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Terminal No.	Signal name	Fuse and fusible link No.
1	Battery power supply	K (40A)
11		10 (10A)

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (Approx.)
BCM			
Connector	Terminal		
M118	1	Ground	Battery voltage
M119	11		

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3.CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M119	13		Existed

Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

POWER WINDOW MAIN SWITCH

POWER WINDOW MAIN SWITCH : Diagnosis Procedure

INFOID:000000004461003

1.CHECK POWER SUPPLY CIRCUIT 1

1. Turn ignition switch OFF.
2. Disconnect power window main switch connector.
3. Turn ignition switch ON.
4. Check voltage between power window main switch harness connector and ground.

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

(+)		(-)	Voltage (V) (Approx.)
Power window main switch			
Connector	Terminal		
D8	1	Ground	Battery voltage
	10		

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT 2

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and power window main switch harness connector.

BCM		Power window main switch		Continuity
Connector	Terminal	Connector	Terminal	
M118	2	D8	1	Existed
	3		10	

4. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M118	2		Not existed
	3		

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-84, "Exploded View"](#).

NO >> Repair or replace harness.

3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between power window main switch harness connector and ground.

Power window main switch		Ground	Continuity
Connector	Terminal		
D8	15		Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair or replace harness.

POWER WINDOW SUB-SWITCH

POWER WINDOW SUB-SWITCH : Diagnosis Procedure

INFOID:000000004461004

1.CHECK POWER SUPPLY CIRCUIT 1

1. Turn ignition switch OFF.
2. Disconnect power window sub-switch connector.
3. Check voltage between power window sub-switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Power window sub-switch			
Connector	Terminal		
D38	10	Ground	Battery voltage

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT 2

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and power window sub-switch harness connector.

BCM		Power window sub-switch		Continuity
Connector	Terminal	Connector	Terminal	
M118	2	D38	10	Existed

4. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M118	2		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-84, "Exploded View"](#).

NO >> Repair or replace harness.

3.CHECK GROUND CIRCUIT

Check continuity between power window sub-switch harness connector and ground.

Power window sub-switch		Ground	Continuity
Connector	Terminal		
D38	11		Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair or replace harness.

POWER WINDOW MOTOR

< COMPONENT DIAGNOSIS >

POWER WINDOW MOTOR

DRIVER SIDE

DRIVER SIDE : Description

INFOID:000000004461005

Door glass moves UP/DOWN by receiving the signal from power window main switch.

DRIVER SIDE : Component Function Check

INFOID:000000004461006

1.CHECK POWER WINDOW MOTOR CIRCUIT

Check driver side power window motor operation with power window main switch.

Is the inspection result normal?

YES >> Driver side power window motor is OK.

NO >> Refer to [PWC-17, "DRIVER SIDE : Diagnosis Procedure"](#).

DRIVER SIDE : Diagnosis Procedure

INFOID:000000004461007

1.CHECK POWER WINDOW MAIN SWITCH OUTPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect driver side power window motor connector.
3. Turn ignition switch ON.
4. Check voltage between driver side power window motor harness connector and ground.

(+) Driver side power window motor		(-)	Condition		Voltage (V) (Approx.)
Connector	Terminal				
D10	6	Ground	Power window main switch	UP	Battery voltage
				DOWN	0
	3			UP	0
				DOWN	Battery voltage

Is the measurement value within the specification?

YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK POWER WINDOW MOTOR

Check driver side power window motor.

Refer to [PWC-18, "DRIVER SIDE : Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace driver side power window motor. Refer to [GW-21, "Removal and Installation"](#).

3.CHECK POWER WINDOW MOTOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect power window main switch connector.
3. Check continuity between power window main switch harness connector and driver side power window motor harness connector.

Power window main switch		Driver side power window motor		Continuity
Connector	Terminal	Connector	Terminal	
D8	8	D10	6	Existed
	11		3	

4. Check continuity between power window main switch harness connector and ground.

POWER WINDOW MOTOR

< COMPONENT DIAGNOSIS >

Power window main switch		Ground	Continuity
Connector	Terminal		
D8	8		Not existed
	11		

Is the inspection result normal?

YES >> Replace power window main switch. Refer to [PWC-93. "Removal and Installation"](#).

NO >> Repair or replace harness.

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-39. "Intermittent Incident"](#).

>> INSPECTION END

DRIVER SIDE : Component Inspection

INFOID:000000004461008

COMPONENT INSPECTION

1.CHECK DRIVER SIDE POWER WINDOW MOTOR

1. Turn ignition switch OFF.
2. Disconnect driver side power window motor connector.
3. Check motor operation by connecting the battery voltage directly to driver side power window motor connector.

Driver side power window motor connector	Terminal		Motor operation
	(+)	(-)	
D10	3	6	DOWN
	6	3	UP

Is the inspection result normal?

YES >> Driver side power window motor is OK.

NO >> Replace driver side power window motor. Refer to [GW-21. "Removal and Installation"](#).

PASSENGER SIDE

PASSENGER SIDE : Description

INFOID:000000004461009

Door glass moves UP/DOWN by receiving the signal power window main switch or power window sub-switch .

PASSENGER SIDE : Component Function Check

INFOID:000000004461010

1. CHECK POWER WINDOW MOTOR CIRCUIT

Check passenger side power window motor operation with power window main switch or power window sub switch.

Is the inspection result normal?

YES >> Passenger side power window motor is OK.

NO >> Refer to [PWC-18. "PASSENGER SIDE : Diagnosis Procedure"](#).

PASSENGER SIDE : Diagnosis Procedure

INFOID:000000004461011

1.CHECK POWER WINDOW SUB-SWITCH OUTPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect passenger side power window motor connector.
3. Turn ignition switch ON.
4. Check voltage between passenger side power window motor harness connector and ground.

POWER WINDOW MOTOR

< COMPONENT DIAGNOSIS >

(+)		(-)	Condition		Voltage (V) (Approx.)
Passenger side power window motor					
Connector	Terminal				
D40	6	Ground	Power window sub-switch	UP	Battery voltage
				DOWN	0
	3			UP	0
				DOWN	Battery voltage

Is the measurement value within the specification?

YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK PASSENGER SIDE POWER WINDOW MOTOR

Check passenger side power window motor.

Refer to [PWC-19, "PASSENGER SIDE : Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace passenger side power window motor. Refer to [GW-21, "Removal and Installation"](#).

3.CHECK POWER WINDOW MOTOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect power window sub-switch connector.
3. Check continuity between power window sub-switch harness connector and passenger side power window motor harness connector.

Power window sub-switch		Passenger side power window motor		Continuity
Connector	Terminal	Connector	Terminal	
D38	9	D40	3	Existed
	8		6	

4. Check continuity between power window sub-switch connector and ground.

Power window sub-switch		Ground	Continuity
Connector	Terminal		
D38	8		Not existed
	9		

Is the inspection result normal?

YES >> Replace power window sub-switch. Refer to [PWC-93, "Removal and Installation"](#).

NO >> Repair or replace harness.

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-39, "Intermittent Incident"](#).

>> INSPECTION END

PASSENGER SIDE : Component Inspection

INFOID:000000004461012

COMPONENT INSPECTION

1.CHECK PASSENGER SIDE POWER WINDOW MOTOR

1. Turn ignition switch OFF.
2. Disconnect passenger side power window motor connector.
3. Check motor operation by connecting the battery voltage directly to passenger side power window motor connector.

POWER WINDOW MOTOR

< COMPONENT DIAGNOSIS >

Passenger side power window motor connector	Terminal		Motor condition
	(+)	(-)	
D40	3	6	DOWN
	6	3	UP

Is the inspection result normal?

YES >> Passenger side power window motor is OK.

NO >> Replace passenger side power window motor. Refer to [GW-21, "Removal and Installation"](#).

ENCODER

< COMPONENT DIAGNOSIS >

ENCODER DRIVER SIDE

DRIVER SIDE : Description

INFOID:000000004461013

Detects condition of the driver side power window motor operation and transmits to power window main switch as the pulse signal.

DRIVER SIDE : Component Function Check

INFOID:000000004461014

1.CHECK ENCODER OPERATION

Check that driver side door glass performs AUTO open/close operation normally with power window main switch.

Is the inspection result normal?

YES >> Encoder operation is OK.

NO >> Refer to [PWC-21, "DRIVER SIDE : Diagnosis Procedure"](#).


DRIVER SIDE : Diagnosis Procedure

INFOID:000000004461015

1.CHECK ENCODER OPERATION

1. Turn ignition switch ON.
2. Check signal between power window main switch harness connector and ground with oscilloscope.

(+)		(-)	Signal (Reference value)
Power window main switch			
Connector	Terminal		
D8	9	Ground	Refer to the following signal
	13		

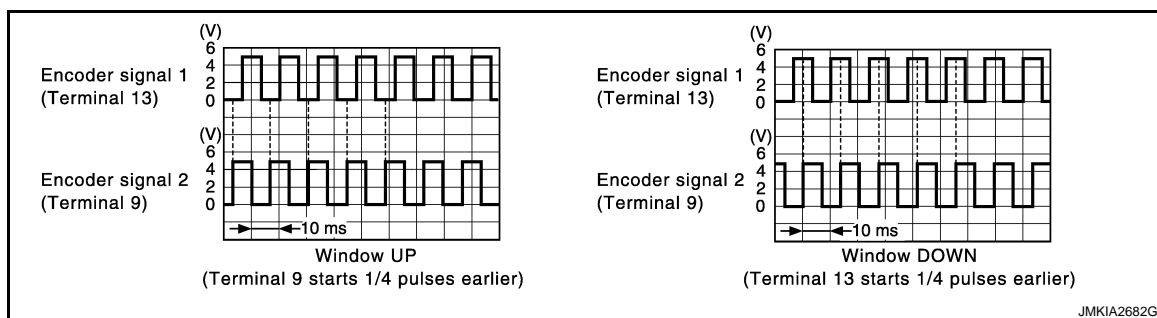

Is the inspection result normal?

YES >> Replace power window main switch. Refer to [PWC-93, "Removal and Installation"](#).

NO >> GO TO 2.

2.CHECK ENCODER SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect power window main switch connector and driver side power window motor connector.
3. Check continuity between power window main switch harness connector and driver side power window motor harness connector.

Power window main switch		Driver side power window motor		Continuity
Connector	Terminal	Connector	Terminal	
D8	9	D10	5	Existed
	13		2	

4. Check continuity between power window main switch harness connector and ground.

ENCODER

< COMPONENT DIAGNOSIS >

Power window main switch		Ground	Continuity
Connector	Terminal		
D8	9		Not existed
	13		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3.CHECK ENCODER POWER SUPPLY CIRCUIT 1

1. Connect power window main switch connector.
2. Turn ignition switch ON.
3. Check voltage between driver side power window motor harness connector and ground.

(+) Driver side power window motor		(-) Ground	Voltage (V) (Approx.) Battery voltage
Connector	Terminal		
D10	4		

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> GO TO 4.

4.CHECK ENCODER POWER SUPPLY CIRCUIT 2

1. Turn ignition switch OFF.
2. Disconnect power window main switch connector.
3. Check continuity between power window main switch harness connector and driver side power window motor harness connector.

Power window main switch		Driver side power window motor		Continuity
Connector	Terminal	Connector	Terminal	
D8	5	D10	4	Existed

4. Check continuity between power window main switch harness connector and ground.

Power window main switch		Ground	Continuity
Connector	Terminal		
D8	5		Not existed

Is the inspection result normal?

YES >> Replace power window main switch. Refer to [PWC-93. "Removal and Installation"](#).

NO >> Repair or replace harness.

5.CHECK GROUND CIRCUIT 1

1. Turn ignition switch OFF.
2. Disconnect power window main switch connector.
3. Check continuity between power window main switch harness connector and driver side power window motor harness connector.

Power window main switch		Driver side power window motor		Continuity
Connector	Terminal	Connector	Terminal	
D8	14	D10	1	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

6.CHECK GROUND CIRCUIT 2

ENCODER

< COMPONENT DIAGNOSIS >

1. Connect power window main switch connector.
2. Check continuity between power window main switch harness connector and ground.

Power window main switch		Ground	Continuity
Connector	Terminal		
D8	14		Existed

Is the inspection result normal?

YES >> Replace driver side power window motor. Refer to [PWC-93, "Removal and Installation"](#).

NO >> Replace power window main switch. Refer to [PWC-93, "Removal and Installation"](#).

PASSENGER SIDE

PASSENGER SIDE : Description

INFOID:000000004461016

Detects condition of the passenger side power window motor operation and transmits to power window sub-switch as the pulse signal.

PASSENGER SIDE : Component Function Check

INFOID:000000004461017

1.CHECK ENCODER OPERATION

Check that passenger side door glass performs AUTO open operation normally with power window main switch or power window sub-switch.

Is the inspection result normal?

YES >> Encoder operation is OK.

NO >> Refer to [PWC-23, "PASSENGER SIDE : Diagnosis Procedure"](#).


PASSENGER SIDE : Diagnosis Procedure

INFOID:000000004461018

1.CHECK ENCODER SIGNAL

1. Turn ignition switch ON.
2. Check signal between power window sub-switch harness connector and ground with oscilloscope.

(+)		(-)	Signal (Reference value)
Power window sub-switch			
Connector	Terminal		
D38	12	Ground	Refer to the following signal
	15		

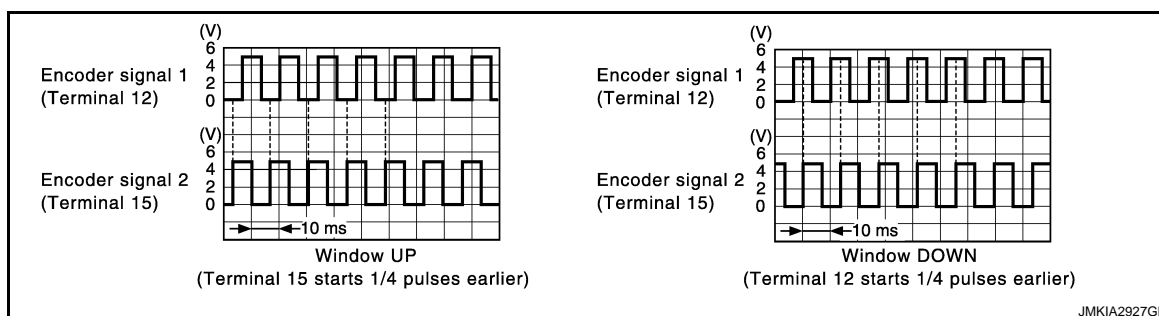

Is the inspection result normal?

YES >> Replace power window sub-switch. Refer to [PWC-93, "Removal and Installation"](#).

NO >> GO TO 2.

2.CHECK ENCODER SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect power window sub-switch connector and passenger side power window motor connector.
3. Check continuity between power window sub-switch harness connector and passenger side power window motor harness connector.

ENCODER

< COMPONENT DIAGNOSIS >

Power window sub-switch		Passenger side power window motor		Continuity
Connector	Terminal	Connector	Terminal	
D38	12	D40	2	Existed
	15		5	

4. Check continuity between power window sub-switch connector and ground.

Power window sub-switch		Ground	Continuity
Connector	Terminal		
D38	12		Not existed
	15		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3.CHECK ENCODER POWER SUPPLY CIRCUIT 1

1. Connect power window sub-switch connector.
2. Turn ignition switch ON.
3. Check voltage between passenger side power window motor harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Passenger side power window motor			
Connector	Terminal		
D40	4	Ground	Battery voltage

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> GO TO 4.

4.CHECK ENCODER POWER SUPPLY CIRCUIT 2

1. Turn ignition switch OFF.
2. Disconnect power window sub-switch connector.
3. Check continuity between power window sub-switch harness connector and passenger side power window motor harness connector.

Power window sub-switch		Passenger side power window motor		Continuity
Connector	Terminal	Connector	Terminal	
D38	4	D40	4	Existed

4. Check continuity between power window sub-switch harness connector and ground.

Power window sub-switch		Ground	Continuity
Connector	Terminal		
D38	4		Not existed

Is the inspection result normal?

YES >> Replace power window sub-switch. Refer to [PWC-93, "Removal and Installation"](#).

NO >> Repair or replace harness.

5.CHECK GROUND CIRCUIT 1

1. Turn ignition switch OFF.
2. Disconnect power window sub-switch connector.
3. Check continuity between power window sub-switch harness connector and passenger side power window motor harness connector.

ENCODER

< COMPONENT DIAGNOSIS >

Power window sub-switch		Passenger side power window motor		Continuity
Connector	Terminal	Connector	Terminal	
D38	3	D40	1	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

6.CHECK GROUND CIRCUIT 2

1. Connect power window sub-switch connector.
2. Check continuity between power window sub-switch harness connector and ground.

Power window sub-switch		Ground	Continuity
Connector	Terminal		
D38	3		Existed

Is the inspection result normal?

YES >> Replace passenger side power window motor. Refer to [PWC-93, "Removal and Installation"](#).

NO >> Replace power window sub-switch. Refer to [PWC-93, "Removal and Installation"](#).

PWC

POWER WINDOW SERIAL LINK

< COMPONENT DIAGNOSIS >

POWER WINDOW SERIAL LINK

POWER WINDOW MAIN SWITCH

POWER WINDOW MAIN SWITCH : Description

INFOID:000000004639964

Power window main switch, power window sub-switch and BCM transmit and receive the signal by power window serial link.

The signal mentioned below is transmitted from BCM to power window main switch, power window sub-switch.

- Keyless power window down signal

The signal mentioned below is transmitted from power window main switch to power window sub-switch.

- Front passenger side door window operation signal
- Power window control by key cylinder switch signal
- Power window lock switch signal
- Retained power operation signal

POWER WINDOW MAIN SWITCH : Component Function Check

INFOID:000000004461020

1.CHECK POWER WINDOW SWITCH OUTPUT SIGNAL

With CONSULT-III

Check ("CDL LOCK SW", "CDL UNLOCK SW") in "DATA MONITOR" mode for "POWER DOOR LOCK SYSTEM" with CONSULT-III. Refer to [DLK-47, "DOOR LOCK : CONSULT-III Function \(BCM - DOOR LOCK\)"](#).

Monitor item	Condition
CDL LOCK SW	LOCK : ON
	UNLOCK : OFF
CDL UNLOCK SW	LOCK : OFF
	UNLOCK : ON

Is the inspection result normal?

YES >> Power window serial link is OK.

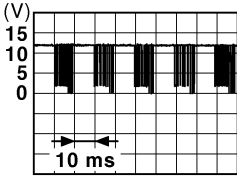
NO >> Refer to [PWC-26, "POWER WINDOW MAIN SWITCH : Diagnosis Procedure"](#).

POWER WINDOW MAIN SWITCH : Diagnosis Procedure

INFOID:000000004461021

1.CHECK POWER WINDOW SWITCH OUTPUT SIGNAL

1. Turn ignition switch ON.
2. Check signal between power window main switch harness connector and ground.

(+) Power window main switch		(-)	Signal (Reference value)
Connector	Terminal		
D8	12	Ground	

JPMIA0013GB

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 2.

2.CHECK POWER WINDOW SERIAL LINK SIGNAL

1. Turn ignition switch OFF.

POWER WINDOW SERIAL LINK

< COMPONENT DIAGNOSIS >

2. Disconnect power window main switch connector.
3. Turn ignition switch ON.
4. Check voltage between power window main switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Power window main switch			
Connector	Terminal		
D8	12	Ground	Battery voltage

Is the inspection result normal?

- YES >> Replace power window main switch. Refer to [PWC-93. "Removal and Installation"](#).
NO >> GO TO 3.

3.CHECK POWER WINDOW SERIAL LINK CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM connector and power window main switch connector.

BCM		Power window main switch		Continuity
Connector	Terminal	Connector	Terminal	
M123	132	D8	12	Existed

4. Check continuity between BCM connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M123	132		Not existed

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-84. "Removal and Installation"](#).
NO >> Repair or replace harness.

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-39. "Intermittent Incident"](#).

>> INSPECTION END

POWER WINDOW SUB-SWITCH

POWER WINDOW SUB-SWITCH : Description

INFOID:000000004639967

Power window main switch, power window sub-switch and BCM transmit and receive the signal by power window serial link.

The signal mentioned below is transmitted from BCM to power window main switch, power window sub-switch.

- Keyless power window down signal

The signal mentioned below is transmitted from power window main switch to power window sub-switch.

- Front passenger side door window operation signal
- Power window control by key cylinder switch signal
- Power window lock switch signal
- Retained power operation signal

POWER WINDOW SUB-SWITCH : Component Function Check

INFOID:000000004461023

1.CHECK POWER WINDOW SWITCH OUTPUT SIGNAL

With CONSULT-III

Check ("CDL LOCK SW", "CDL UNLOCK SW") in "DATA MONITOR" mode for "POWER DOOR LOCK SYSTEM" with CONSULT-III. Refer to [DLK-47. "DOOR LOCK : CONSULT-III Function \(BCM - DOOR LOCK\)"](#).

POWER WINDOW SERIAL LINK

< COMPONENT DIAGNOSIS >

Monitor item	Condition
CDL LOCK SW	LOCK : ON
	UNLOCK : OFF
CDL UNLOCK SW	LOCK : OFF
	UNLOCK : ON

Is the inspection result normal?

YES >> Power window serial link is OK.

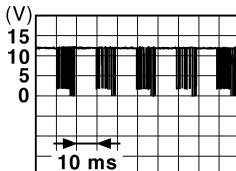
NO >> Refer to [PWC-28. "POWER WINDOW SUB-SWITCH : Diagnosis Procedure"](#).

POWER WINDOW SUB-SWITCH : Diagnosis Procedure

INFOID:000000004461024

1.CHECK POWER WINDOW SWITCH OUTPUT SIGNAL

1. Turn ignition switch ON.
2. Check signal between power window sub-switch harness connector and ground.

(+)		(-)	Signal (Reference value)
Power window sub-switch			
Connector	Terminal		
D38	16	Ground	

JPMA0013GB

Is the inspection result normal?

YES >> Replace power window sub-switch. Refer to [PWC-93. "Removal and Installation"](#).

NO >> GO TO 2.

2.CHECK POWER WINDOW SERIAL LINK SIGNAL

1. Turn ignition switch OFF.
2. Disconnect power window sub-switch connector.
3. Turn ignition switch ON.
4. Check voltage between power window sub-switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Power window sub-switch			
Connector	Terminal		
D38	16	Ground	Battery voltage

Is the inspection result normal?

YES >> Replace power window main switch. Refer to [PWC-93. "Removal and Installation"](#).

NO >> GO TO 3.

3.CHECK POWER WINDOW SERIAL LINK CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and power window sub-switch connector.
3. Check continuity between BCM connector and power window sub-switch connector.

BCM		Power window sub-switch		Continuity
Connector	Terminal	Connector	Terminal	
M123	132	D38	16	Existed

POWER WINDOW SERIAL LINK

< COMPONENT DIAGNOSIS >

4. Check continuity between BCM connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M123	132		Not existed

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-84, "Removal and Installation"](#).
- NO >> Repair or replace harness.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

ECU DIAGNOSIS

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000004754457

VALUES ON THE DIAGNOSIS TOOL

CONSULT-III MONITOR ITEM

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
	Front wiper switch HI	On
FR WIPER LOW	Other than front wiper switch LO	Off
	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER INT	Other than front wiper switch INT	Off
	Front wiper switch INT	On
FR WIPER STOP	Front wiper is not in STOP position	Off
	Front wiper is in STOP position	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	Wiper intermittent dial position
TURN SIGNAL R	Other than turn signal switch RH	Off
	Turn signal switch RH	On
TURN SIGNAL L	Other than turn signal switch LH	Off
	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On
FR FOG SW	NOTE: The item is indicated, but not monitored.	Off
RR FOG SW	Rear fog lamp switch OFF	Off
	Rear fog lamp switch ON	On
DOOR SW-DR	Driver door closed	Off
	Driver door opened	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door opened	On
DOOR SW-RR	NOTE: The item is indicated, but not monitored.	Off

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
DOOR SW-RL	NOTE: The item is indicated, but not monitored.	Off
DOOR SW-BK	Back door closed	Off
	Back door opened	On
CDL LOCK SW	Other than door lock and unlock switch LOCK	Off
	Door lock and unlock switch LOCK	On
CDL UNLOCK SW	Other than door lock and unlock switch UNLOCK	Off
	Door lock and unlock switch UNLOCK	On
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	Off
	Driver door key cylinder LOCK position	On
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	Off
	Driver door key cylinder UNLOCK position	On
KEY CYL SW-TR	NOTE: The item is indicated, but not monitored.	Off
HAZARD SW	Hazard switch is OFF	Off
	Hazard switch is ON	On
REAR DEF SW NOTE: At models with NAVI this item is not monitored.	Rear window defogger switch OFF	Off
	Rear window defogger switch ON	On
H/L WASH SW	NOTE: The item is indicated, but not monitored.	Off
TR CANCEL SW	NOTE: The item is indicated, but not monitored.	Off
TR/BD OPEN SW	Back door opener switch OFF	Off
	While the back door opener switch is turned ON	On
TRNK/HAT MNTR	NOTE: The item is indicated, but not monitored.	Off
RKE-LOCK	LOCK button of the Intelligent Key is not pressed	Off
	LOCK button of the Intelligent Key is pressed	On
RKE-UNLOCK	UNLOCK button of the Intelligent Key is not pressed	Off
	UNLOCK button of the Intelligent Key is pressed	On
RKE-TR/BD	NOTE: The item is indicated, but not monitored.	Off
RKE-PANIC	PANIC button of the Intelligent Key is not pressed	Off
	PANIC button of the Intelligent Key is pressed	On
RKE-P/W OPEN	UNLOCK button of the Intelligent Key is not pressed	Off
	UNLOCK button of the Intelligent Key is pressed and held	On
RKE-MODE CHG	LOCK/UNLOCK button of the Intelligent Key is not pressed and held simultaneously	Off
	LOCK/UNLOCK button of the Intelligent Key is pressed and held simultaneously	On
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5 V
	Dark outside of the vehicle	Close to 0 V
REQ SW -DR	Driver door request switch is not pressed	Off
	Driver door request switch is pressed	On
REQ SW -AS	Passenger door request switch is not pressed	Off
	Passenger door request switch is pressed	On

A

B

C

D

E

F

G

H

I

J

PWC

L

M

N

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
REQ SW -RR	NOTE: The item is indicated, but not monitored.	Off
REQ SW -RL	NOTE: The item is indicated, but not monitored.	Off
REQ SW -BD/TR	Back door request switch is not pressed	Off
	Back door request switch is pressed	On
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off
	Push-button ignition switch (push switch) is pressed	On
IGN RLY2 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
ACC RLY -F/B	NOTE: The item is indicated, but not monitored.	Off
CLUCH SW NOTE: At A/T models this item is not monitored.	The clutch pedal is not depressed	Off
	The clutch pedal is depressed	On
BRAKE SW 1	Stop lamp switch 1 signal circuit is open	Off
	Stop lamp switch 1 signal circuit is normal	On
BRAKE SW 2	The brake pedal is not depressed	Off
	The brake pedal is depressed	On
DETE/CANCL SW NOTE: At M/T models with SynchroRev Match mode this item is not monitored.	<ul style="list-style-type: none"> Selector lever in P position (A/T models) The clutch pedal is depressed (M/T models without SynchroRev Match mode) 	Off
	<ul style="list-style-type: none"> Selector lever in any position other than P (A/T models) The clutch pedal is not depressed (M/T models without SynchroRev Match mode) 	On
SFT PN/N SW NOTE: At M/T models without SynchroRev Match mode this item is not monitored.	<ul style="list-style-type: none"> Selector lever in any position other than P and N (A/T models) Control lever in any position other than neutral position (M/T models with SynchroRev Match mode) 	Off
	<ul style="list-style-type: none"> Selector lever in P or N position (A/T models) Control lever in neutral position (M/T models with SynchroRev Match mode) 	On
S/L -LOCK	Steering is unlocked	Off
	Steering is locked	On
S/L -UNLOCK	Steering is locked	Off
	Steering is unlocked	On
S/L RELAY-F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
UNLK SEN -DR	Driver door is unlocked	Off
	Driver door is locked	On
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off
	Push-button ignition switch (push-switch) is pressed	On
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
DETE SW -IPDM	Selector lever in any position other than P	Off
	Selector lever in P position	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
SFT PN -IPDM	<ul style="list-style-type: none"> Selector lever in any position other than P and N (A/T models) The clutch pedal is not depressed (M/T models) 	Off
	<ul style="list-style-type: none"> Selector lever in P or N position (A/T models) The clutch pedal is depressed (M/T models) 	On
SFT P -MET	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT N -MET	Selector lever in any position other than N	Off
	Selector lever in N position	On
ENGINE STATE	Engine stopped	Stop
	While the engine stalls	Stall
	At engine cranking	Crank
	Engine running	Run
S/L LOCK-IPDM	Steering is unlocked	Off
	Steering is locked	On
S/L UNLK-IPDM	Steering is locked	Off
	Steering is unlocked	On
S/L RELAY-REQ	Steering lock system is not the LOCK condition and the changing condition from LOCK to UNLOCK	Off
	Steering lock system are not the LOCK condition or the changing condition from LOCK to UNLOCK	On
VEH SPEED 1	While driving	Equivalent to speedometer reading
VEH SPEED 2	While driving	Equivalent to speedometer reading
DOOR STAT-DR	Driver door is locked	LOCK
	Wait with selective UNLOCK operation (60 seconds)	READY
	Driver door is unlocked	UNLOCK
DOOR STAT-AS	Passenger door is locked	LOCK
	Wait with selective UNLOCK operation (60 seconds)	READY
	Passenger door is unlocked	UNLOCK
ID OK FLAG	Steering is locked	Reset
	Steering is unlocked	Set
PRMT ENG STRT	The engine start is prohibited	Reset
	The engine start is permitted	Set
PRMT RKE STRT	NOTE: The item is indicated, but not monitored.	Reset
KEY SW -SLOT	The Intelligent Key is not inserted into key slot	Off
	The Intelligent Key is inserted into key slot	On
RKE OPE COUN1	During the operation of the Intelligent Key	Operation frequency of the Intelligent Key
RKE OPE COUN2	NOTE: The item is indicated, but not monitored.	—
CONFRM ID ALL	The key ID that the key slot receives is not recognized by any key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by any key ID registered to BCM.	Done

A

B

C

D

E

F

G

H

I

J

PWC

L

M

N

O

P


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
CONFIRM ID4	The key ID that the key slot receives is not recognized by the fourth key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the fourth key ID registered to BCM.	Done
CONFIRM ID3	The key ID that the key slot receives is not recognized by the third key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the third key ID registered to BCM.	Done
CONFIRM ID2	The key ID that the key slot receives is not recognized by the second key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the second key ID registered to BCM.	Done
CONFIRM ID1	The key ID that the key slot receives is not recognized by the first key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the first key ID registered to BCM.	Done
TP 4	The ID of fourth Intelligent Key is not registered to BCM	Yet
	The ID of fourth Intelligent Key is registered to BCM	Done
TP 3	The ID of third Intelligent Key is not registered to BCM	Yet
	The ID of third Intelligent Key is registered to BCM	Done
TP 2	The ID of second Intelligent Key is not registered to BCM	Yet
	The ID of second Intelligent Key is registered to BCM	Done
TP 1	The ID of first Intelligent Key is not registered to BCM	Yet
	The ID of first Intelligent Key is registered to BCM	Done
AIR PRESS FL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front LH tire
AIR PRESS FR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front RH tire
AIR PRESS RR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear RH tire
AIR PRESS RL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear LH tire
ID REGST FL1	ID of front LH tire transmitter is registered	Done
	ID of front LH tire transmitter is not registered	Yet
ID REGST FR1	ID of front RH tire transmitter is registered	Done
	ID of front RH tire transmitter is not registered	Yet
ID REGST RR1	ID of rear RH tire transmitter is registered	Done
	ID of rear RH tire transmitter is not registered	Yet
ID REGST RL1	ID of rear LH tire transmitter is registered	Done
	ID of rear LH tire transmitter is not registered	Yet
WARNING LAMP	Tire pressure indicator OFF	Off
	Tire pressure indicator ON	On
BUZZER	Tire pressure warning alarm is not sounding	Off
	Tire pressure warning alarm is sounding	On

BCM (BODY CONTROL MODULE)

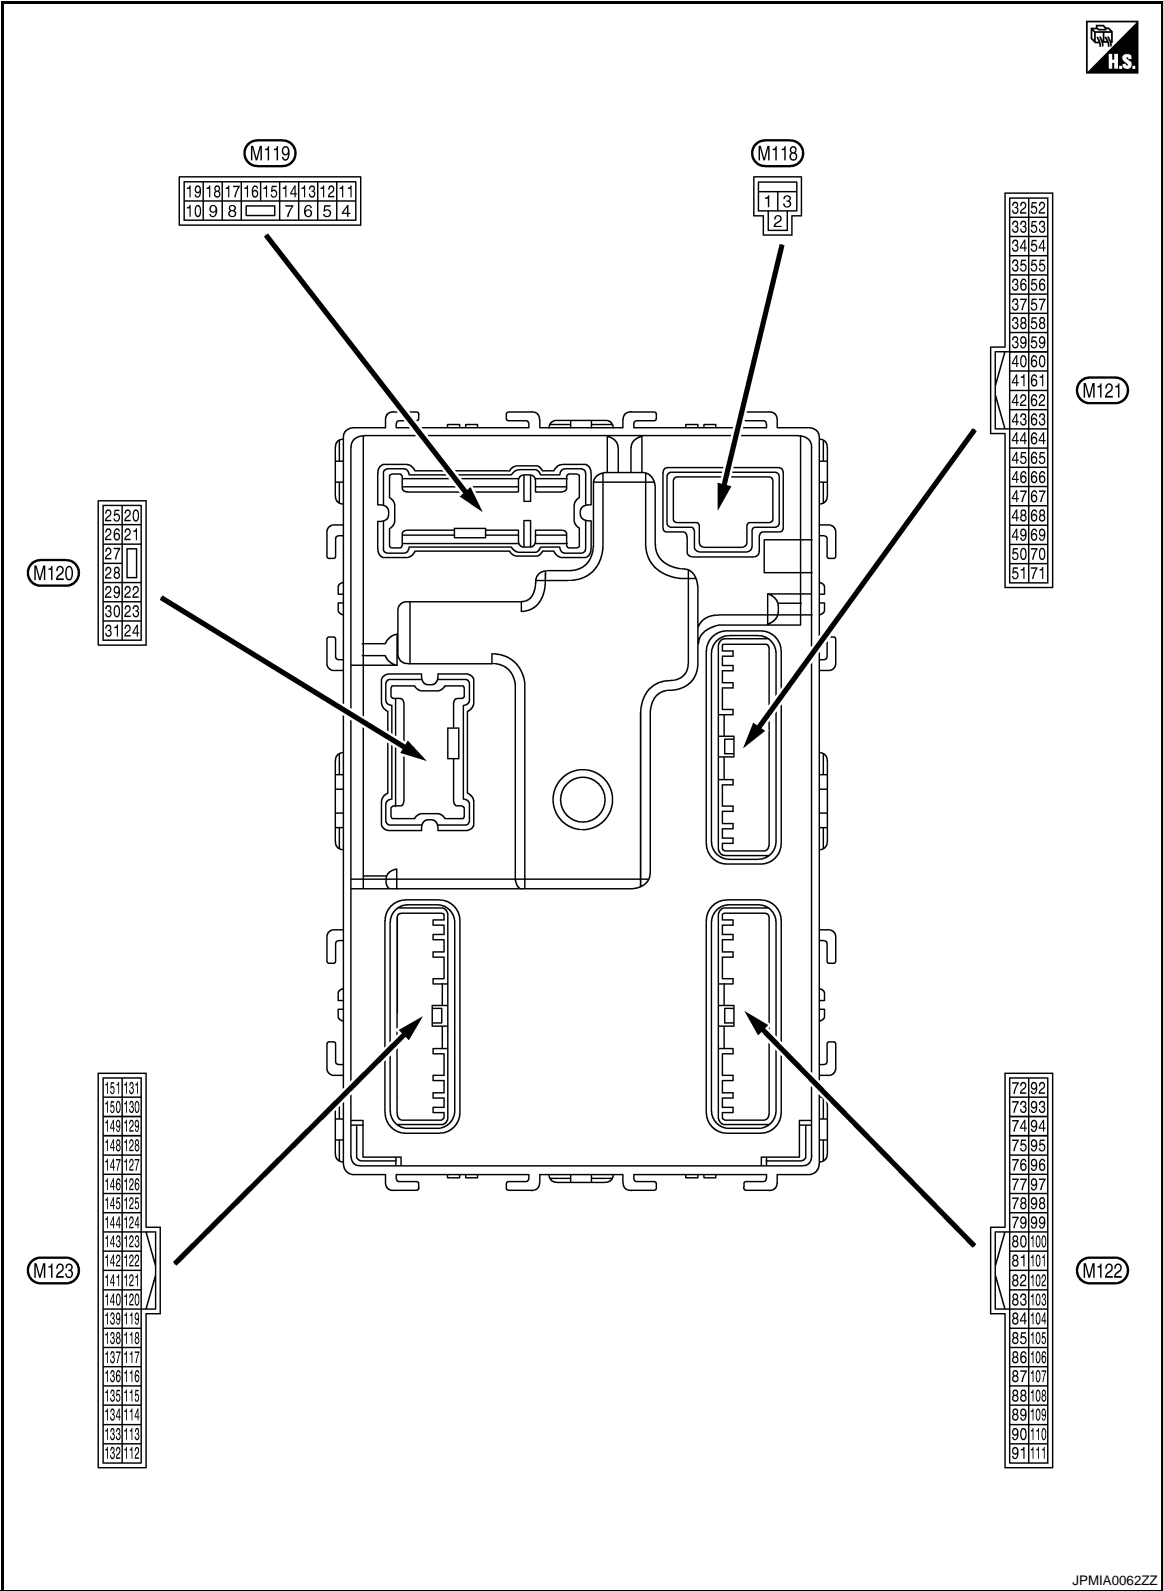
< ECU DIAGNOSIS >
TERMINAL LAYOUT



PHYSICAL VALUES





BCM (BODY CONTROL MODULE)
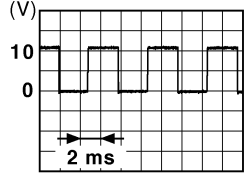
< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	–	Signal name	Input/ Output			
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (W)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF		12 V
3 (Y)	Ground	P/W power supply (RAP)	Output	Ignition switch ON		12 V
4 (R)	Ground	Interior room lamp power supply	Output	Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply)		0 V
				Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply)		12 V
5 (G)	Ground	Passenger door UN- LOCK	Output	Passenger door	UNLOCK (Actuator is activated)	12 V
					Other than UNLOCK (Actuator is not activated)	0 V
8 (V)	Ground	All doors, fuel lid LOCK	Output	All doors, fuel lid	LOCK (Actuator is activated)	12 V
					Other than LOCK (Actuator is not activated)	0 V
9 (G)	Ground	Driver door, fuel lid UNLOCK	Output	Driver door, fuel lid	UNLOCK (Actuator is activated)	12 V
					Other than UNLOCK (Actuator is not activated)	0 V
11 (BR)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON		0 V
14 (R)	Ground	Push-button ignition switch illumination ground	Output	Tail lamp	OFF	0 V
					ON	<p>NOTE: When the illumination brightening/dimming level is in the neutral position.</p>  <p>JSNIA0010GB</p>
15 (Y)	Ground	ACC indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ACC	0 V

BCM (BODY CONTROL MODULE)
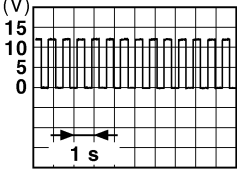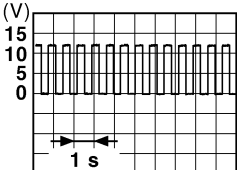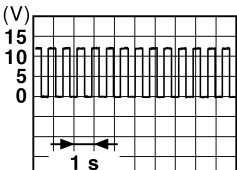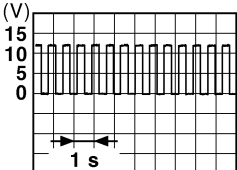
< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
17 (W)	Ground	Turn signal RH (Front and side)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	 PKID0926E 6.5 V
18 (O)	Ground	Turn signal LH (Front and side)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch LH	 PKID0926E 6.5 V
19 (V)	Ground	Room lamp timer control	Output	Interior room lamp	OFF	12 V
					ON	0 V
20 (V)	Ground	Turn signal RH (Rear)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	 PKID0926E 6.5 V
23 (L)	Ground	Back door open	Output	Back door	OPEN (Back door opener actua- tor is activated)	12 V
					Other than OPEN (Back door opener actua- tor is not activated)	0 V
24*1 (O)	Ground	Rear fog lamp	Output	Rear fog lamp	OFF	0 V
					ON	12 V
25 (LG)	Ground	Turn signal LH (Rear)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch LH	 PKID0926E 6.5 V
30 (R)	Ground	Luggage room lamp	Output	Luggage room lamp	ON	0 V
					OFF	12 V

A

B

C

D

E

F

G

H

I

J

PWC

L

M

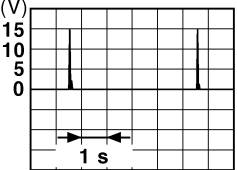
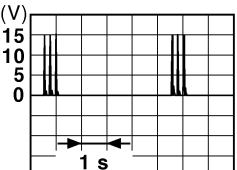
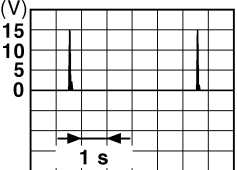
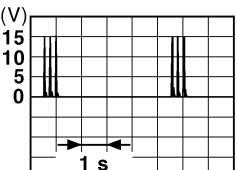
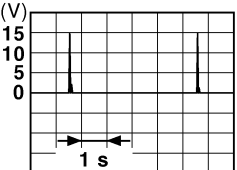
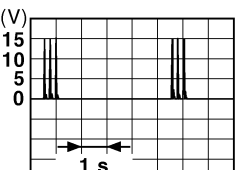
N

O

P





BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
34 (G)	Ground	Luggage room antenna (-)	Output	Ignition switch OFF	 <p>JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compartment	 <p>JMKIA0063GB</p>
35 (R)	Ground	Luggage room antenna (+)	Output	Ignition switch OFF	 <p>JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compartment	 <p>JMKIA0063GB</p>
38 (B)	Ground	Rear bumper antenna (-)	Output	When the back door request switch is operated with ignition switch OFF	 <p>JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p>JMKIA0063GB</p>

BCM (BODY CONTROL MODULE)
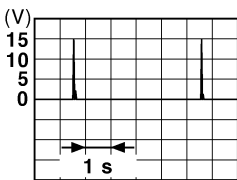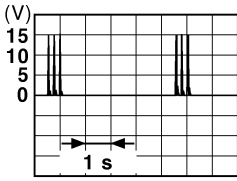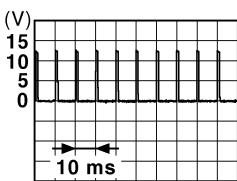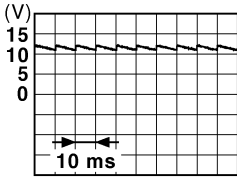
< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
39 (W)	Ground	Rear bumper antenna (+)	Output	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
				When Intelligent Key is not in the antenna detection area	 JMKIA0063GB
47 (V)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch OFF or ACC	12 V
				ON	0 V
52 (SB)	Ground	Starter relay control	Output	Ignition switch ON (A/T models) When selector lever is in P or N position	12 V
				Ignition switch ON (A/T models) When selector lever is not in P or N position	0 V
				Ignition switch ON (M/T models) When the clutch pedal is depressed	Battery voltage
				Ignition switch ON (M/T models) When the clutch pedal is not depressed	0 V
61 (W)	Ground	Back door request switch	Input	ON (Pressed)	0 V
				OFF (Not pressed)	 JPMIA0016GB
64 (G)	Ground	Intelligent Key warning buzzer	Output	Intelligent Key Sounding	0 V
				Intelligent Key Not sounding	12 V
66 (R)	Ground	Back door switch	Input	Back door switch OFF (Door close)	 JPMIA0011GB
				ON (Door open)	0 V

A

B

C

D

E

F

G

H

I

J

PWC

L

M

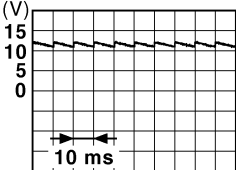
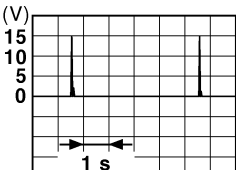
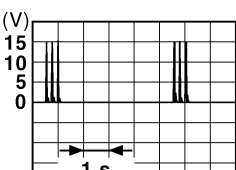
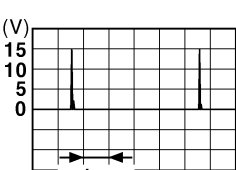
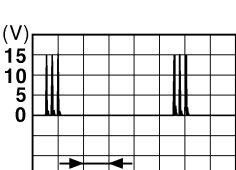
N

O

P







BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
67 (GR)	Ground	Back door opener switch	Input	Back door opener switch	Pressed	0 V
					Not pressed	 JPMIA0011GB
72 (L)	Ground	Room antenna (-) (Center console)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 JMKIA0062GB
					When Intelligent Key is not in the passenger compart- ment	 JMKIA0063GB
73 (P)	Ground	Room antenna (+) (Center console)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 JMKIA0062GB
					When Intelligent Key is not in the passenger compart- ment	 JMKIA0063GB

BCM (BODY CONTROL MODULE)
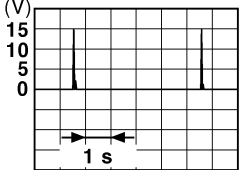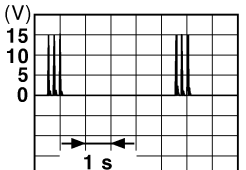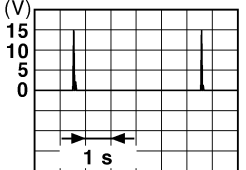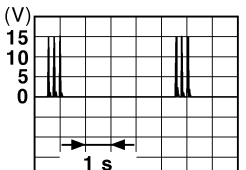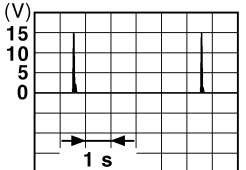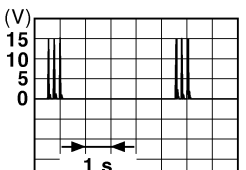
< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
74 (SB)	Ground	Passenger door antenna (-)	Output	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
				When the passenger door request switch is operated with ignition switch OFF	 JMKIA0063GB
75 (BR)	Ground	Passenger door antenna (+)	Output	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
				When the passenger door request switch is operated with ignition switch OFF	 JMKIA0063GB
76 (V)	Ground	Driver door antenna (-)	Output	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
				When the driver door request switch is operated with ignition switch OFF	 JMKIA0063GB

A

B

C

D

E

F

G

H

I

J

PWC

L

M

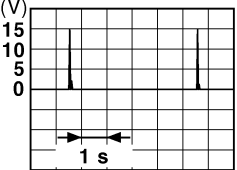
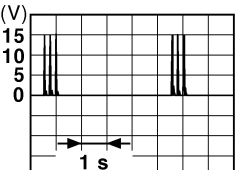
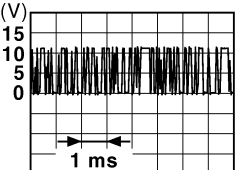
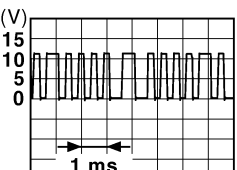
N

O

P

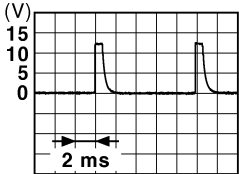

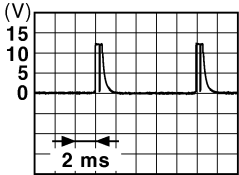
BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
77 (LG)	Ground	Driver door antenna (+)	Output	When the driver door request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
					When Intelligent Key is not in the antenna detection area	 JMKIA0063GB
80 (GR)	Ground	NATS antenna amp (Built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelligent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
81 (W)	Ground	NATS antenna amp (Built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelligent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
82 (R)	Ground	Ignition relay [Fuse block (J/B)] control	Output	Ignition switch	OFF or ACC	0 V
					ON	12 V
83 (GR)	Ground	Remote keyless entry receiver communication	Input/ Output		During waiting	 JMKIA0064GB
					When operating either button on the Intelligent Key	 JMKIA0065GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
87 (BR)	Ground	Combination switch INPUT 5	Input	Combination switch	All switches OFF (Wiper intermittent dial 4)	 1.4 V
					Rear fog lamp switch ON (Wiper intermittent dial 4)	 1.3 V
					Any of the conditions be- low with all switches OFF • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7	 1.3 V

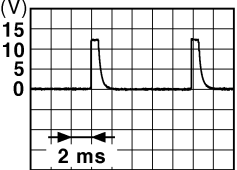
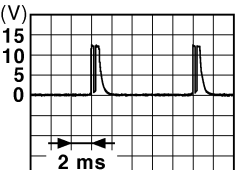
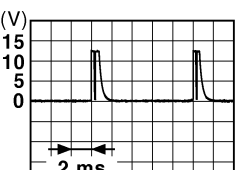

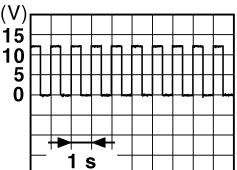
A
B
C
D
E
F
G
H
I
J

L
M
N
O
P

PWC



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
88 (V)	Ground	Combination switch INPUT 3	Input	Combination switch	All switches OFF (Wiper intermittent dial 4)	 <p>JPMIA0041GB</p> <p>1.4 V</p>
					Lighting switch HI (Wiper intermittent dial 4)	 <p>JPMIA0036GB</p> <p>1.3 V</p>
					Lighting switch 2ND (Wiper intermittent dial 4)	 <p>JPMIA0037GB</p> <p>1.3 V</p>
					Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 	 <p>JPMIA0040GB</p> <p>1.3 V</p>
89 (BR)	Ground	Push-button ignition switch (Push switch)	Input	Push-button ig- nition switch (push switch)	Pressed	0 V
					Not pressed	Battery voltage
90 (P)	Ground	CAN-L	Input/ Output	—		—
91 (L)	Ground	CAN-H	Input/ Output	—		—
92 (LG)	Ground	Key slot illumination	Output	Key slot illumi- nation	OFF	0 V
					Blinking	 <p>JPMIA0015GB</p> <p>6.5 V</p>
					ON	12 V

BCM (BODY CONTROL MODULE)
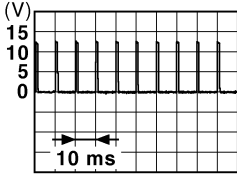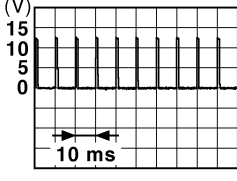
< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
93 (V)	Ground	ON indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ON	0 V
95 (O)	Ground	ACC relay control	Output	Ignition switch	OFF	0 V
					ACC or ON	12 V
96*2 (Y)	Ground	Control device (Detention switch) power supply	Output	—		12 V
97 (L)	Ground	Steering lock condition No. 1	Input	Steering lock	LOCK status	0 V
					UNLOCK status	12 V
98 (P)	Ground	Steering lock condition No. 2	Input	Steering lock	LOCK status	12 V
					UNLOCK status	0 V
99*3 (R)*2 (BR)*4	Ground	Selector lever P position switch (A/T models)	Input	Selector lever	P position	0 V
					Any position other than P	12 V
		Clutch pedal position switch (M/T models without SynchroRev Match mode)	Input	Clutch pedal position switch	OFF (Clutch pedal is depressed)	0 V
					ON (Clutch pedal is not depressed)	Battery voltage
100 (GR)	Ground	Passenger door request switch	Input	Passenger door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 1.0 V
101 (Y)	Ground	Driver door request switch	Input	Driver door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 1.0 V
102 (O)	Ground	Blower fan motor relay control	Output	Ignition switch	OFF or ACC	0 V
					ON	12 V
103 (LG)	Ground	Remote keyless entry receiver power supply	Output	Ignition switch OFF		12 V
106 (W)	Ground	Steering lock unit power supply	Output	Ignition switch	OFF or ACC	12 V
					ON	0 V

A

B

C

D

E

F

G

H

I

J

PWC

L

M

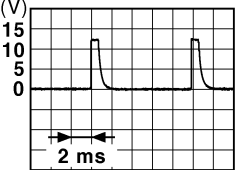

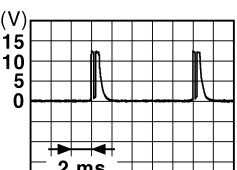

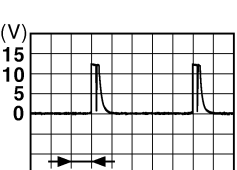
N

O

P

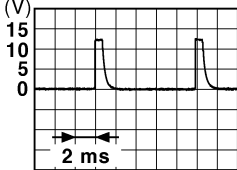

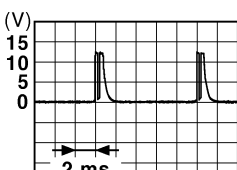
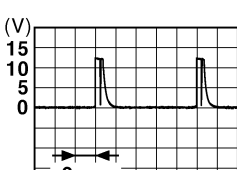
BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
107 (LG)	Ground	Combination switch INPUT 1	Input	Combination switch (Wiper intermit- tent dial 4)	 <p>JPMIA0041GB</p> <p>1.4 V</p>
					 <p>JPMIA0037GB</p> <p>1.3 V</p>
					 <p>JPMIA0036GB</p> <p>1.3 V</p>
					 <p>JPMIA0038GB</p> <p>1.3 V</p>
					 <p>JPMIA0039GB</p> <p>1.3 V</p>

BCM (BODY CONTROL MODULE)

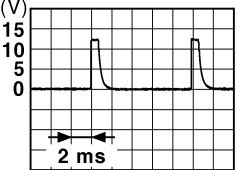

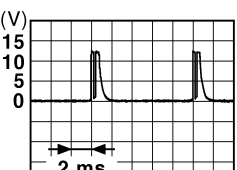

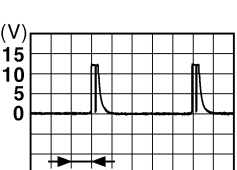
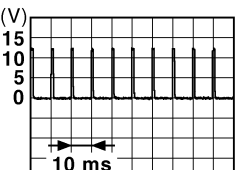
< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
108 (R)	Ground	Combination switch INPUT 4	Input	Combination switch	<div>All switches OFF (Wiper intermittent dial 4)</div> <div><div>JPMIA0041GB</div><div>1.4 V</div></div>
					<div>Lighting switch AUTO (Wiper intermittent dial 4)</div> <div><div>JPMIA0038GB</div><div>1.3 V</div></div>
					<div>Lighting switch 1ST (Wiper intermittent dial 4)</div> <div><div>JPMIA0036GB</div><div>1.3 V</div></div>
					<div>Any of the conditions be- low with all switches OFF</div> <div><ul style="list-style-type: none">• Wiper intermittent dial 1• Wiper intermittent dial 5• Wiper intermittent dial 6</div> <div><div>JPMIA0039GB</div><div>1.3 V</div></div>

PWC



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
109 (Y)	Ground	Combination switch INPUT 2	Input	Combination switch (Wiper intermit- tent dial 4)	All switches OFF  <small>JPMIA0041GB</small> 1.4 V
					Lighting switch PASS  <small>JPMIA0037GB</small> 1.3 V
					Lighting switch 2ND  <small>JPMIA0036GB</small> 1.3 V
					Front wiper switch INT  <small>JPMIA0038GB</small> 1.3 V
					Front wiper switch HI  <small>JPMIA0040GB</small> 1.3 V
110 (P)	Ground	Hazard switch	Input	Hazard switch	ON 0 V
				OFF	 <small>JPMIA0012GB</small> 1.1 V

BCM (BODY CONTROL MODULE)



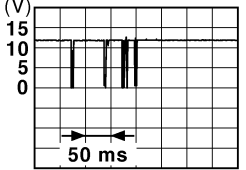
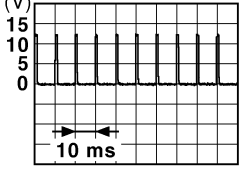
< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
111 (Y)	Ground	Steering lock unit communication	Input/ Output	Steering lock	LOCK status	12 V
					LOCK or UNLOCK	 JMKIA0066GB
					For 15 seconds after UN- LOCK	12 V
					15 seconds or later after UNLOCK	0 V
113 (O)	Ground	Optical sensor	Input	Ignition switch ON	When bright outside of the vehicle	Close to 5 V
					When dark outside of the vehicle	Close to 0 V
114*5 (R)	Ground	Clutch interlock switch	Input	Clutch interlock switch	OFF (Clutch pedal is not depressed)	0 V
					ON (Clutch pedal is de- pressed)	Battery voltage
116 (SB)	Ground	Stop lamp switch 1	Input	—		Battery voltage
118 (P)	Ground	Stop lamp switch 2	Input	Stop lamp switch	OFF (Brake pedal is not depressed)	0 V
					ON (Brake pedal is de- pressed)	Battery voltage
119 (SB)	Ground	Driver side door lock assembly (Unlock sensor)	Input	Driver door	LOCK status (Unlock sensor switch OFF)	 JPMIA0012GB
						1.1 V
					UNLOCK status (Unlock switch sensor ON)	0 V
121 (R)	Ground	Key slot switch	Input	When the Intelligent Key is inserted into key slot		12 V
				When the Intelligent Key is not inserted into key slot		0 V
123 (W)	Ground	IGN feedback	Input	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage

A
B
C
D
E
F
G
H
I
J
PWC
L
M
N
O
P






BCM (BODY CONTROL MODULE)
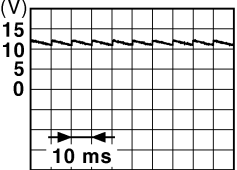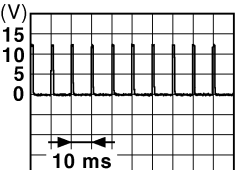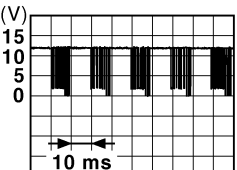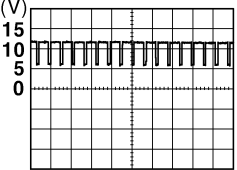
< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
124 (LG)	Ground	Passenger door switch	Input	Passenger door switch	OFF (Door close)	 JPMIA0011GB 11.8 V
					ON (Door open)	0 V
130*6 (L)	Ground	Rear window defog- ger switch	Input	Ignition switch ON	Rear window defogger switch OFF	 JPMIA0012GB 1.1 V
					Rear window defogger switch ON	0 V
132 (Y)	Ground	Power window switch communication	Input/ Output	Ignition switch ON		 JPMIA0013GB 10.2 V
				Ignition switch OFF or ACC		12 V
133 (G)	Ground	Push-button ignition switch illumination	Output	Push-button ig- nition switch il- lumination	ON (Tail lamps OFF)	9.5 V
					ON (Tail lamps ON)	NOTE: The pulse width of this wave is varied by the illumination bright- ening/dimming level.  JPMIA0159GB
					OFF	0 V
134 (GR)	Ground	LOCK indicator lamp	Output	LOCK indicator lamp	OFF	Battery voltage
					ON	0 V
137 (P)	Ground	Receiver and sensor ground	Input	Ignition switch ON		0 V
138 (V)	Ground	Receiver and sensor power supply	Output	Ignition switch	OFF	0 V
					ACC or ON	5.0 V

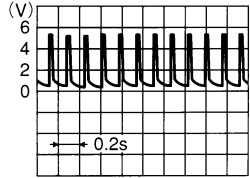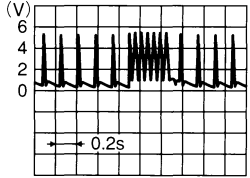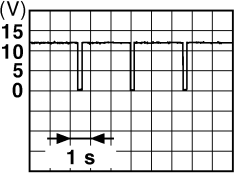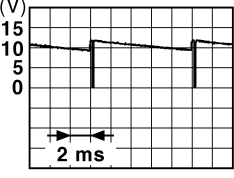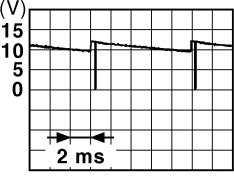BCM (BODY CONTROL MODULE)

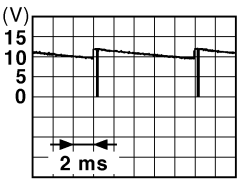
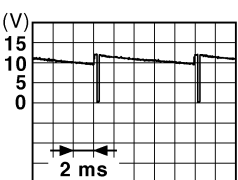

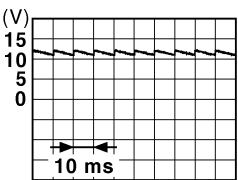
< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
139 (L)	Ground	Tire pressure receiver communication	Input/ Output	Ignition switch ON	Standby state	 OCC3881D
					When receiving the signal from the transmitter	 OCC3880D
140*7 (G)	Ground	Selector lever P/N position (A/T models)	Input	Selector lever	P or N position	12 V
					Except P and N positions	0 V
		Park/neutral position switch (M/T models with SynchroRev Match mode)	Input	Ignition switch ON	Control lever in neutral position	Battery voltage
					Control lever in any position other than neutral	0 V
141 (Y)	Ground	Security indicator	Output	Security indicator	ON	0 V
					Blinking	 JPMIA0014GB
					OFF	12 V
						11.3 V
142 (O)	Ground	Combination switch OUTPUT 5	Output	Combination switch (Wiper intermittent dial 4)	All switches OFF	0 V
					Lighting switch 1ST	 JPMIA0031GB
					Lighting switch HI	
					Lighting switch 2ND	
					Turn signal switch RH	
143 (P)	Ground	Combination switch OUTPUT 1	Output	Combination switch	All switches OFF (Wiper intermittent dial 4)	0 V
					Front wiper switch HI (Wiper intermittent dial 4)	 JPMIA0032GB
					Any of the conditions below with all switches OFF <ul style="list-style-type: none"> Wiper intermittent dial 1 Wiper intermittent dial 2 Wiper intermittent dial 3 Wiper intermittent dial 6 Wiper intermittent dial 7 	

A
B
C
D
E
F
G
H
I
J
PWC
L
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	−	Signal name	Input/ Output			
144 (G)	Ground	Combination switch OUTPUT 2	Output	Combination switch	All switches OFF (Wiper intermittent dial 4)	0 V
					Front washer switch ON (Wiper intermittent dial 4)	
					Any of the conditions below with all switches OFF	
					• Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6	
						10.7 V
145 (L)	Ground	Combination switch OUTPUT 3	Output	Combination switch (Wiper intermittent dial 4)	All switches OFF	0 V
					Front wiper switch INT	
					Front wiper switch LO	
					Lighting switch AUTO	
					Rear fog lamp switch ON	
						10.7 V
146 (SB)	Ground	Combination switch OUTPUT 4	Output	Combination switch (Wiper intermittent dial 4)	All switches OFF	0 V
					Lighting switch 2ND	
					Lighting switch PASS	
					Turn signal switch LH	
						10.7 V
149 (W)	Ground	Tire pressure warning check switch	Input	—		12 V
150 (GR)	Ground	Driver door switch	Input	Driver door switch	OFF (Door close)	
					ON (Door open)	0 V
151 (G)	Ground	Rear window defog- ger relay control	Output	Rear window defogger	Active	0 V
					Not activated	Battery voltage

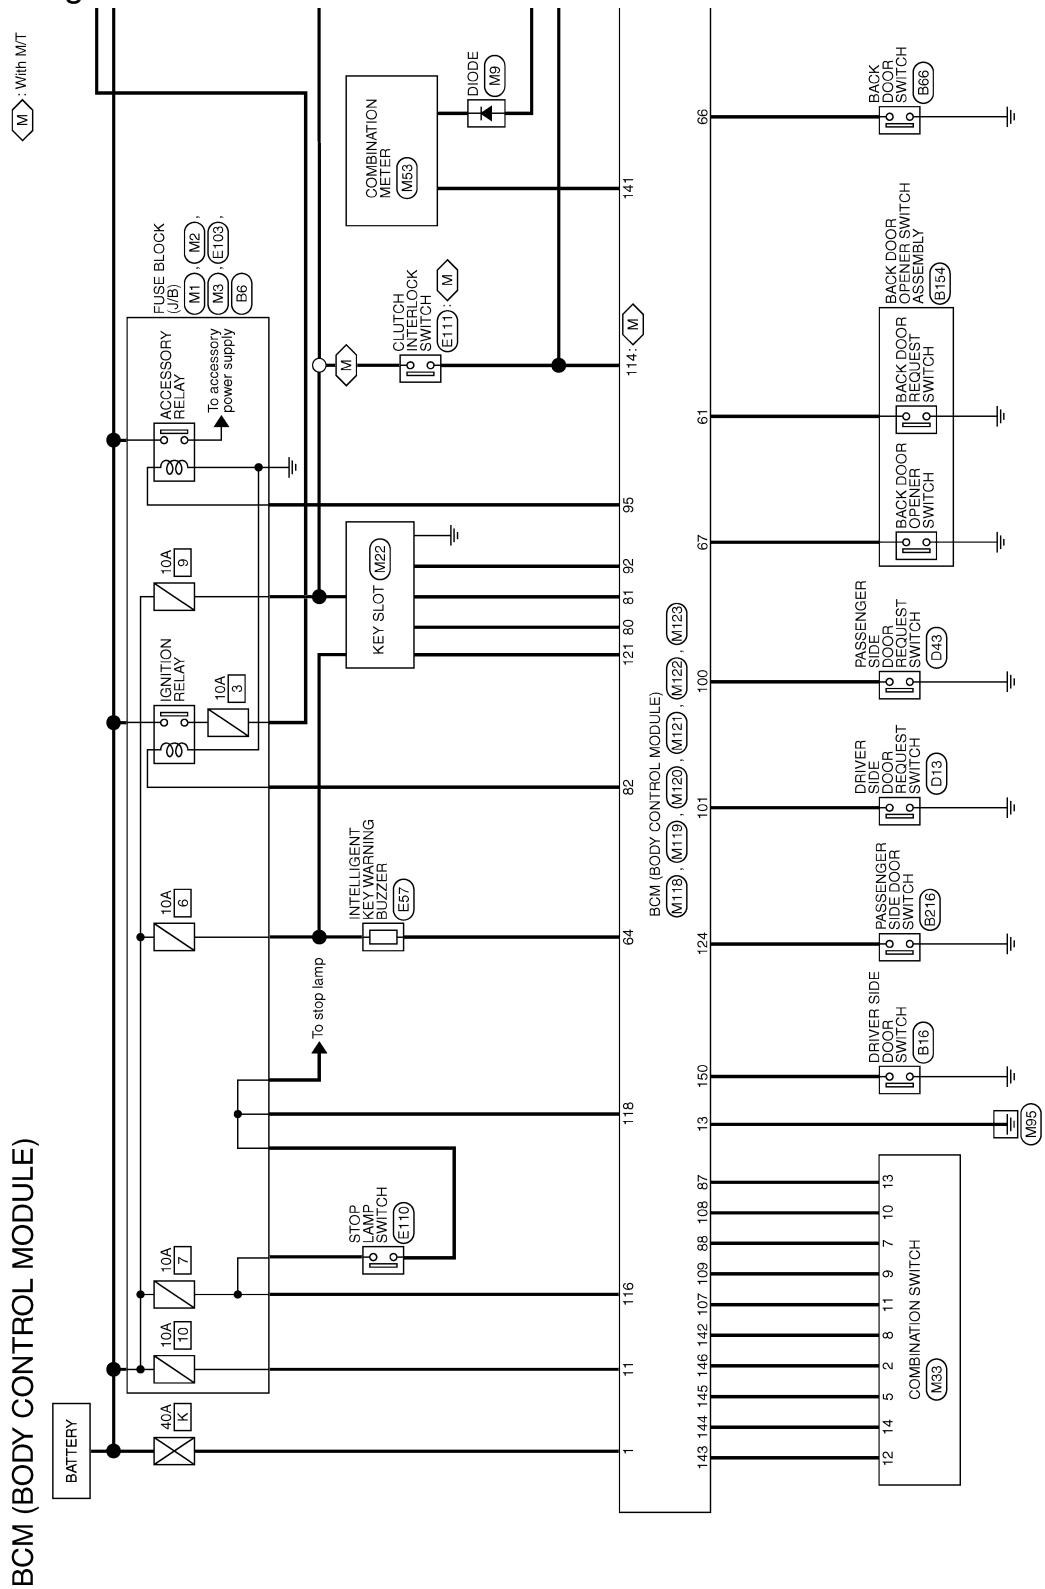
- *1: For Canada
- *2: A/T models
- *3: Except M/T models with SynchroRev Match mode
- *4: M/T models without SynchroRev Match mode
- *5: M/T models
- *6: Without NAVI
- *7: Except M/T models without SynchroRev Match mode

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Wiring Diagram - BCM -

INFOID:000000004754458




2008/09/12

JCMWA3235GE

BCM (BODY CONTROL MODULE)
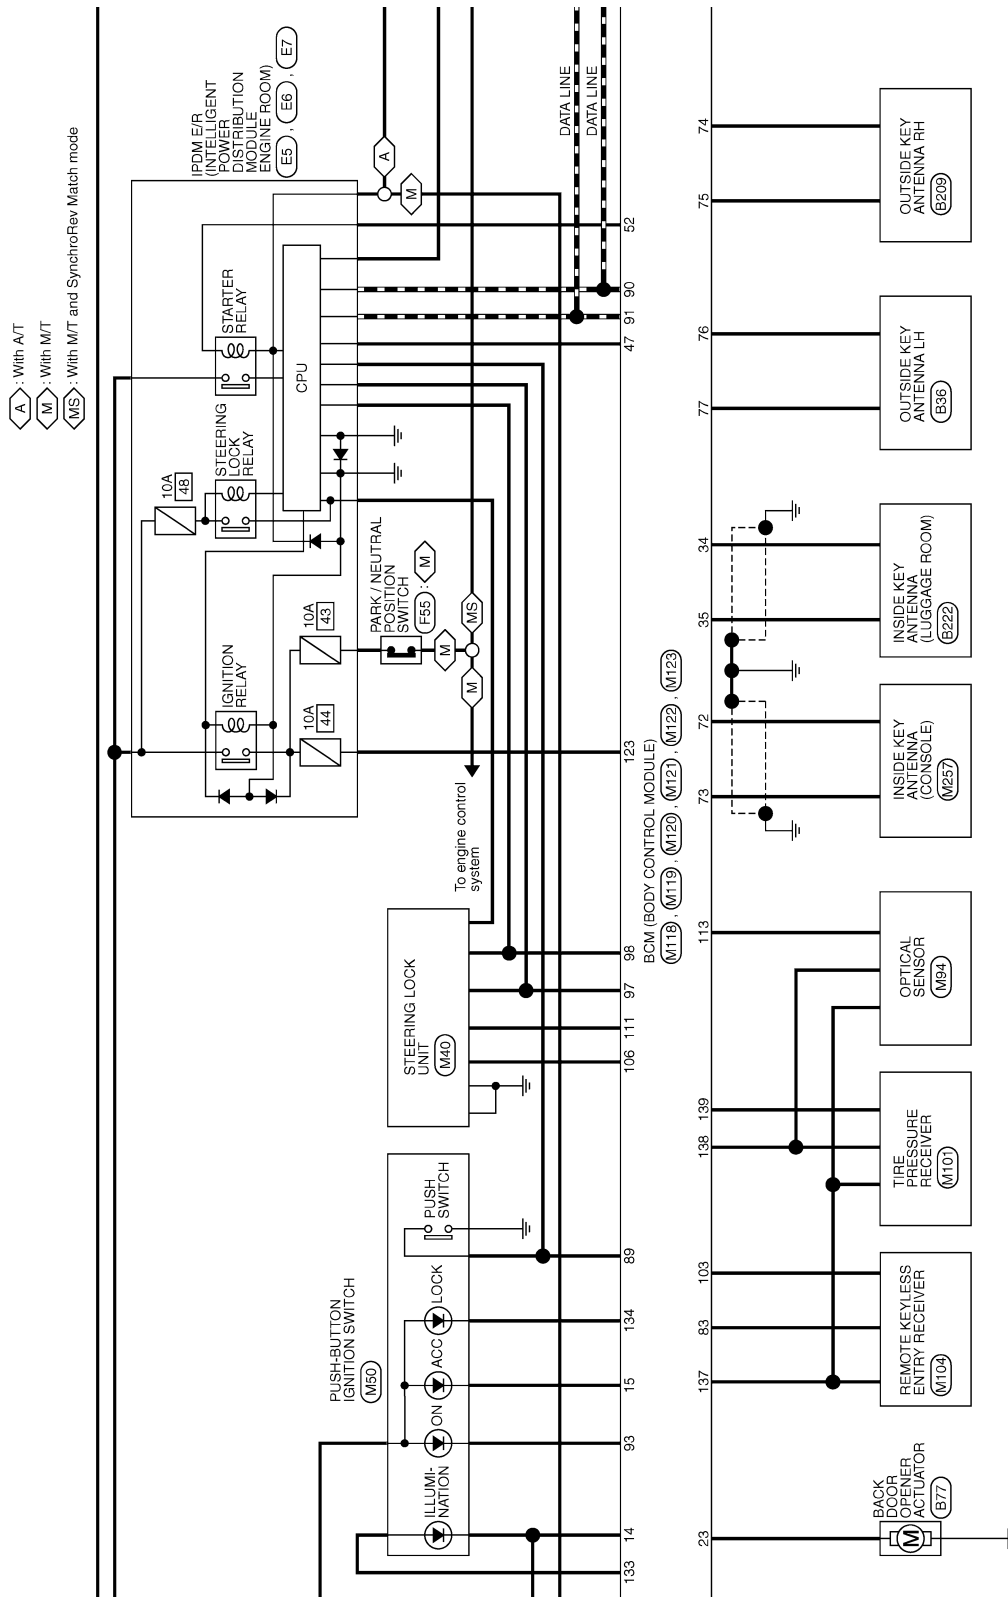
< ECU DIAGNOSIS >




JCMWA3236GE

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

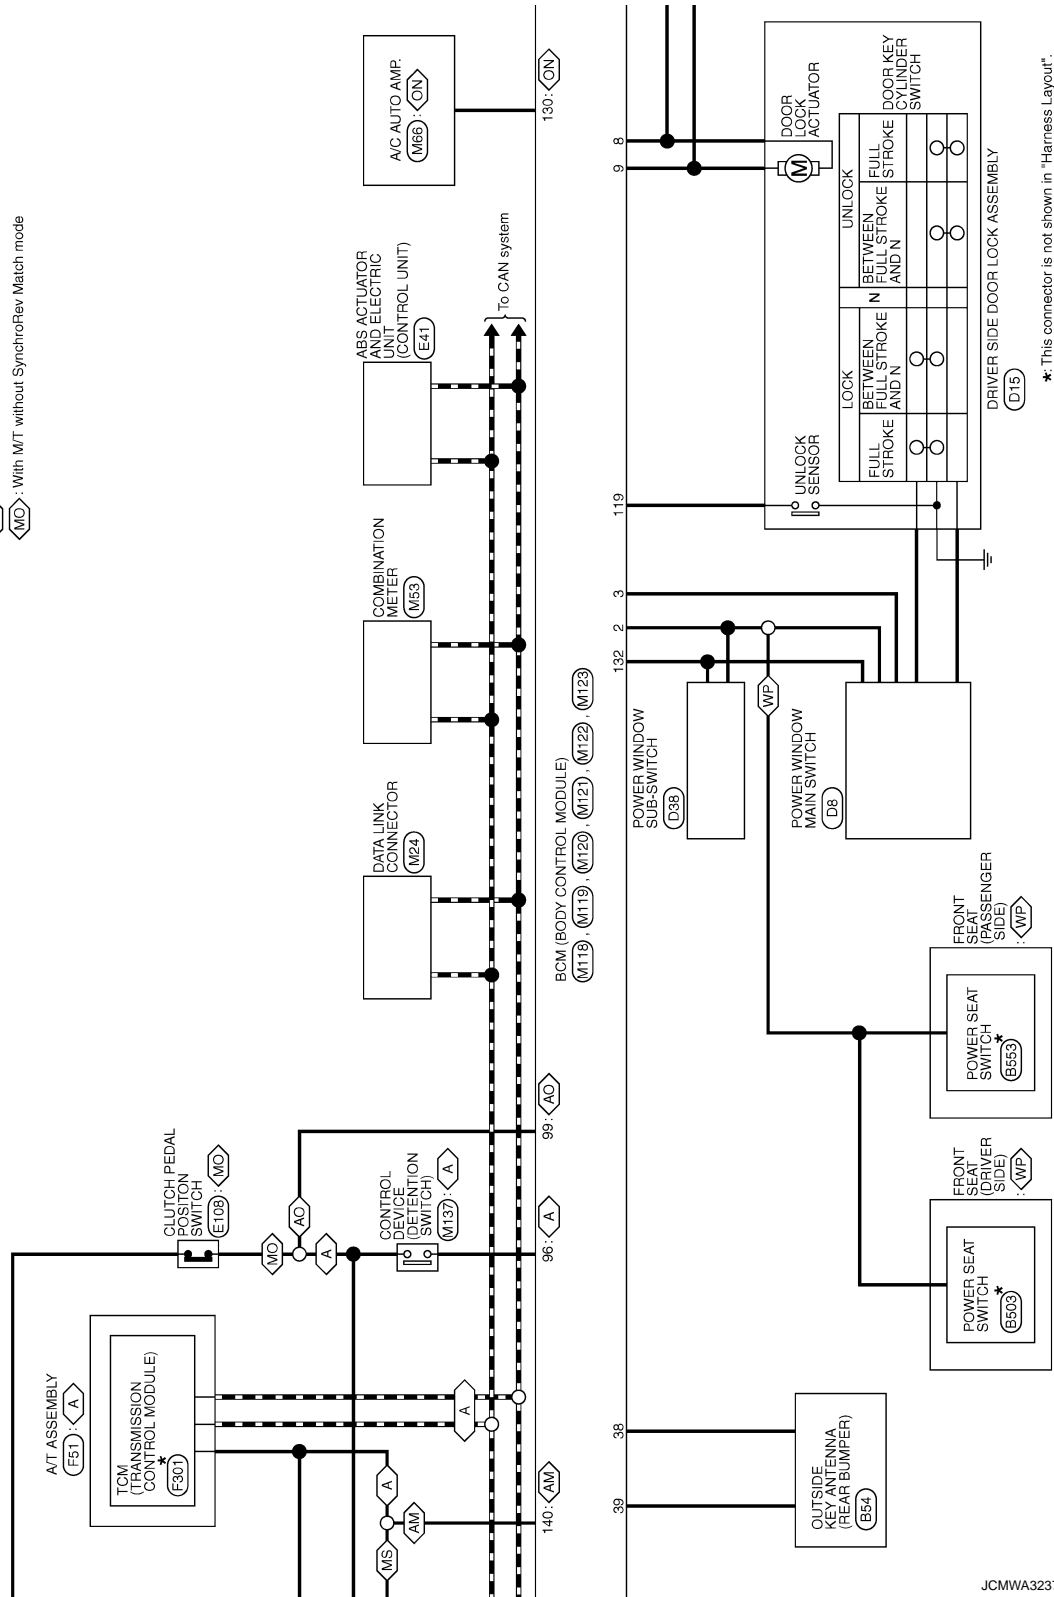- A** : With A/T
- WP** : With power seat
- ON** : Without NAVI
- AM** : With A/T or with M/T and SynchroRev Match mode
- AO** : With A/T or with M/T without SynchroRev Match mode
- MS** : With M/T and SynchroRev Match mode
- MO** : With M/T without SynchroRev Match mode




*: This connector is not shown in "Harness Layout".

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

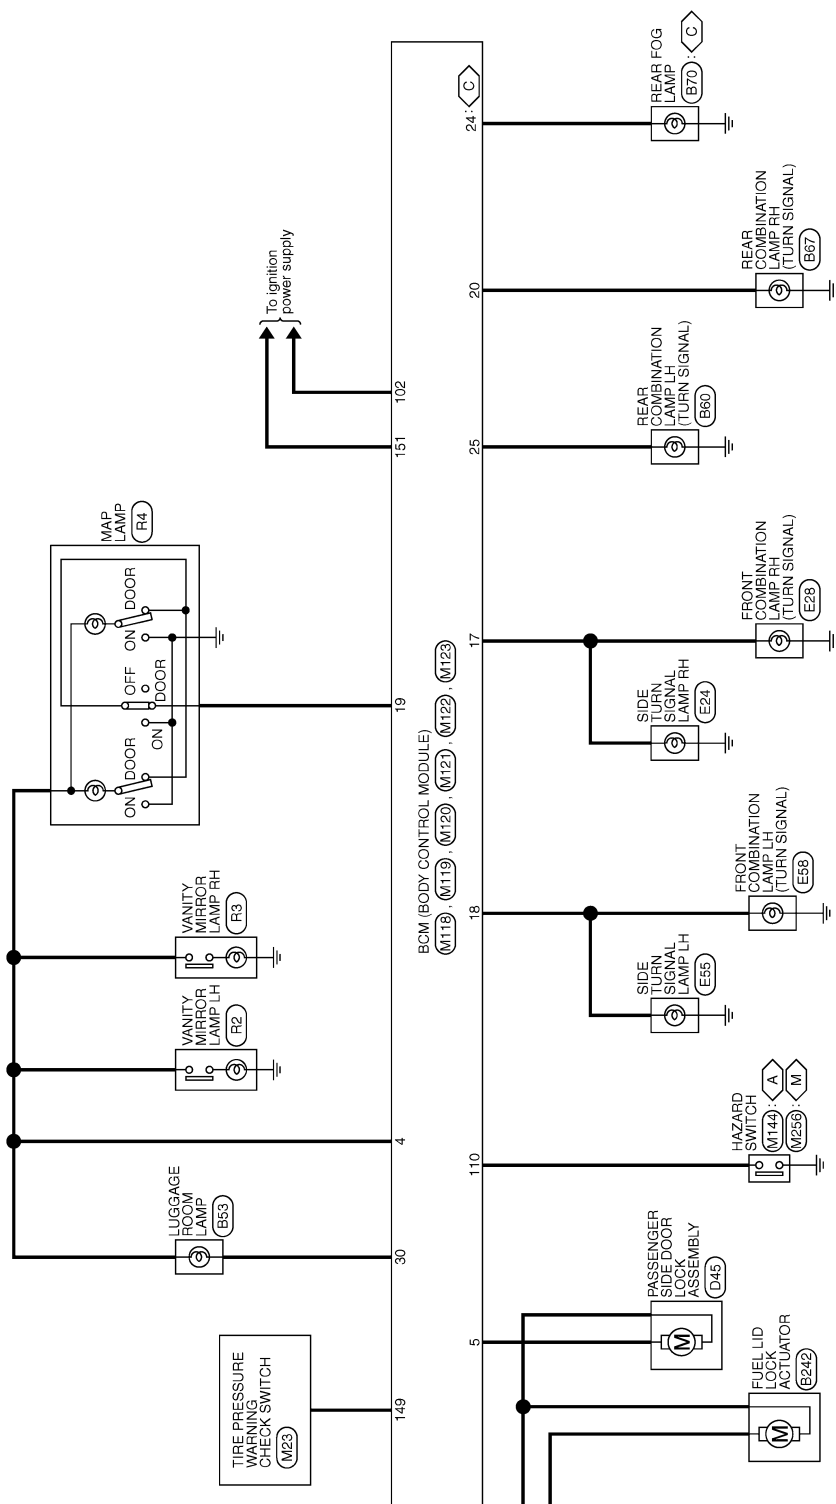A : With A/T
 M : With M/T
 C : For Canada




JCMWA3238Gf

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >


BCM (BODY CONTROL MODULE)

Connector No.	M43
Connector Name	COMBINATION SWITCH
Connector Type	TH16FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
2	SB	OUTPUT 4
5	L	OUTPUT 3
7	V	INPUT 3
8	O	OUTPUT 5
9	Y	INPUT 2
10	R	INPUT 4
11	LG	INPUT 1
12	P	OUTPUT 1
13	BR	INPUT 5
14	G	OUTPUT 2

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LG




Terminal No.	Color of Wire	Signal Name [Specification]
1	W	BAT (+/L)
2	W	POWER WINDOW POWER SUPPLY(BAT)
3	Y	POWER WINDOW POWER SUPPLY(RAP)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
4	R	INTERIOR ROOM LAMP POWER SUPPLY
5	G	PASSENGER DOOR UNLOCK OUTPUT
8	V	ALL DOOR FUEL LID LOCK OUTPUT
9	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
11	BR	BAT (FUSE)
13	B	GND
14	R	PUSH-BUTTON IGNITION SW ILL GND
15	Y	ASC IND
17	W	TURN SIGNAL RH (FRONT, SIDE)
18	O	TURN SIGNAL LH (FRONT, SIDE)
19	V	ROOM LAMP TIMER CONT

Connector No.	M120
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
20	V	TURN SIGNAL RH (REAR)
23	L	BACK DOOR OPEN OUTPUT
24	O	REAR FOG OUTPUT
25	LG	TURN SIGNAL LH (REAR)
30	R	LUGGAGE ROOM LAMP OUTPUT

Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH16FY-NH



Terminal No.	Color of Wire	Signal Name [Specification]
34	G	LUGGAGE ROOM ANT-
35	R	LUGGAGE ROOM ANT+
38	B	BACK DOOR ANT-
39	W	BACK DOOR ANT+
47	V	IGN RELAY (IPDM F/R) CONT
52	SB	STARTER RELAY CONT
61	W	BACK DOOR OPENER REQUEST SW
64	G	I-KEY WARN BUZZER (ENG ROOM)
66	R	BACK DOOR SW
67	GR	BACK DOOR OPENER SW

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color of Wire	Signal Name [Specification]
72	L	ROOM ANT-
73	P	ROOM ANT+
74	SB	PASSENGER DOOR ANT-
75	BR	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	LG	DRIVER DOOR ANT+
80	GR	IMMOBI ANTENNA CONTROL
81	W	IMMOBI ANTENNA SIGNAL
82	R	IGN RELAY (F/R) CONT
83	GR	KEYLESS ENTRY RECEIVER COMM
87	BR	COMBI SW INPUT 3

Terminal No.	Color of Wire	Signal Name [Specification]
88	V	COMBI SW INPUT 3
89	BR	PUSH SW
90	P	CAN-L
91	L	CAN-H
92	LG	KEY SLOT ILL
93	V	ON IND
95	O	ACC RELAY CONT
96	Y	CONTROL DEVICE POWER SUPPLY
97	L	S/L CONDITION 1
98	P	S/L CONDITION 2
99	BR	ASC CLUTCH SW (With M/T without Sport-Relay Match mode)
99	R	SHIFT P. [With A/T]
100	GR	PASSENGER DOOR REQUEST SW
101	Y	DRIVER DOOR REQUEST SW
102	O	BLOWER FAN MOTOR RELAY CONT
103	LG	KEYLESS ENTRY RECEIVER POWER SUPPLY
106	W	S/L UNIT POWER SUPPLY
107	LG	COMBI SW INPUT 1
108	R	COMBI SW INPUT 4
109	Y	COMBI SW INPUT 2
110	P	HAZARD SW
111	Y	S/L UNIT COMM

JCMWA3239GE


A
B
C
D
E
F
G
H
I
J
PWC
L
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

134	GR	LOCK IND
137	P	RECEIVER/SENSOR GND
138	V	RECEIVER/SENSOR POWER SUPPLY
139	L	TIRE PRESSURE RECEIVER COMM
140	G	POWER WINDOW LOCKDOWN SW (Power Window Lockdown Switch)
140	G	SHIFT N/P (With A/T)
141	Y	SECURITY INDICATOR
142	O	COMET SW OUTPUT 5
143	P	COMET SW OUTPUT 1
144	G	COMET SW OUTPUT 2
145	L	COMET SW OUTPUT 3
146	SB	COMET SW OUTPUT 4
149	W	TIRE PRESSURE WARN CHECK SW
150	GR	DRIVER DOOR SW
151	G	REAR WINDOW DEFOGGER RELAY CONT

BCM (BODY CONTROL MODULE)		
Connector No.	M123	
Connector Name	BCM (BODY CONTROL MODULE)	
Connector Type	THRU-IG-NH	



Terminal No.	Color of Wire	Signal Name [Specification]
113	O	OPTICAL SENSOR
114	R	CLUTCH INTERLOCK SW
116	SB	STOP LAMP SW 1
118	P	STOP LAMP SW 2
119	SB	DR DOOR UNLOCK SENSOR
121	R	KEY SLOT SW
123	W	IGN F/B
124	LG	PASSENGER DOOR SW
130	L	REAR DEFOGGER SW
132	Y	POWER WINDOW SW COMM
133	G	PUSH BUTTON IGNITION SW ILL POWER

JCMWA3240GE

Fail-safe

INFOID:000000004754459

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Display contents of CONSULT	Fail-safe	Cancellation
B2013: ID DISCORD BCM-S/L	Inhibit engine cranking	Erase DTC
B2014: CHAIN OF S/L-BCM	Inhibit engine cranking	Erase DTC
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2557: VEHICLE SPEED	Inhibit steering lock	When normal vehicle speed signals are received from ABS actuator and electric unit (control unit) for 500 ms
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> Starter control relay signal Starter relay status signal
B2601: SHIFT POSITION	Inhibit steering lock	500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> Selector lever P position switch signal P range signal (CAN)
B2602: SHIFT POSITION	Inhibit steering lock	5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> Ignition switch is in the ON position Selector lever P position switch signal: Except P position (battery voltage) Vehicle speed: 4 km/h (2.5 MPH) or more
B2603: SHIFT POSI STATUS	Inhibit steering lock	500 ms after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> Ignition switch is in the ON position Selector lever P position switch signal: Except P position (battery voltage) Selector lever P/N position signal: Except P and N positions (0 V)
B2604: PNP SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> Status 1 <ul style="list-style-type: none"> Ignition switch is in the ON position Selector lever P/N position signal: P and N position (battery voltage) P range signal or N range signal (CAN): ON Status 2 <ul style="list-style-type: none"> Ignition switch is in the ON position Selector lever P/N position signal: Except P and N positions (0 V) P range signal and N range signal (CAN): OFF
B2605: PNP SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> Status 1 <ul style="list-style-type: none"> Ignition switch is in the ON position Selector lever P/N position signal: Except P and N positions (0 V) Interlock/PNP switch signal (CAN): OFF Status 2 <ul style="list-style-type: none"> Ignition switch is in the ON position Selector lever P/N position signal: P or N position (battery voltage) PNP switch signal (CAN): ON
B2606: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> Steering lock relay signal (Request signal) Steering lock relay signal (Condition signal)

A

B

C

D

E

F

G

H

I

J

PWC

L

M

N

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Display contents of CONSULT	Fail-safe	Cancellation
B2607: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has becomes consistent <ul style="list-style-type: none"> Steering lock relay signal (Request signal) Steering lock relay signal (Condition signal)
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> Starter motor relay control signal Starter relay status signal (CAN)
B2609: S/L STATUS	<ul style="list-style-type: none"> Inhibit engine cranking Inhibit steering lock 	When the following steering lock conditions agree <ul style="list-style-type: none"> BCM steering lock control status Steering lock condition No. 1 signal status Steering lock condition No. 2 signal status
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> IGN relay (IPDM E/R) control signal: OFF (Battery voltage) Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions are fulfilled <ul style="list-style-type: none"> Power position changes to ACC Receives engine status signal (CAN)
B2612: S/L STATUS	<ul style="list-style-type: none"> Inhibit engine cranking Inhibit steering lock 	When any of the following conditions are fulfilled <ul style="list-style-type: none"> Steering lock unit status signal (CAN) is received normally The BCM steering lock control status matches the steering lock status recognized by the steering lock unit status signal (CAN from IPDM E/R)
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B2619: BCM	Inhibit engine cranking	1 second after the steering lock unit power supply output control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization
B26E8: CLUTCH SW	Inhibit engine cranking	When any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> Status 1 <ul style="list-style-type: none"> Clutch switch signal (CAN from ECM): ON Clutch interlock switch signal: OFF (0 V) Status 2 <ul style="list-style-type: none"> Clutch switch signal (CAN from ECM): OFF Clutch interlock switch signal: ON (Battery voltage)
B26E9: S/L STATUS	<ul style="list-style-type: none"> Inhibit engine cranking Inhibit steering lock 	When BCM transmits the LOCK request signal to steering lock unit, and receives LOCK response signal from steering lock unit, the following conditions are fulfilled <ul style="list-style-type: none"> Steering condition No. 1 signal: LOCK (0 V) Steering condition No. 2 signal: LOCK (Battery voltage)

HIGH FLASHER OPERATION

BCM detects the turn signal lamp circuit status by the current value.

BCM increases the turn signal lamp blinking speed if the bulb or harness open is detected with the turn signal lamp operating.

NOTE:

The blinking speed is normal while activating the hazard warning lamp.

FAIL-SAFE CONTROL BY RAIN SENSOR MALFUNCTION

- BCM judges the rain sensor serial link error by the rain sensor serial link condition and detects the rain sensor malfunction by rain sensor malfunction signal.
- When BCM detects the rain sensor serial link error or the rain sensor malfunction while front wiper AUTO operation, BCM operates a fail-safe control.

NOTE:

If rain sensor malfunction is detected when ignition switch is turned OFF ⇒ ON and front wiper switch is INT position, BCM operates a fail-safe control.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

DTC Inspection Priority Chart

INFOID:000000004754460

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	B2562: LOW VOLTAGE
2	<ul style="list-style-type: none"> U1000: CAN COMM CIRCUIT U1010: CONTROL UNIT (CAN)
3	<ul style="list-style-type: none"> B2190: NATS ANTENNA AMP B2191: DIFFERENCE OF KEY B2192: ID DISCORD BCM-ECM B2193: CHAIN OF BCM-ECM B2195: ANTI SCANNING
4	<ul style="list-style-type: none"> B2013: ID DISCORD BCM-S/L B2014: CHAIN OF S/L-BCM B2553: IGNITION RELAY B2555: STOP LAMP B2556: PUSH-BTN IGN SW B2557: VEHICLE SPEED B2560: STARTER CONT RELAY B2601: SHIFT POSITION B2602: SHIFT POSITION B2603: SHIFT POSI STATUS B2604: PNP SW B2605: PNP SW B2606: S/L RELAY B2607: S/L RELAY B2608: STARTER RELAY B2609: S/L STATUS B260A: IGNITION RELAY B260B: STEERING LOCK UNIT B260C: STEERING LOCK UNIT B260D: STEERING LOCK UNIT B260F: ENG STATE SIG LOST B2612: S/L STATUS B2614: ACC RELAY CIRC B2615: BLOWER RELAY CIRC B2616: IGN RELAY CIRC B2617: STARTER RELAY CIRC B2618: BCM B2619: BCM B261A: PUSH-BTN IGN SW B261E: VEHICLE TYPE B26E8: CLUTCH SW B26E9: S/L STATUS B26EA: KEY REGISTRATION C1729: VHCL SPEED SIG ERR U0415: VEHICLE SPEED SIG

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Priority	DTC
5	<ul style="list-style-type: none"> • C1704: LOW PRESSURE FL • C1705: LOW PRESSURE FR • C1706: LOW PRESSURE RR • C1707: LOW PRESSURE RL • C1708: [NO DATA] FL • C1709: [NO DATA] FR • C1710: [NO DATA] RR • C1711: [NO DATA] RL • C1712: [CHECKSUM ERR] FL • C1713: [CHECKSUM ERR] FR • C1714: [CHECKSUM ERR] RR • C1715: [CHECKSUM ERR] RL • C1716: [PRESSDATA ERR] FL • C1717: [PRESSDATA ERR] FR • C1718: [PRESSDATA ERR] RR • C1719: [PRESSDATA ERR] RL • C1720: [CODE ERR] FL • C1721: [CODE ERR] FR • C1722: [CODE ERR] RR • C1723: [CODE ERR] RL • C1724: [BATT VOLT LOW] FL • C1725: [BATT VOLT LOW] FR • C1726: [BATT VOLT LOW] RR • C1727: [BATT VOLT LOW] RL • C1734: CONTROL UNIT
6	<ul style="list-style-type: none"> • B2621: INSIDE ANTENNA • B2622: INSIDE ANTENNA • B2623: INSIDE ANTENNA

DTC Index

INFOID:000000004754461

NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data, refer to [BCS-17, "COMMON ITEM : CONSULT-III Function \(BCM - COMMON ITEM\)"](#).

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Refer- ence page
No DTC is detected. further testing may be required.	—	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	—	BCS-38
U1010: CONTROL UNIT (CAN)	—	—	—	—	BCS-39
U0415: VEHICLE SPEED SIG	—	—	—	—	BCS-40
B2013: ID DISCORD BCM-S/L	×	×	—	—	SEC-50
B2014: CHAIN OF S/L-BCM	×	×	—	—	SEC-51
B2190: NATS ANTENNA AMP	×	—	—	—	SEC-42
B2191: DIFFERENCE OF KEY	×	—	—	—	SEC-45
B2192: ID DISCORD BCM-ECM	×	—	—	—	SEC-46
B2193: CHAIN OF BCM-ECM	×	—	—	—	SEC-48
B2195: ANTI SCANNING	×	—	—	—	SEC-49
B2553: IGNITION RELAY	—	×	—	—	PCS-48
B2555: STOP LAMP	—	×	—	—	SEC-54

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Refer- ence page
B2556: PUSH-BTN IGN SW	—	×	×	—	SEC-56
B2557: VEHICLE SPEED	×	×	×	—	SEC-58
B2560: STARTER CONT RELAY	×	×	×	—	SEC-59
B2562: LOW VOLTAGE	—	×	—	—	BCS-41
B2601: SHIFT POSITION	×	×	×	—	SEC-60
B2602: SHIFT POSITION	×	×	×	—	SEC-63
B2603: SHIFT POSI STATUS	×	×	×	—	SEC-66
B2604: PNP SW	×	×	×	—	SEC-69
B2605: PNP SW	×	×	×	—	SEC-71
B2606: S/L RELAY	×	×	×	—	SEC-73
B2607: S/L RELAY	×	×	×	—	SEC-74
B2608: STARTER RELAY	×	×	×	—	SEC-76
B2609: S/L STATUS	×	×	×	—	SEC-78
B260A: IGNITION RELAY	×	×	×	—	PCS-50
B260B: STEERING LOCK UNIT	—	×	×	—	SEC-82
B260C: STEERING LOCK UNIT	—	×	×	—	SEC-83
B260D: STEERING LOCK UNIT	—	×	×	—	SEC-84
B260F: ENG STATE SIG LOST	×	×	×	—	SEC-85
B2612: S/L STATUS	×	×	×	—	SEC-90
B2614: ACC RELAY CIRC	—	×	×	—	PCS-52
B2615: BLOWER RELAY CIRC	—	×	×	—	PCS-55
B2616: IGN RELAY CIRC	—	×	×	—	PCS-58
B2617: STARTER RELAY CIRC	×	×	×	—	SEC-94
B2618: BCM	×	×	×	—	PCS-61
B2619: BCM	×	×	×	—	SEC-96
B261A: PUSH-BTN IGN SW	—	×	×	—	PCS-62
B261E: VEHICLE TYPE	×	×	× (Turn ON for 15 seconds)	—	SEC-97
B2622: INSIDE ANTENNA	—	×	—	—	DLK-55
B2623: INSIDE ANTENNA	—	×	—	—	DLK-57
B26E8: CLUTCH SW	×	×	×	—	SEC-86
B26E9: S/L STATUS	×	×	× (Turn ON for 15 seconds)	—	SEC-88
B26EA: KEY REGISTRATION	—	×	× (Turn ON for 15 seconds)	—	SEC-89
C1704: LOW PRESSURE FL	—	—	—	×	WT-15
C1705: LOW PRESSURE FR	—	—	—	×	
C1706: LOW PRESSURE RR	—	—	—	×	
C1707: LOW PRESSURE RL	—	—	—	×	
C1708: [NO DATA] FL	—	—	—	×	WT-17
C1709: [NO DATA] FR	—	—	—	×	
C1710: [NO DATA] RR	—	—	—	×	
C1711: [NO DATA] RL	—	—	—	×	

A

B

C

D

E

F

G

H

I

J

PWC

L

M

N

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Refer- ence page
C1712: [CHECKSUM ERR] FL	—	—	—	×	WT-20
C1713: [CHECKSUM ERR] FR	—	—	—	×	
C1714: [CHECKSUM ERR] RR	—	—	—	×	
C1715: [CHECKSUM ERR] RL	—	—	—	×	
C1716: [PRESSDATA ERR] FL	—	—	—	×	WT-23
C1717: [PRESSDATA ERR] FR	—	—	—	×	
C1718: [PRESSDATA ERR] RR	—	—	—	×	
C1719: [PRESSDATA ERR] RL	—	—	—	×	
C1720: [CODE ERR] FL	—	—	—	×	WT-25
C1721: [CODE ERR] FR	—	—	—	×	
C1722: [CODE ERR] RR	—	—	—	×	
C1723: [CODE ERR] RL	—	—	—	×	
C1724: [BATT VOLT LOW] FL	—	—	—	×	WT-28
C1725: [BATT VOLT LOW] FR	—	—	—	×	
C1726: [BATT VOLT LOW] RR	—	—	—	×	
C1727: [BATT VOLT LOW] RL	—	—	—	×	
C1729: VHCL SPEED SIG ERR	—	—	—	×	WT-31
C1734: CONTROL UNIT	—	—	—	×	WT-33

POWER WINDOW MAIN SWITCH

< ECU DIAGNOSIS >

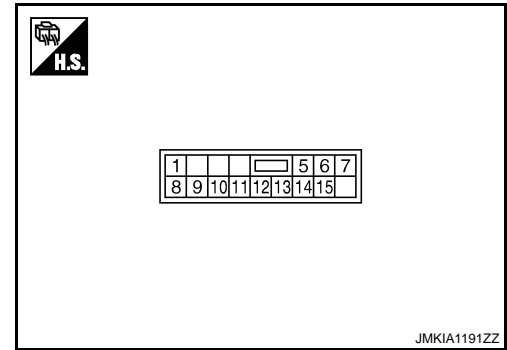
POWER WINDOW MAIN SWITCH

Reference Value



INFOID:000000004461030

TERMINAL LAYOUT

PHYSICAL VALUES



POWER WINDOW MAIN SWITCH

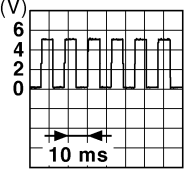
Terminal No. (Wire color)		Description		Condition	Voltage [V] (Approx.)
+	-	Signal name	Input/ Output		
1 (W)	Ground	Battery power supply	Input	—	Battery voltage
5 (O)	Ground	Encoder power supply	Output	When ignition switch ON or automatic window ad- justing operates	Battery voltage
6 (GR)	Ground	Door key cylinder switch LOCK signal	Input	Key position (Neutral → Locked)	5 → 0
7 (V)	Ground	Door key cylinder switch UN- LOCK signal	Input	Key position (Neutral → Unlocked)	5 → 0
8 (L)	Ground	Driver side power window motor UP signal	Output	When power window main switch (Driver side) is op- erated UP	Battery voltage
9 (LG)	Ground	Encoder pulse signal 2	Input	When power window mo- tor operates	 JMKIA0070GB
10 (Y)	Ground	Ignition switch power signal	Input	IGN SW ON	Battery voltage
				IGN SW OFF	0
11 (BR)	Ground	Driver side power window motor DOWN signal	Output	When power window main switch (Driver side) is op- erated DOWN	Battery voltage
12 (SB)	Ground	Power window serial link	Input/ Output	Ignition switch ON	 JPMIA0013GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

POWER WINDOW MAIN SWITCH
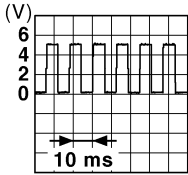
< ECU DIAGNOSIS >


Terminal No. (Wire color)		Description		Condition	Voltage [V] (Approx.)
+	-	Signal name	Input/ Output		
13 (R)	Ground	Encoder pulse signal 1	Input	When power window motor operates	 <small>JMKIA0070GB</small>
14 (G)	Ground	Encoder ground	—	—	0
15 (B)	Ground	Ground	—	—	0

POWER WINDOW MAIN SWITCH

< ECU DIAGNOSIS >

Wiring Diagram - POWER WINDOW CONTROL SYSTEM -

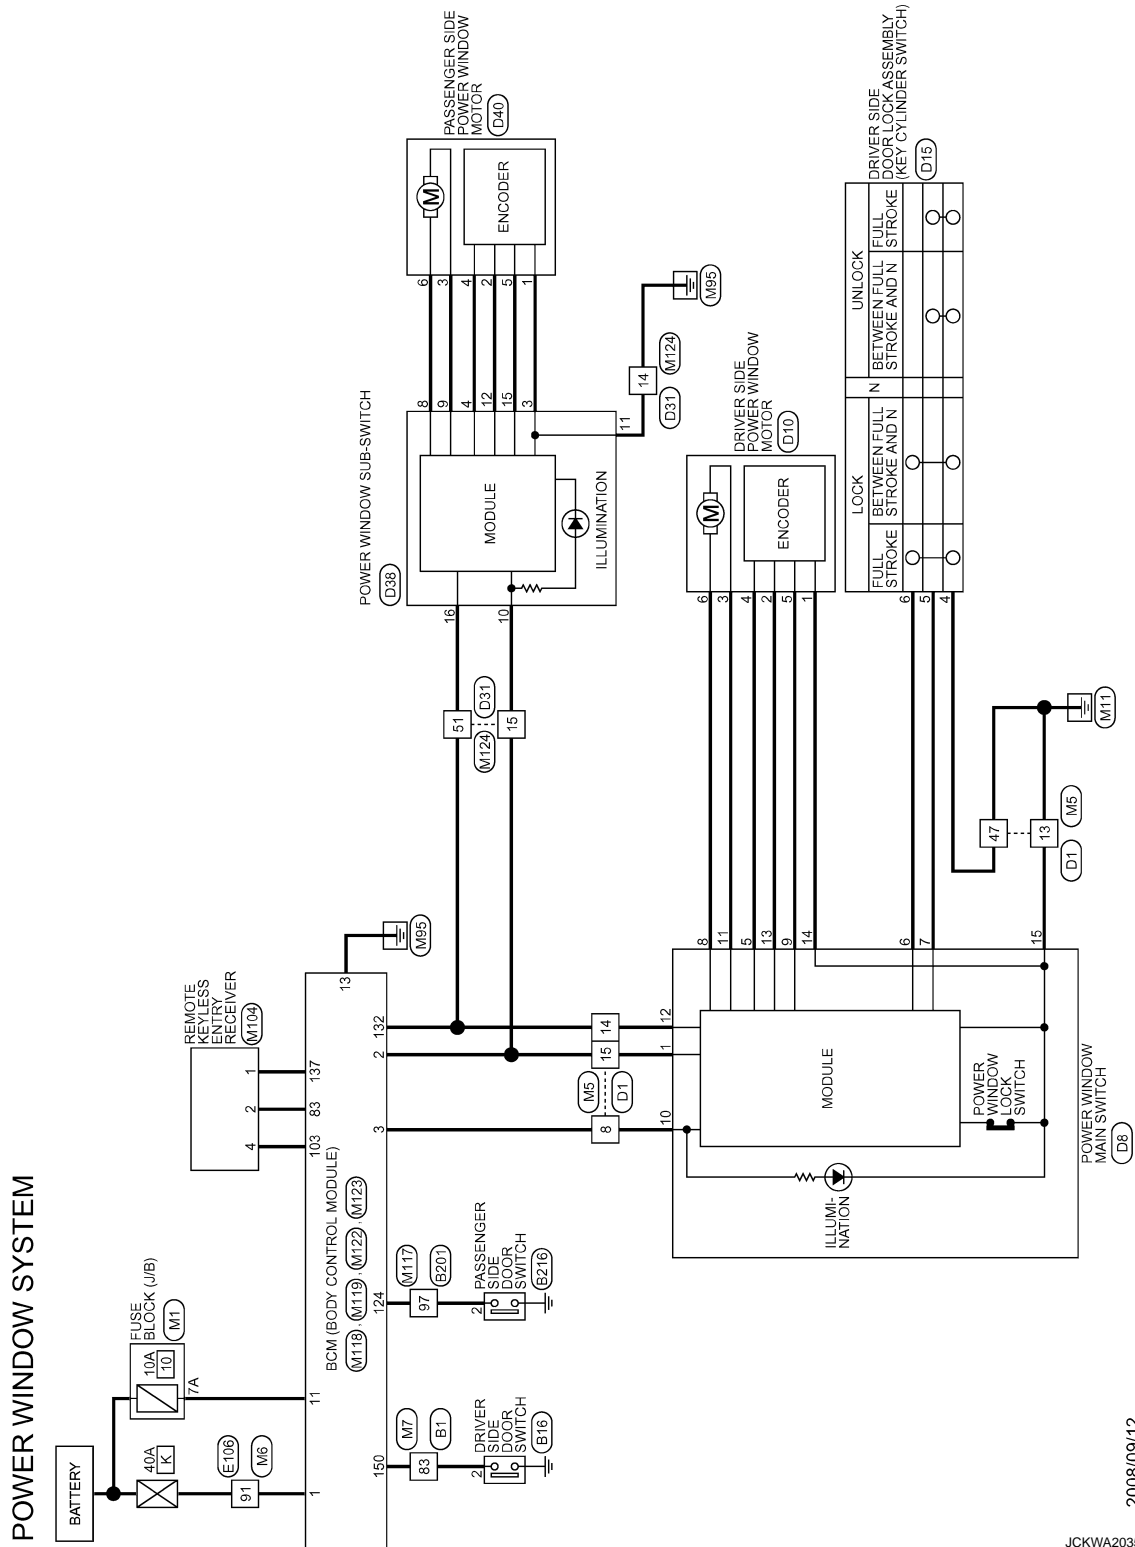INFOID:000000004461031




PWC

POWER WINDOW MAIN SWITCH

< ECU DIAGNOSIS >

POWER WINDOW SYSTEM

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH8DFW-CS16-TM4

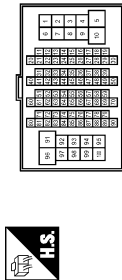


Terminal No.	83
Color of Wire	GR
Signal Name [Specification]	-

Connector No.	B16
Connector Name	DRIVER SIDE DOOR SWITCH
Connector Type	A03FW



Terminal No.	2
Color of Wire	GR
Signal Name [Specification]	-

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH8DFW-CS16-TM4

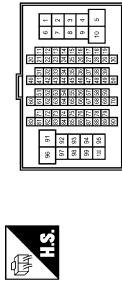


Terminal No.	97
Color of Wire	LG
Signal Name [Specification]	-

Connector No.	B216
Connector Name	PASSENGER SIDE DOOR SWITCH
Connector Type	A03FW




Terminal No.	2
Color of Wire	LG
Signal Name [Specification]	-

Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Type	TH4DFW-CS15



Terminal No.	8
Color of Wire	Y
Signal Name [Specification]	-
Terminal No.	13
Color of Wire	B
Signal Name [Specification]	-
Terminal No.	14
Color of Wire	SB
Signal Name [Specification]	-
Terminal No.	15
Color of Wire	W
Signal Name [Specification]	-
Terminal No.	47
Color of Wire	B
Signal Name [Specification]	-

Connector No.	D8
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS16FW-CS



Terminal No.	1
Color of Wire	W
Signal Name [Specification]	-
Terminal No.	5
Color of Wire	O
Signal Name [Specification]	-
Terminal No.	6
Color of Wire	GR
Signal Name [Specification]	-
Terminal No.	7
Color of Wire	V
Signal Name [Specification]	-
Terminal No.	8
Color of Wire	L
Signal Name [Specification]	-
Terminal No.	9
Color of Wire	LG
Signal Name [Specification]	-
Terminal No.	10
Color of Wire	Y
Signal Name [Specification]	-
Terminal No.	11
Color of Wire	BR
Signal Name [Specification]	-
Terminal No.	12
Color of Wire	SB
Signal Name [Specification]	-
Terminal No.	13
Color of Wire	R
Signal Name [Specification]	-
Terminal No.	14
Color of Wire	G
Signal Name [Specification]	-

Terminal No.	15
Color of Wire	B
Signal Name [Specification]	-

Connector No.	D10
Connector Name	DRIVER SIDE POWER WINDOW MOTOR
Connector Type	FH8DFGY-Z



Terminal No.	1
Color of Wire	G
Signal Name [Specification]	-
Terminal No.	2
Color of Wire	R
Signal Name [Specification]	-
Terminal No.	3
Color of Wire	BR
Signal Name [Specification]	-
Terminal No.	4
Color of Wire	O
Signal Name [Specification]	-
Terminal No.	5
Color of Wire	LG
Signal Name [Specification]	-
Terminal No.	6
Color of Wire	L
Signal Name [Specification]	-

JCKWA2036GE

POWER WINDOW MAIN SWITCH

< ECU DIAGNOSIS >


POWER WINDOW SYSTEM

Connector No.	D15
Connector Name	DRIVER SIDE DOOR LOCK ASSEMBLY
Connector Type	E08FGY-RS




Terminal No.	Color of Wire	Signal Name [Specification]
4	B	-
5	V	-
6	GR	-

Connector No.	D31
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15



Terminal No.	Color of Wire	Signal Name [Specification]
14	B	-
15	W	-
51	Y	-

Connector No.	D38
Connector Name	POWER WINDOW SUB-SWITCH
Connector Type	NS16FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
3	G	-
4	O	-
8	L	-
9	BR	-
10	W	-
11	B	-
12	R	-
15	LG	-
16	Y	-

Connector No.	D40
Connector Name	PASSENGER SIDE POWER WINDOW MOTOR
Connector Type	FH80FGY-Z



Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	R	-
3	BR	-
4	O	-
5	LG	-
6	L	-

Connector No.	E108
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

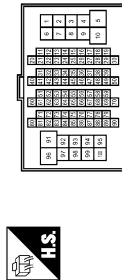


Terminal No.	Color of Wire	Signal Name [Specification]
91	W	-

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FW-M2



Terminal No.	Color of Wire	Signal Name [Specification]
7A	BR	-

Connector No.	M5
Connector Name	WIRE TO WIRE
Connector Type	TH40MM-CS15



Terminal No.	Color of Wire	Signal Name [Specification]
8	Y	-
13	B	-
14	Y	-
15	W	-
47	B	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH60MM-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
91	W	-

JCKWA2037GE


A
B
C
D
E
F
G
H
I
J
PWC
L
M
N
O
P

POWER WINDOW MAIN SWITCH

< ECU DIAGNOSIS >


POWER WINDOW SYSTEM

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4




Terminal No.	83
Color of Wire	GR
Signal Name [Specification]	—

Connector No.	M104
Connector Name	REMOTE KEYLESS ENTRY RECEIVER
Connector Type	JA804EB




Terminal No.	1
Color of Wire	P
Signal Name [Specification]	GND
Terminal No.	2
Color of Wire	GR
Signal Name [Specification]	SIGNAL OUTPUT
Terminal No.	4
Color of Wire	LG
Signal Name [Specification]	BATTERY

Connector No.	M117
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4




Terminal No.	97
Color of Wire	LG
Signal Name [Specification]	—

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LG




Terminal No.	1
Color of Wire	W
Signal Name [Specification]	BAT (F/L)
Terminal No.	2
Color of Wire	W
Signal Name [Specification]	POWER WINDOW POWER SUPPLY(BAT)
Terminal No.	3
Color of Wire	Y
Signal Name [Specification]	POWER WINDOW POWER SUPPLY(RAP)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS




Terminal No.	11
Color of Wire	BR
Signal Name [Specification]	BAT (FUSE)
Terminal No.	13
Color of Wire	B
Signal Name [Specification]	GND

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH




Terminal No.	83
Color of Wire	GR
Signal Name [Specification]	KEYLESS ENTRY RECEIVER COMM
Terminal No.	103
Color of Wire	LG
Signal Name [Specification]	KEYLESS ENTRY RECEIVER POWER SUPPLY

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH



Terminal No.	124
Color of Wire	LG
Signal Name [Specification]	PASSENGER DOOR SW
Terminal No.	132
Color of Wire	Y
Signal Name [Specification]	POWER WINDOW SW COMM
Terminal No.	137
Color of Wire	P
Signal Name [Specification]	RECEIVER/SENSOR GND
Terminal No.	150
Color of Wire	GR
Signal Name [Specification]	DRIVER DOOR SW

Connector No.	M124
Connector Name	WIRE TO WIRE
Connector Type	TH40MH-CS15



Terminal No.	14
Color of Wire	B
Signal Name [Specification]	—
Terminal No.	15
Color of Wire	W
Signal Name [Specification]	—
Terminal No.	51
Color of Wire	Y
Signal Name [Specification]	—

Fail-Safe

FAIL-SAFE CONTROL

Switches to fail-safe control when malfunction is detected in encoder signal that detects up/down speed and direction of door glass. Switches to fail-safe control when a signal that is out of the specified value is detected between the fully closed position and the actual position of the glass.

JCKWA2038GE

INFOID:000000004461032

POWER WINDOW MAIN SWITCH

< ECU DIAGNOSIS >

Malfunction	Malfunction condition
Pulse sensor malfunction	When one pulse signals that is the specified value or more is detected continuously for the specified time or more, while door glass is being operated UP or DOWN.
Both pulse sensor malfunction	When both pulse signal are not detected continuously for the specified time or more, while door glass is being operated UP or DOWN.
Pulse direction malfunction	When a pulse indicating that the window is moving in the opposite direction against the power window motor is detected for the specified value or more, while door glass is being operated UP or DOWN.
Glass recognition position malfunction 1	When the actual door glass position that is out of the specified value is detected compared to the door glass fully closed position memorized in module, while door is being operated UP or DOWN.
Glass recognition position malfunction 2	When pulse count that is out of door glass full stroke value or more is detected, while door glass is being operated UP or DOWN.

In fail-safe control, the system changes to a non-initialized condition and the following functions do not operate.

- AUTO UP operation
- Anti-pinch function
- Automatic window adjusting function

When fail-safe control is activated, perform initializing operation to recover. If a malfunction is detected in power window switch, fail-safe control is activated again.

PWC

POWER WINDOW SUB-SWITCH

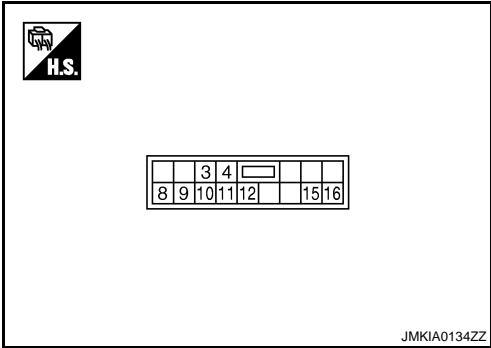
< ECU DIAGNOSIS >

POWER WINDOW SUB-SWITCH


Reference Value

INFOID:000000004461033

TERMINAL LAYOUT





PHYSICAL VALUES

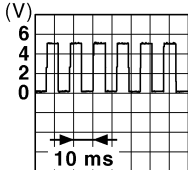Terminal No. (Wire color)		Description		Condition	Voltage [V] (Approx.)
+	-	Signal name	Input/ Output		
3 (G)	Ground	Encoder ground	—	—	0
4 (O)	Ground	Encoder power supply	Output	When ignition switch ON or automatic window operates adjusting	Battery voltage
8 (L)	Ground	Power window motor UP signal	Output	When power window motor is operated UP	Battery voltage
9 (BR)	Ground	Power window motor DOWN signal	Output	When power window motor is operated DOWN	Battery voltage
10 (W)	Ground	Battery power supply	Input	—	Battery voltage
11 (B)	Ground	Ground	—	—	0
12 (R)	Ground	Encoder pulse signal 1	Input	When power window motor operates	

JMKIA0070GB

POWER WINDOW SUB-SWITCH
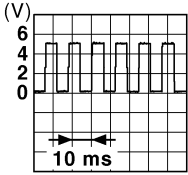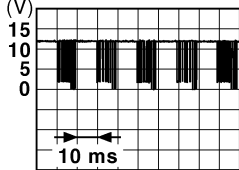
< ECU DIAGNOSIS >


Terminal No. (Wire color)		Description		Condition	Voltage [V] (Approx.)
+	-	Signal name	Input/ Output		
15 (LG)	Ground	Encoder pulse signal 2	Input	When power window motor operates	 JMKIA0070GB
16 (Y)	Ground	Power window serial link	Input/ Output	Ignition switch ON	 JPMIA0013GB

PWC

< ECU DIAGNOSIS >

Wiring Diagram - POWER WINDOW CONTROL SYSTEM -

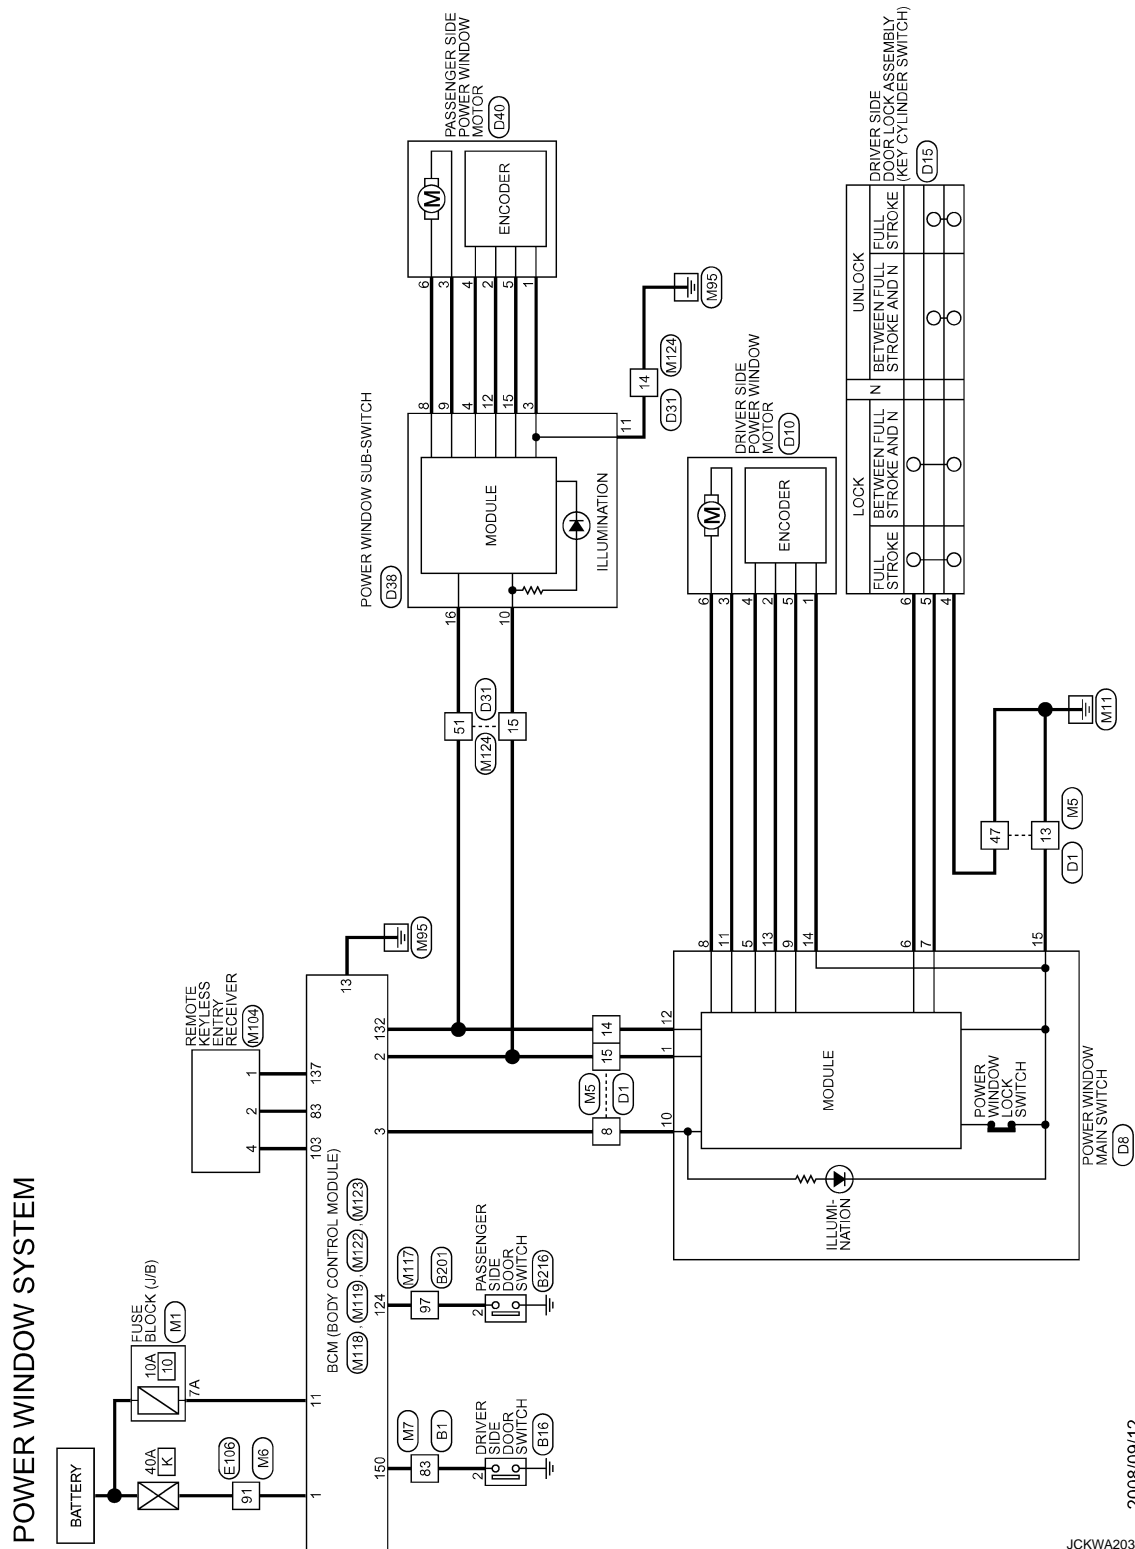INFOID:0000000004461034



2008/09/12


JCKWA2035GE

POWER WINDOW SUB-SWITCH

< ECU DIAGNOSIS >


POWER WINDOW SYSTEM

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



Terminal No.	83
Color of Wire	GR
Signal Name [Specification]	-

Connector No.	B16
Connector Name	DRIVER SIDE DOOR SWITCH
Connector Type	A03FW



Terminal No.	2
Color of Wire	GR
Signal Name [Specification]	-

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4




Terminal No.	97
Color of Wire	LG
Signal Name [Specification]	-

Connector No.	B218
Connector Name	PASSENGER SIDE DOOR SWITCH
Connector Type	A03FW



Terminal No.	2
Color of Wire	LG
Signal Name [Specification]	-

Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15



Terminal No.	8
Color of Wire	Y
Signal Name [Specification]	-
Terminal No.	13
Color of Wire	B
Signal Name [Specification]	-
Terminal No.	14
Color of Wire	SB
Signal Name [Specification]	-
Terminal No.	15
Color of Wire	W
Signal Name [Specification]	-
Terminal No.	47
Color of Wire	B
Signal Name [Specification]	-

Connector No.	D8
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS18FW-CS



Terminal No.	1
Color of Wire	W
Signal Name [Specification]	-
Terminal No.	5
Color of Wire	O
Signal Name [Specification]	-
Terminal No.	6
Color of Wire	GR
Signal Name [Specification]	-
Terminal No.	7
Color of Wire	V
Signal Name [Specification]	-
Terminal No.	8
Color of Wire	L
Signal Name [Specification]	-
Terminal No.	9
Color of Wire	LG
Signal Name [Specification]	-
Terminal No.	10
Color of Wire	Y
Signal Name [Specification]	-
Terminal No.	11
Color of Wire	BR
Signal Name [Specification]	-
Terminal No.	12
Color of Wire	SB
Signal Name [Specification]	-
Terminal No.	13
Color of Wire	R
Signal Name [Specification]	-
Terminal No.	14
Color of Wire	G
Signal Name [Specification]	-

Terminal No.	15
Color of Wire	B
Signal Name [Specification]	-

Connector No.	D10
Connector Name	DRIVER SIDE POWER WINDOW MOTOR
Connector Type	FH80FGY-Z



Terminal No.	1
Color of Wire	G
Signal Name [Specification]	-
Terminal No.	2
Color of Wire	R
Signal Name [Specification]	-
Terminal No.	3
Color of Wire	BR
Signal Name [Specification]	-
Terminal No.	4
Color of Wire	O
Signal Name [Specification]	-
Terminal No.	5
Color of Wire	LG
Signal Name [Specification]	-
Terminal No.	6
Color of Wire	L
Signal Name [Specification]	-

JCKWA2036GE

POWER WINDOW SUB-SWITCH

< ECU DIAGNOSIS >


POWER WINDOW SYSTEM

Connector No.	D15
Connector Name	DRIVER SIDE DOOR LOCK ASSEMBLY
Connector Type	EWFGY-RS




Terminal No.	Color of Wire	Signal Name [Specification]
4	B	-
5	V	-
6	GR	-

Connector No.	D31
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15



Terminal No.	Color of Wire	Signal Name [Specification]
14	B	-
15	W	-
51	Y	-

Connector No.	D38
Connector Name	POWER WINDOW SUB-SWITCH
Connector Type	NS16FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
3	G	-
4	O	-
8	L	-
9	BR	-
10	W	-
11	B	-
12	R	-
15	LG	-
16	Y	-

Connector No.	D40
Connector Name	PASSENGER SIDE POWER WINDOW MOTOR
Connector Type	FH60FGY-Z



Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	R	-
3	BR	-
4	O	-
5	LG	-
6	L	-

Connector No.	E108
Connector Name	WIRE TO WIRE
Connector Type	TH60FW-CS16-TM4




Terminal No.	Color of Wire	Signal Name [Specification]
91	W	-

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FW-M2



Terminal No.	Color of Wire	Signal Name [Specification]
7A	BR	-

Connector No.	M5
Connector Name	WIRE TO WIRE
Connector Type	TH40MH-CS15



Terminal No.	Color of Wire	Signal Name [Specification]
8	Y	-
13	B	-
14	Y	-
15	W	-
47	B	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH60MH-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
91	W	-


JCKWA2037GE

POWER WINDOW SUB-SWITCH

< ECU DIAGNOSIS >


POWER WINDOW SYSTEM

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4




Terminal No.	Color of Wire	Signal Name [Specification]
83	GR	-

Connector No.	M104
Connector Name	REMOTE KEYLESS ENTRY RECEIVER
Connector Type	JA804FB




Terminal No.	Color of Wire	Signal Name [Specification]
1	P	GND
2	GR	SIGNAL OUTPUT
4	LG	BATTERY

Connector No.	M117
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4




Terminal No.	Color of Wire	Signal Name [Specification]
97	LG	-

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	MG3FB-LG




Terminal No.	Color of Wire	Signal Name [Specification]
1	W	BAT (F/L)
2	W	POWER WINDOW POWER SUPPLY(BAT)
3	Y	POWER WINDOW POWER SUPPLY(TRAP)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
11	BR	BAT (FUSE)
13	B	GND

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH




Terminal No.	Color of Wire	Signal Name [Specification]
83	GR	KEYLESS ENTRY RECEIVER COMM
103	LG	KEYLESS ENTRY RECEIVER POWER SUPPLY

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH



Terminal No.	Color of Wire	Signal Name [Specification]
124	LG	PASSENGER DOOR SW
132	Y	POWER WINDOW SW COMM
137	P	RECEIVER/SENSOR GND
150	GR	DRIVER DOOR SW

Connector No.	M124
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS15



Terminal No.	Color of Wire	Signal Name [Specification]
14	B	-
15	W	-
51	Y	-

Fail-Safe

FAIL-SAFE CONTROL

Switches to fail-safe control when malfunction is detected in encoder signal that detects up/down speed and direction of door glass. Switches to fail-safe control when a signal that is out of the specified value is detected between the fully closed position and the actual position of the glass.

JCKWA2038GE

INFOID:000000004461035

A
B
C
D
E
F
G
H
I
J
PWC
L
M
N
O
P

POWER WINDOW SUB-SWITCH

< ECU DIAGNOSIS >

Malfunction	Malfunction condition
Pulse sensor malfunction	When one pulse signals that is the specified value or more is detected continuously for the specified time or more, while door glass is being operated UP or DOWN.
Both pulse sensor malfunction	When both pulse signal are not detected continuously for the specified time or more, while door glass is being operated UP or DOWN.
Pulse direction malfunction	When a pulse indicating that the window is moving in the opposite direction against the power window motor is detected for the specified value or more, while door glass is being operated UP or DOWN.
Glass recognition position malfunction 1	When the actual door glass position that is out of the specified value is detected compared to the door glass fully closed position memorized in module, while door is being operated UP or DOWN.
Glass recognition position malfunction 2	When pulse count that is out of door glass full stroke value or more is detected, while door glass is being operated UP or DOWN.

In fail-safe control, the system changes to a non-initialized condition and the following functions do not operate.

- Automatic window adjusting function
- Anti-pinch function
- Automatic window adjusting function

When fail-safe control is activated, perform initializing operation to recover. If a malfunction is detected in power window switch, fail-safe control is activated again.

POWER WINDOWS DO NOT OPERATE WITH ANY POWER WINDOW SWITCHES

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

POWER WINDOWS DO NOT OPERATE WITH ANY POWER WINDOW SWITCHES

Description

INFOID:000000004471838

All power windows do not operate via power window main switch and power window sub-switch.

Diagnosis Procedure

INFOID:000000004461036

1.CHECK BCM POWER SUPPLY AND GROUND CIRCUIT

Check BCM power supply and ground circuit.
Refer to [PWC-14, "BCM : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

- YES >> Check intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).
- NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

DRIVER SIDE POWER WINDOW ALONE DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

DRIVER SIDE POWER WINDOW ALONE DOES NOT OPERATE

Description

INFOID:000000004471840

Driver side power window does not operate using power window main switch.

Diagnosis Procedure

INFOID:000000004461037

1.CHECK POWER WINDOW MAIN SWITCH POWER SUPPLY AND GROUND CIRCUIT

Check power window main switch power supply and ground circuit.

Refer to [PWC-14, "POWER WINDOW MAIN SWITCH : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CHECK DRIVER SIDE POWER WINDOW MOTOR

Check driver side power window motor.

Refer to [PWC-17, "DRIVER SIDE : Component Function Check"](#).

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

NO >> GO TO 1.

PASSENGER SIDE POWER WINDOW ALONE DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

PASSENGER SIDE POWER WINDOW ALONE DOES NOT OPERATE WHEN POWER WINDOW MAIN SWITCH IS OPERATED

WHEN POWER WINDOW MAIN SWITCH IS OPERATED : Description

INFOID:000000004471847

Passenger side power window operates using power window sub-switch but does not operate using power window main switch.

WHEN POWER WINDOW MAIN SWITCH IS OPERATED : Diagnosis Procedure

INFOID:000000004461038

1.CHECK POWER WINDOW SUB-SWITCH POWER SUPPLY AND GROUND CIRCUIT

Check power window sub-switch power supply and ground circuit.

Refer to [PWC-15. "POWER WINDOW SUB-SWITCH : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CHECK POWER WINDOW SUB-SWITCH SERIAL LINK CIRCUIT

Check power window sub-switch serial link circuit.

Refer to [PWC-27. "POWER WINDOW SUB-SWITCH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-39. "Intermittent Incident"](#).

NO >> GO TO 1.

WHEN POWER WINDOW SUB-SWITCH IS OPERATED

WHEN POWER WINDOW SUB-SWITCH IS OPERATED : Description

INFOID:000000004471846

Passenger side power window operates using power window main switch but not using power window sub-switch.

WHEN POWER WINDOW SUB-SWITCH IS OPERATED : Diagnosis Procedure

INFOID:000000004471849

1.CHECK POWER WINDOW SUB-SWITCH POWER SUPPLY AND GROUND CIRCUIT

Check power window sub-switch power supply and ground circuit.

Refer to [PWC-15. "POWER WINDOW SUB-SWITCH : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-39. "Intermittent Incident"](#).

NO >> GO TO 1.

WITH BOTH POWER WINDOW MAIN SWITCH AND POWER WINDOW SUB-SWITCH

WITH BOTH POWER WINDOW MAIN SWITCH AND POWER WINDOW SUB-

A

B

C

D

E

F

G

H

I

J

PWC

L

M

N

O

P

PASSENGER SIDE POWER WINDOW ALONE DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

SWITCH : Description

INFOID:000000004471848

Passenger side power window operates using power window main switch and power window sub-switch.

WITH BOTH POWER WINDOW MAIN SWITCH AND POWER WINDOW SUB-SWITCH : Diagnosis Procedure

INFOID:000000004471850

1.CHECK PASSENGER SIDE POWER WINDOW MOTOR

Check passenger side power window motor.

Refer to [PWC-18. "PASSENGER SIDE : Component Function Check"](#).

Is the measurement value within the specification?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-39. "Intermittent Incident"](#).

NO >> GO TO 1.

ANTI-PINCH FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

ANTI-PINCH FUNCTION DOES NOT OPERATE DRIVER SIDE

DRIVER SIDE : Description

INFOID:000000004471851

Anti-pinch function does not operate when power window up operated.

DRIVER SIDE : Diagnosis Procedure

INFOID:000000004461039

1.CHECK AUTO UP OPERATION

Check AUTO UP operation.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to [PWC-84, "DRIVER SIDE : Diagnosis Procedure"](#).

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

NO >> GO TO 1.

PASSENGER SIDE

PASSENGER SIDE : Description

INFOID:000000004471852

Anit-pinch function does not operate when power window up operated.

PASSENGER SIDE : Diagnosis Procedure

INFOID:000000004471854

1.CHECK AUTO UP OPERATION

Check AUTO UP operation.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to [PWC-84, "PASSENGER SIDE : Diagnosis Procedure"](#).

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY

< SYMPTOM DIAGNOSIS >

AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY DRIVER SIDE

DRIVER SIDE : Diagnosis Procedure

INFOID:000000004461040

1.PERFORM INITIALIZATION PROCEDURE

Initialization procedure is performed and operation is confirmed.

Refer to [PWC-5, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Special Repair Requirement"](#).

Is the inspection result normal?

YES >> INSPECTION END
NO >> GO TO 2.

2.CHECK ENCODER (DRIVER SIDE) CIRCUIT

Check encoder (driver side) circuit.

Refer to [PWC-21, "DRIVER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.
NO >> Repair or replace the malfunctioning parts.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).
NO >> GO TO 1.

PASSENGER SIDE

PASSENGER SIDE : Diagnosis Procedure

INFOID:000000004461041

1.PERFORM INITIALIZATION PROCEDURE

Initialization procedure is performed and operation is confirmed.

Refer to [PWC-5, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Special Repair Requirement"](#).

Is the inspection result normal?

YES >> INSPECTION END
NO >> GO TO 2.

2.CHECK ENCODER (PASSENGER SIDE) CIRCUIT

Check encoder (passenger side) circuit.

Refer to [PWC-23, "PASSENGER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.
NO >> Repair or replace the malfunctioning parts.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).
NO >> GO TO 1.

POWER WINDOW RETAINED POWER FUNCTION DOES NOT OPERATE NORMALLY

< SYMPTOM DIAGNOSIS >

POWER WINDOW RETAINED POWER FUNCTION DOES NOT OPERATE NORMALLY

Description

INFOID:0000000004478548

Retained power function does not operate after ignition switch turns OFF.

Diagnosis Procedure

INFOID:0000000004476280

1.CHECK DOOR SWITCH

Check door switch.

Refer to [DLK-60. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-39. "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

DOOR KEY CYLINDER SWITCH DOES NOT OPERATE POWER WINDOWS

< SYMPTOM DIAGNOSIS >

DOOR KEY CYLINDER SWITCH DOES NOT OPERATE POWER WINDOWS

Description

INFOID:000000004478549

Power window does not operate when locking or unlocking a door using door key cylinder.

Diagnosis Procedure

INFOID:000000004476281

1.PERFORM INITIALIZATION PROCEDURE

Initialization procedure is executed and operation is confirmed.

Refer to [PWC-5. "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Special Repair Requirement"](#).

Is the inspection result normal?

YES >> INSPECTION END
NO >> GO TO 2.

2.CHECK DRIVER SIDE DOOR LOCK ASSEMBLY (DOOR KEY CYLINDER SWITCH)

Check driver side door lock assembly (door key cylinder switch).

Refer to [DLK-70. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.
NO >> Repair or replace the malfunctioning parts.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-39. "Intermittent Incident"](#).
NO >> GO TO 1.

KEYLESS POWER WINDOW DOWN DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

KEYLESS POWER WINDOW DOWN DOES NOT OPERATE

Description

INFOID:000000004478550

Power window down does not operate when pressing unlock button on Intelligent Key.

Diagnosis Procedure

INFOID:000000004476282

1.CHECK REMOTE KEYLESS ENTRY FUNCTION

Check remote keyless entry function.

Does door lock/unlock with Intelligent Key button?

YES >> GO TO 2.

NO >> Refer to [DLK-164, "Description"](#).

2.CHECK POWER WINDOW OPERATION

Check power window operation.

Does power window operate up/down using power window main switch?

YES >> GO TO 3.

NO >> Refer to [DLK-164, "Diagnosis Procedure"](#).

3.CHECK "PW DOWN SET" SETTING IN "WORK SUPPORT"

Check "PW DOWN SET" setting in "WORK SUPPORT".

Refer to [DLK-49, "INTELLIGENT KEY : CONSULT-III Function \(BCM - INTELLIGENT KEY\)"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Set "PW DOWN SET" setting in "WORK SUPPORT".

4.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

POWER WINDOW LOCK SWITCH DOES NOT FUNCTION

< SYMPTOM DIAGNOSIS >

POWER WINDOW LOCK SWITCH DOES NOT FUNCTION

Diagnosis Procedure

INFOID:000000004461042

1. REPLACE POWER WINDOW MAIN SWITCH

Replace power window main switch.

>> Refer to [PWC-93. "Removal and Installation"](#).

POWER WINDOW SWITCH ILLUMINATION DOES NOT ILLUMINATE

< SYMPTOM DIAGNOSIS >

POWER WINDOW SWITCH ILLUMINATION DOES NOT ILLUMINATE DRIVER SIDE

DRIVER SIDE : Diagnosis Procedure

INFOID:000000004461043

1.REPLACE POWER WINDOW MAIN SWITCH

Replace power window main switch.

>> Refer to [PWC-93, "Removal and Installation"](#).

PASSENGER SIDE

PASSENGER SIDE : Diagnosis Procedure

INFOID:000000004461044

1.REPLACE POWER WINDOW SUB-SWITCH

Replace power window sub-switch.

>> Refer to [PWC-93, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

AUTOMATIC WINDOW ADJUSTING FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

AUTOMATIC WINDOW ADJUSTING FUNCTION DOES NOT OPERATE DRIVER SIDE

DRIVER SIDE : Diagnosis Procedure

INFOID:000000004461045

1.CHECK AUTO UP OPERATION

Check AUTO UP operation.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to [PWC-84, "DRIVER SIDE : Diagnosis Procedure"](#).

2.CHECK DOOR SWITCH

Check door switch.

Refer to [DLK-60, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CHECK POWER WINDOW SERIAL LINK (POWER WINDOW MAIN SWITCH)

Check power window serial link (power window main switch)

Refer to [PWC-26, "POWER WINDOW MAIN SWITCH : Component Function Check"](#)

Is the result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts

4.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

NO >> GO TO 1.

PASSENGER SIDE

PASSENGER SIDE : Diagnosis Procedure

INFOID:000000004461046

1.PERFORM INITIALIZATION PROCEDURE

Initialization procedure is performed and operation is confirmed.

Refer to [PWC-5, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Special Repair Requirement"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.CHECK DOOR SWITCH

Check door switch.

Refer to [DLK-60, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CHECK POWER WINDOW SERIAL LINK (POWER WINDOW SUB-SWITCH)

Check power window serial link (power window sub-switch)

Refer to [PWC-27, "POWER WINDOW SUB-SWITCH : Component Function Check"](#)

Is the result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts

AUTOMATIC WINDOW ADJUSTING FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

4.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

- YES >> Check intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).
- NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000004461047

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIRBAG" and "SEAT BELT" of this Service Manual.

WARNING:

- **To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.**
- **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIRBAG".**
- **Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.**

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors while ignition switch is ON or engine is running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration may activate the sensor(s), deploy the airbag(s), possibly cause serious injury. When using air or electric power tools or hammers, always turn OFF ignition switch, disconnect the battery, and wait 3 minutes or more before performing any service.

Precaution for Battery Service

INFOID:000000004757265

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

POWER WINDOW MAIN SWITCH

< ON-VEHICLE REPAIR >

ON-VEHICLE REPAIR


POWER WINDOW MAIN SWITCH

Removal and Installation

INFOID:000000004461050

REMOVAL

1. Remove the power window main switch finisher (2).
Refer to [INT-11, "Removal and Installation"](#).
2. Power window main switch (1) is removed from power window main switch finisher (2) using flat-bladed screw driver (A) etc.

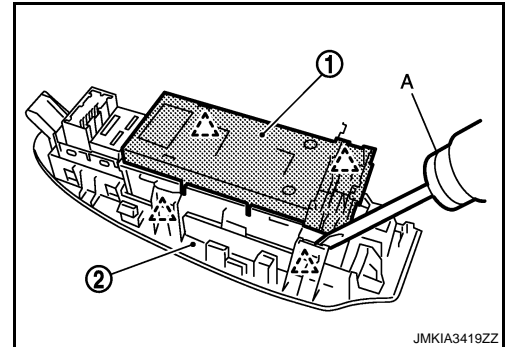
 : Pawl

CAUTION:

Never fold the pawl of power window main switch finisher.

NOTE:

The same procedure is also performed for power window sub-switch.



INSTALLATION

Install in the reverse order of removal.

NOTE:

Power window main switch is replaced or is removed it is necessary to do the initialization procedure.

Refer to [PWC-6, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

PWC