

SECTION

HRN

HORN

A

B

C

CONTENTS

E

COMPONENT DIAGNOSIS	2	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	5	F
HORN	2	Precaution for Battery Service	5	G
Wiring Diagram - HORN -	2	ON-VEHICLE REPAIR	6	
PRECAUTION	5	HORN	6	H
PRECAUTIONS	5	Exploded View	6	
		Removal and Installation	6	I

HORN


< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS

HORN

Wiring Diagram - HORN -

INFOID:000000004468357

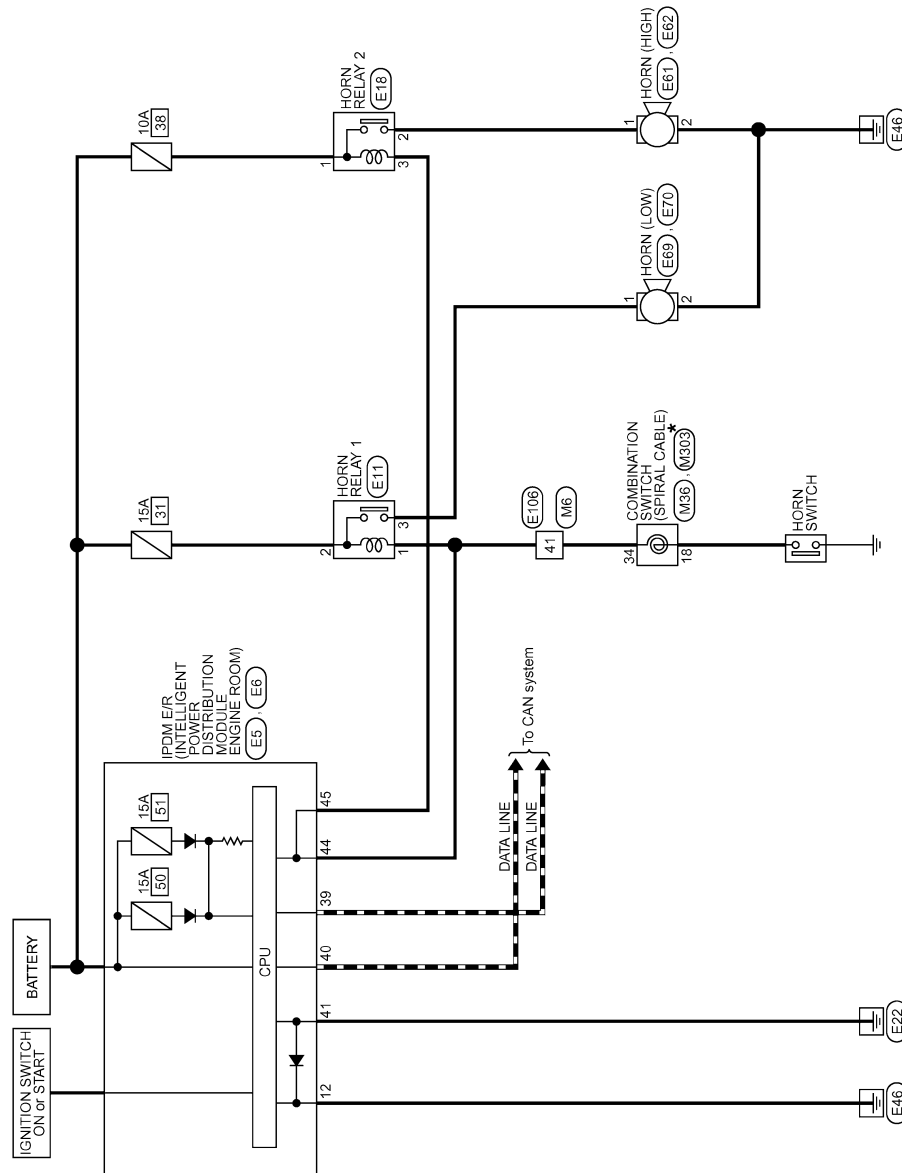

★: This connector is not shown in "Harness Layout".


HORN

2008/09/12

JCLWA2661GB


HORN

Connector No.	E5
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH20FW-GS12-M4-IV



Terminal No.	Color of Wire	Signal Name [Specification]
12	B/W	-

Connector No.	E6
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH20FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B/W	-
44	W	-
45	G	-

Connector No.	E11
Connector Name	HORN RELAY 1
Connector Type	24381_7990A



Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	SB	-
3	G	-

Connector No.	E18
Connector Name	HORN RELAY 2
Connector Type	M03FW-R-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	P	-
2	Y	-
3	G	-

Connector No.	E61
Connector Name	HORN (HIGH)
Connector Type	P01FB-A



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-

Connector No.	E62
Connector Name	HORN (HIGH)
Connector Type	P01FB-A



Terminal No.	Color of Wire	Signal Name [Specification]
2	B	-

Connector No.	E69
Connector Name	HORN (LOW)
Connector Type	P01FB-A



Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-

Connector No.	E70
Connector Name	HORN (LOW)
Connector Type	P01FB-A



Terminal No.	Color of Wire	Signal Name [Specification]
2	B	-



JCLWA2662GB

A
B
C
D
E
F
G
H
I
J
K
HRN
M
N
O
P

HORN

< COMPONENT DIAGNOSIS >

HORN

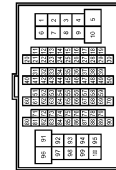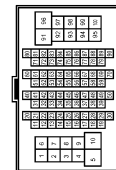Connector No.	E106	Connector No.	M6	Connector No.	M303	Connector No.	M303
Connector Name	WIRE TO WIRE	Connector Name	WIRE TO WIRE	Connector Name	COMBINATION SWITCH (SPIRAL CABLE)	Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TH8DFW-CS16-TM4	Connector Type	TH8DMW-CS16-TM4	Connector Type	TK08FGY-IV	Connector Type	TK08FGY
							
Terminal No.	41	Terminal No.	41	Terminal No.	34	Terminal No.	18
Color of Wire	LG	Color of Wire	LG	Color of Wire	LG	Color of Wire	G
Signal Name [Specification]				Signal Name [Specification]			
-				-			

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000004468358

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIRBAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIRBAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors while ignition switch is ON or engine is running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration may activate the sensor(s), deploy the airbag(s), possibly cause serious injury. When using air or electric power tools or hammers, always turn OFF ignition switch, disconnect the battery, and wait 3 minutes or more before performing any service.

Precaution for Battery Service

INFOID:000000004770276

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

A
B
C
D
E
F
G
H
I
J
K
O
P

HRN

HORN


< ON-VEHICLE REPAIR >

ON-VEHICLE REPAIR

HORN

Exploded View

INFOID:000000004468359

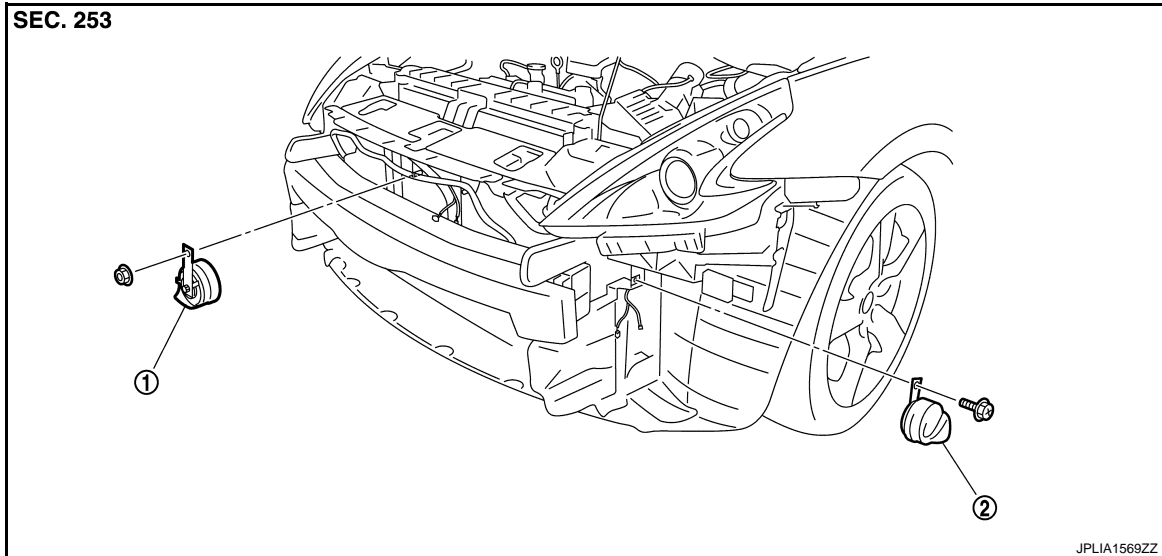

1. Horn (LOW)

2. Horn (HIGH)

Removal and Installation

INFOID:000000004468360

REMOVAL

Horn (LOW)

1. Remove the bumper center upper finisher. Refer to [EXT-11. "Exploded View"](#).
2. Disconnect the horn (LOW) connector.
3. Remove the horn mounting nut, and remove the horn (LOW) from the vehicle.

Horn (HIGH)

1. Remove the fender protector LH (front). Refer to [EXT-23. "FENDER PROTECTOR : Exploded View"](#).
2. Disconnect the horn (HIGH) connector.
3. Remove the horn mounting bolt, and remove the horn (HIGH) from the vehicle.

INSTALLATION

Install in the reverse order of removal.